User's Manual



BTC-2500 Self-Tune Fuzzy / PID Process / Temperature Controller



Warning Symbol 🛕

The Symbol calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury or damage to or destruction of part or all of the product and system. Do not proceed beyond a warning symbol until the indicated conditions are fully understood and met.

Use the Manual

Installers
 Basic Function User
 Read Chapter 1, 2
 Read Chapter 1, 3, 5

• Enhanced Function User Read Chapter 1, 3, 4, 5

• System Designer Read All Chapters

• Expert User Read Page 11

CONTENTS

Page	e No	Pa	age No
Chapter 1 Overview			
1-1 Features		3-21 Manual Tuning	61
1-2 Ordering Code		3-22 Signal Conditioner DC Power Supply	64
1-3 Programming Port and DIP Switch	8	3-23 Manual Control	
1-4 Keys and Displays		3-24 Display Mode	66
1-5 Menu Overview		3-25 Heater Current Monitoring	67
1-6 System Modes		3-26 Reload Default Values	67
1-7 Parameter Description	13		
		Chapter 4 Programming the Full Function	
Chapter 2 Installation	04	4-1 Event Input	
2-1 Unpacking		4-2 Second Set Point	
2-2 Mounting		4-3 Second PID Set	
2-3 Wiring Precautions		4-4 Ramp & Dwell	
2-4 Power Wiring		4-5 Remote Set Point	
2-5 Sensor Installation Guidelines		4-6 Differential Control	
2-6 Thermocouple Input Wiring	25	4-7 Output Power Limits	75
2-7 RTD Input Wiring		4-8 Data Communication	
2-8 Linear DC Input Wiring		4-9 Analog Retransmission	77
2-9 CT / Heater Current Input Wiring	28	4-10 Digital Filter	78
2-10 Event Input wiring	29	4-11 Sleep Mode	79
2-11 Output 1 Wiring	30	4-12 Pump Control	80
2-12 Output 2 Wiring		4-13 Remote Lockout	81
2-13 Alarm 1 Wiring			
2-14 Alarm 2 Wiring		Chapter 5 Applications	
2-15 RS-485		5-1 Pump / Pressure Control	
2-16 RS-232		5-2 Variable Period Full Wave SSR (VPFW SSR)	84
2-17 Analog Retransmission	38	5-3 Heat Only Control	
2-18 Programming Port	39	5-4 Cool Only Control	87
Chapter 3 Programming the Basic Function		5-5 Heat - Cool Control	
3-1 Input 1		5-6 Ramp & Dwell	90
3-2 OUT1 & OUT2 Types		5-7 Remote Set Point	
3-3 Rearrange User Menu	42	5-8 Differential Control	
3-4 Display SV Instead of PV	12	5-9 Dual Set Point / PID	
3-5 Heat Only Control		5-10 RS-485	
3-6 Cool Only Control		5-11 RS-232	
3-7 Heat - Cool Control		5-12 Retransmit	99
3-8 Dwell Timer		Ob and an O O althought and	
3-9 Process Alarms		Chapter 6 Calibration	100
3-10 Deviation Alarms		Chapter 7 Error Codes & Troubleshooting	104
3-11 Deviation Band Alarms		·	
3-12 Heater Break Alarm		Chapter 8 Specifications	107
3-13 Loop Break Alarm		Appendix	
3-14 Sensor Break Alarm		A-1 Menu Existence Conditions	110
3-15 SP1 Range		A-2 Factory Menu Description	
3-16 PV1 Shift		A-3 Glossary	
3-17 Failure Transfer		A-4 Index	
3-17 Failure Transfer		A-5 Memo	
3-19 Self-tuning		A-6 Warranty	
3-19 Sell-tunling			,
3-20 Auto-turing	O S		

Chapter 1 Overview

1-1 Features

- ** High accuracy 18-bit input A D
- ** High accuracy 15-bit output D A
- ** Fast input sample rate (5 times / second)
- ** Two function complexity levels
- ** User menu configurable
- ** Pump control
 - * Fuzzy + PID microprocessor-based control
 - * Automatic programming
 - * Differential control
 - * Auto-tune function
 - * Self-tune function
- * Sleep mode function
- * " Soft-start " ramp and dwell timer
- * Programmable inputs (thermocouple, RTD, mA, VDC)
- * Analog input for remote set point and CT
- * Event input for changing function & set point
- * Programmable digital filter
- * Hardware lockout + remote lockout protection
- * Loop break alarm
- * Heater break alarm
- * Sensor break alarm + Bumpless transfer
- * RS-485, RS-232 communication
- * Analog retransmission
- * Signal conditioner DC power supply
- * A wide variety of output modules available
- * Safety UL / CSA / IEC1010 1
- * EMC / CE EN61326
- * Front panel sealed to NEMA 4X & IP65

BTC-2500 Fuzzy Logic plus PID microprocessor-based controller, incorporates a bright, easy to read 4-digit LED display, indicating process value. The **Fuzzy Logic** technology enables a process to reach a predetermined set point in the shortest time, with the minimum of overshoot during power-up or external load disturbance. The units are housed in a 1/32 DIN case, measuring 24 mm x 48 mm with 98 mm behind panel depth. The units feature three touch keys to select the various control and input parameters. Using a unique function, you can put at most 5 parameters in front of user menu by using **SEL1 to SEL5** contained in the setup menu. This is particularly useful to OEM's as it is easy to configure menu to suit the specific application.

BTC-2500 is powered by 11-26 or 90 - 264 VDC / AC supply, incorporating a 2 amp. control relay output, 5V logic alarm output and a 2 amp. alarm relay output as standard whereby second alarm can be exceptionally configured into second output for cooling purpose or dwell timer. Alternative output options include SSR drive, triac, 4 - 20 mA and 0 - 10 volts. BTC-2500 is fully programmable for PT100, thermocouple types J, K, T, E, B, R, S, N, L, 0 - 20mA, 4 - 20mA and voltage signal input, with no need to modify the unit. The input signals are digitized by using a **18-bit A to D** converter. Its **fast sampling rate** allows the BTC-2500 to control fast processes such as pressure and flow. **Self tune** is incorporated. The self- tune can be used to optimize the control parameters as soon as undesired control result is observed. Unlike auto-tuning, Self-tune will produce less disturbance to the process during tuning, and can be used any time.


**Unique
*Valuable

4 UM25001D

Digital communications RS-485, RS-232 or 4 - 20 mA retransmission are available as an additional option. These options allow BTC-2500 to be integrated with supervisory control system and software, or alternatively drive remote display, chart recorders or dataloggers.

Three kinds of method can be used to program BTC-2500. **1.** Use keys on front panel to program the unit manually, **2.** Use a PC and setup software to program the unit via RS-485 or RS-232 COMM port and **3.** Use P11A, a hand-held programmer, to program the unit via programming port.

In last nearly a hundred years although PID control has been used and proved to be an efficient controlling method by many industries, yet the PID is difficult to deal with some sophisticated systems such as second and higher order systems, long time-lag systems, during set point change and/or load disturbance circumstance etc. The PID principle is based on a mathematic modeling which is obtained by tuning the process. Unfortunately, many systems are too complex to describe in numerical terms precisely. In addition, these systems may be variable from time to time. In order to overcome the imperfection of PID control, the Fuzzy Technology is introduced. What is the Fuzzy Control ? It works like a good driver. Under different speeds and circumstances, he can control a car well with experiences he had before and does not require the knowledge of kinetic theory of motion. The Fuzzy Logic is a linguistic control which is different from the numerical PID control. It controls the system by experiences and does not need to simulate the system precisely as been controlled by PID.

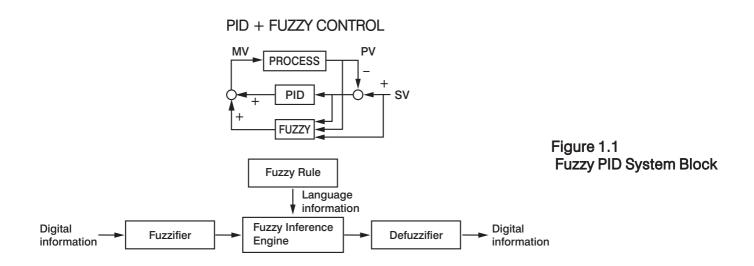

The function of Fuzzy Logic is to adjust PID parameters internally in order to make manipulation output value MV more flexible and adaptive to various processes. The Fuzzy Rule may work like these:

If temperature difference is large, and temperature rate is large, then \triangle MV is large. If temperature difference is large, and temperature rate is small, then \triangle MV is small.

PID + Fuzzy Control has been proven to be an efficient method to improve the control stability as shown by the comparison curves below:

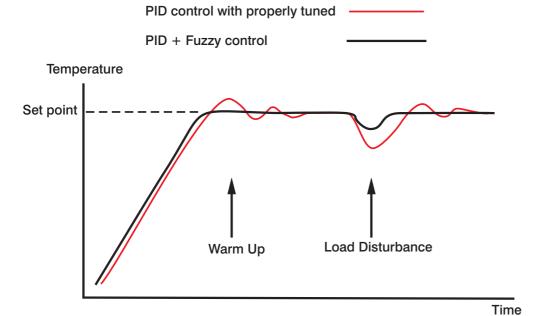


Figure 1.2 Fuzzy PID Enhances Control Stability

1-2 Ordering Code

BTC-2500-2 Power Input ——— 1 4: 90 - 264 VAC, 50/60 HZ 5: 11 - 26 VAC or VDC 9: Special Order Signal Input

1: Standard Input Input 1 - Universal Input Thermocouple: J, K, T, E, B, R. S. N. L RTD: PT100 DIN. PT100 JIS

Current: 4 - 20mA, 0 - 20 mA. Voltage: 0 - 1V, 0 - 5V, 1 - 5V, 0 - 10V

Input 2 - **

CT: 0 - 50 Amp. AC Current Transformer *** Voltage Input: 0 - 1V, 0 - 5V, 1 - 5V. 0 - 10V. Event Input (EI)

9: Special Order

Example

BTC-2500-411111

•90 - 264 operating voltage

•Input: Standard Input

Output 1: Relay Output 2: Relay

Alarm 1: 5V Logic Output

RS- 485 Communication Interface

3

1: 5V Logic Output 9: Special order **Output 1**

- 0: None
- 1: Relay rated 2A/240VAC
- 2: Pulsed voltage to drive SSR, 5V/30mA
- 3: Isolated
- 4 20mA / 0 20mA*
- 4: Isolated 1 5V / 0 5V *
- 5: Isolated 0 10V
- 6: Triac Output 1A / 240VAC,SSR
- C: Pulsed voltage to drive SSR, 14V/40mA
- 9: Special order

Output 2 / Alarm 2

0: None

5

Alarm 1

- 1: Form A Relay 2A/240VAC
- 2: Pulsed voltage to drive SSR, 5V / 30mA
- 3: Isolated 4 20mA / 0 20mA*

6

Communications

3: Retransmit 4-20mA/0-20mA*

4: Retransmit 1 - 5V / 0 - 5V*

5: Retransmit 0 - 10V

9: Special order

0: None

1: RS-485

2: RS-232 **

- 4: Isolated 1 5V / 0 5V *
- 5: Isolated 0 10V
- 6: Triac Output, 1A / 240VAC, SSR
- 7: Isolated 20V / 25mA DC **Output Power Supply**
- 8: Isolated 12V / 40 mA DC **Output Power Supply**
- 9: Isolated 5V / 80mA DC Output Power Supply
- C: Pulsed voltage to drive SSR, 14V/40mA
- A: Special order
- * Range set by front keyboard
- ** Alternative between RS-232 and Input 2
- *** Need to order an accessory CT94-1 if Heater Break detection is required.

Accessories

CT94-1 = 0 - 50 Amp. AC Current Transformer

OM95-3 = Isolated 4 - 20 mA / 0 - 20 mA Analog Output Module

OM95-4 = Isolated 1 - 5V / 0 - 5V Analog Output Module

OM95-5 = Isolated 0 - 10V Analog Output Module

OM94-6 = Isolated 1A / 240VAC Triac Output Module (SSR)

OM94-7 = 14V/40mA SSR Drive Module

DC94-1 = Isolated 20V / 25mA DC Output Power Supply

DC94-2 = Isolated 12V / 40mA DC Output Power Supply

DC94-3 = Isolated 5V / 80mA DC Output Power Supply

CM94-1 = Isolated RS-485 Interface Module

CM94-2 = Isolated RS-232 Interface Module

CM94-3 = Isolated 4 - 20 mA / 0 - 20 mA Retransmission Module

CM94-4 = Isolated 1 - 5V / 0 - 5V Retransmission Module

CM94-5 = Isolated 0 - 10V Retransmission Module

CC94-1 = RS-232 Interface Cable (2M)

CC91-3 = Programming Port Cable UM25001G = BTC-2500 User's Manual **Related Products**

SNA10A = Smart Network Adaptor for Third

Party Software, Converts 255 channels of RS-485 or RS-422 to

RS-232 Network

SNA10B = Smart Network Adaptor for BC-Net Software, Converts 255 channels

of RS-485 or RS-422 to RS-232

Network

SNA12A = Smart Network Adapter for


programming port to RS-232

interface

BC-Set = Configuration Software

7 UM25001G

1-3 Programming Port and DIP Switch

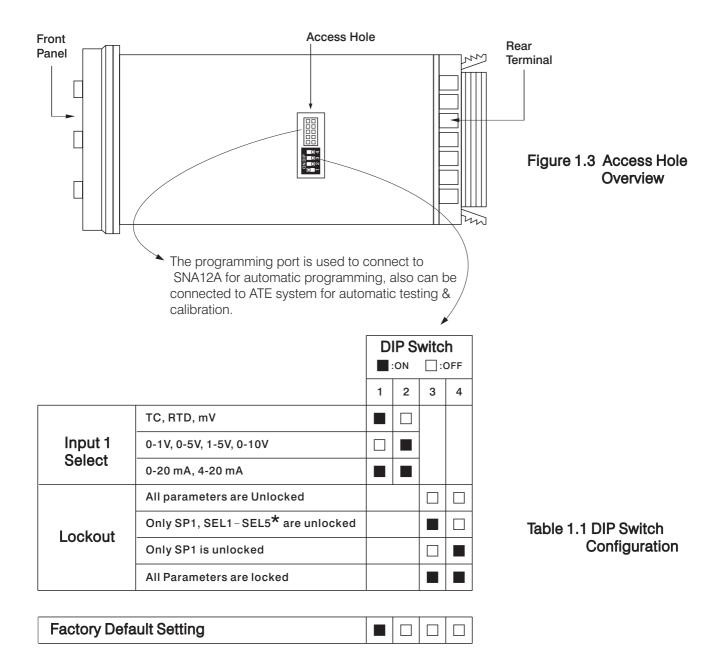

The programming port is used for off-line automatic setup and testing procedures only. Don't attempt to make any connection to these pins when the unit is used for a normal control purpose.

When the unit leaves the factory, the DIP switch is set so that TC & RTD are selected for input 1 and all parameters are unlocked.

Lockout function is used to disable the adjustment of parameters as well as operation of calibration mode. However, the menu can still be viewed even under lockout condition.

* SEL1- SEL5 represent those parameters which are selected by using SEL1, SEL2,...SEL5 parameters contained in Setup menu. Parameters been selected are then allocated at the beginning of the user menu.

8 UM25001G

1-4 Keys and Displays

The unit is programmed by using three keys on the front panel. The available key functions are listed in following table.

Table 1.2 Keypad Operation

TOUCHKEYS	FUNCTION	DESCRIPTION
	Up Key	Press and release quickly to increase the value of parameter. Press and hold to accelerate increment speed.
ℽ	Down Key	Press and release quickly to decrease the value of parameter. Press and hold to accelerate decrement speed.
Q	Scroll Key	Select the parameter in a direct sequence.
Press Q for at least 3 seconds	Enter Key	Allow access to more parameters on user menu, also used to Enter manual mode, auto-tune mode, default setting mode and to save calibration data during calibration procedure.
Press Q for at least 6 seconds	Start Record Key	Reset historical values of PVHI and PVLO and start to record the peak process value.
Press 😡 🔝	Reverse Scroll Key	Select the parameter in a reverse sequence during menu scrolling.
Press ♀ ⊗	Mode Key	Select the operation Mode in sequence.
Press 🚫 😾	Reset Key	Reset the front panel display to a normal display mode, also used to leave the specific Mode execution to end up the auto-tune and manual control execution, and to quit the sleep mode.
Press 🚫 😸 for at least 3 seconds	Sleep Key	The controller enters the sleep mode if the sleep function (SLEP) is enabled (select YES).
Press 🗭 🚫	Factory Key	By entering correct security code to allow execution of engineering programs. This function is used only at the factory to manage the diagnostic reports. The user should never attempt to operate this function.

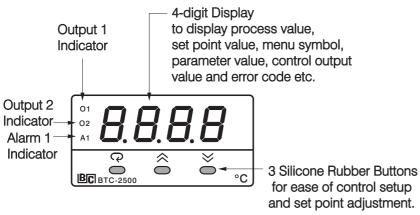


Figure 1.4 Front Panel Description

Table 1.3 Display Form of Characters

Α	R	Ш	E	_	,	Ν	п	S	5	X	
В	Ь	F	F	J		0	o	Т	F	Υ	3
С	Ţ	G	\mathcal{L}	Κ	F	Р	P	U	C	Z	
С	ר	Н	H	L	L	Q		٧	וֹכ	?	7
D	d	h	h	М	ā	R	-	W		=	-


▼: Confused Character

How to display a 5-digit number?


For a number with decimal point the display will be shifted one digit right: -199.99 will be displayed by -199.9 4553.6 will be displayed by 4553

For a number without decimal point the display will be divided into two alternating phases:


-19999 will be displayed by:




45536 will be displayed by:



-9999 will be displayed by:



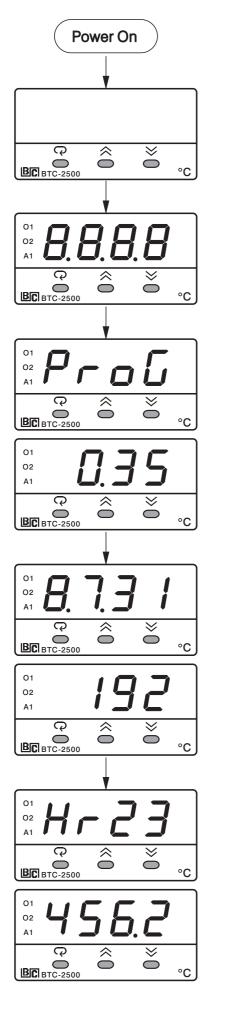

All segments of display and indicators are left off for 0.5 second.

Figure 1.5 Display Sequence of Initial Message

All segments of display and indicators are lit for 2 seconds.

Display program code of the product for 2.5 seconds. Each display stays for 1.25 seconds

The left diagram shows program no. 0 (for BTC-2500) with version 35.



Display Date Code and Serial number for 2.5 seconds. Each display stays for 1.25 seconds

The left diagram shows Year 1998, Month July (7), Date 31'st and Serial number 192. This means that the product is the 192 'th unit produced on July 31'st, 1998. Note that the month code A stands for October, B stands for November and C stands for December.




Display the used hours for 2.5 seconds.

The 6-digit number of hour is indicated by two successive displays and each one stays for 1.25 seconds.

The left diagram shows that the unit has been used for 23456.2 hours since production.

1-5 Menu Overview

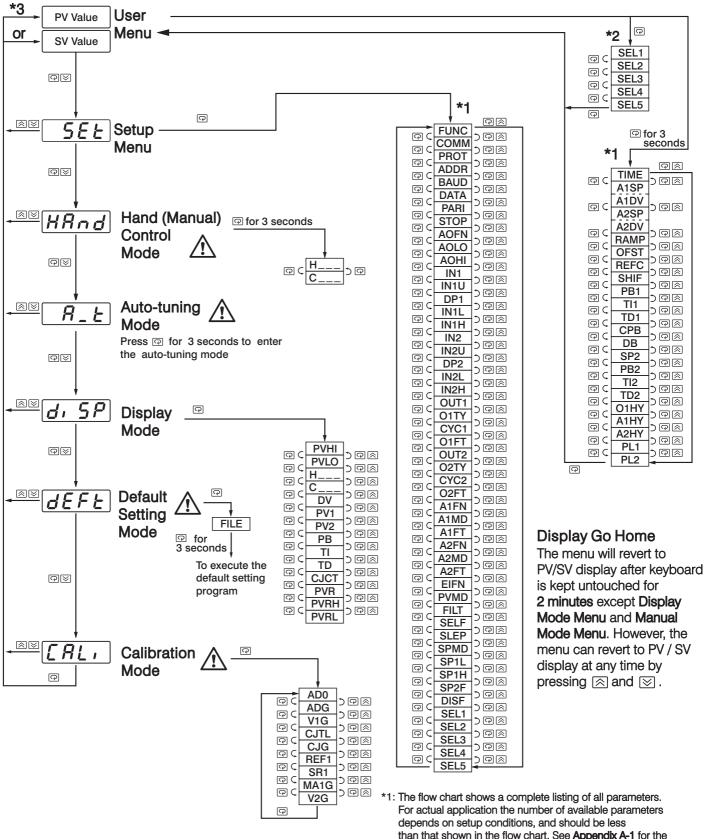

 \triangle

Apply these modes will break the control loop and change some of the previous setting data. Make sure that if the system is allowable to use these modes.


- depends on setup conditions, and should be less than that shown in the flow chart. See **Appendix A-1** for the existence conditions of each parameter.

 *2: You can select at most 5 parameters but in front of the user.
- *2: You can select at most 5 parameters put in front of the user menu by using SEL1 to SEL5 contained at the bottom of setup menu.
- *3: Set DISF (display format) value in the setup menu to determine whether PV or SV is displayed.

1-6 System Modes

The controller performs close loop control under its normal control mode condition. The controller will maintain its normal control mode when you are operating user menu, setup menu or display mode, reloading default values or applying event input signal. Under certain conditions the normal control mode will transfer to an **Exception Mode**. The exception modes include: **Sleep Mode, Manual Mode, Failure Mode, Calibration Mode** and **Auto-tuning Mode**. All these modes perform in an open loop control except the auto-tuning mode which performs ON-OFF plus PID close loop control. The mode transfer is governed by the priority conditions. A lower priority mode can not alter a higher priority mode, as shown in Figure 1.6.

System Modes
Sleep Mode:
See Section 4-11.
Manual Mode:
See Section 3-23.
Failure Mode:
See Section 3-17.
Calibration Mode:
See Chapter 6.
Auto-tuning Mode:
See Section 3-20.
Normal Control Mode:
See Section 3-24, 3-26, 4

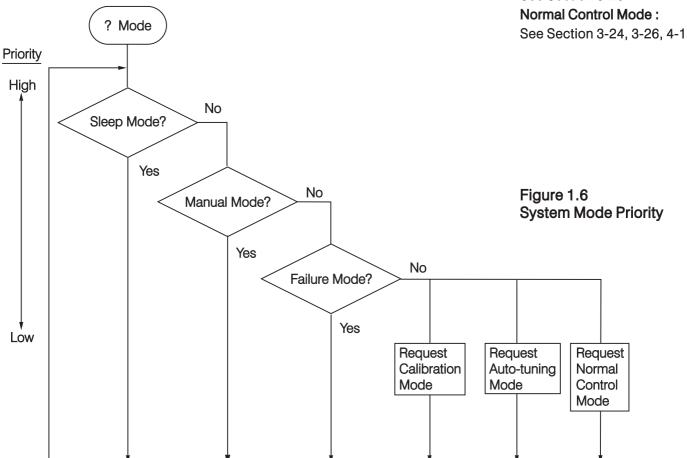

The calibration mode, auto-tuning mode and normal control mode are in the same priority level. The sleep mode is in the highest priority.

1-7 Parameter Description

Table 1.4 Parameter Description

Contained in	Basic Function	Parameter Notation	Display Format	Parameter Description		1	Range		Default Value
	√	SP1		Set point 1	Low:	SP1L	High:	SP1H	100.0 °C (212.0 °F)
	√	TIME	E, ñE	Dwell Time	Low:	0	High:	6553.5 minutes	0.0
	√	A1SP	A 1.5P	Alarm 1 Set point	See Ta	able 1.5, 1.6			100.0°C (212.0°F)
	√	A1DV	8 1.8 Y	Alarm 1 Deviation Value	Low:	-200.0°C (-360.0°F)	High:	200.0 °C (360.0 °F)	10.0°C (18.0°F)
	√	A2SP	R2.5P	Alarm 2 Set point	See Ta	able 1.5, 1.7		(300.0 1)	100.0 °C (212.0 °F)
	√	A2DV	85.87	Alarm 2 Deviation Value	Low:	-200.0°C (-360.0°F)	High:	200.0 °C (360.0 °F)	10.0°C (18.0°F)
	<u> </u>	RAMP	rRñP	Ramp Rate	Low:	0	High:	500.0 °C (900.0 °F)	0.0
	√	OFST	oF5Ł	Offset Value for P control	Low:	0	High:	100.0 %	25.0
	<u> </u>	REFC	rEF[Reference Constant for Specific Function	Low:	0	High:	60	2
	√	SHIF	SH, F	PV1 Shift (offset) Value	Low:	-200.0°C (-360.0°F)	High:	200.0 °C (360.0 °F)	0.0
	√	PB1	Pb 1	Proportional Band 1 Value	Low:	0	High:	500.0°C (900.0°F)	10.0°C (18.0°F)
User	✓	TI1	E, I	Integral Time 1 Value	Low:	0	High:	1000 sec	100
Menu	✓	TD1	Edi	Derivative Time 1 Value	Low:	0	High:	360.0 sec	25.0
	✓	СРВ	Е.РЬ	Cooling Proportional Band Value	Low:	1	High:	255 %	100
	✓	DB	dЬ	Heating-Cooling Dead Band Negative Value = Overlap	Low:	-36.0	High:	36.0 %	0
		SP2	5P2	Set point 2	See Ta	able 1.5, 1.8			37.8°C (100.0°F)
		PB2	P62	Proportional Band 2 Value	Low:	0	High:	500.0°C (900.0°F)	10.0°C (18.0°F)
		TI2	E, 2	Integral Time 2 Value	Low:	0	High:	1000 sec	100
		TD2	F42	Derivative Time 2 Value	Low:	0	High:	360.0 sec	25.0
	✓	O1HY	o IHY	Output 1 ON-OFF Control Hysteresis	Low:	0.1	High:	55.6°C (100.0°F)	0.1
	✓	A1HY	A IHY	Hysteresis Control of Alarm 1	Low:	0.1	High:	10.0°C (18.0°F)	0.1
	✓	A2HY	A5.H3	Hysteresis Control of Alarm 2	Low:	0.1	High:	10.0°C (18.0°F)	0.1
		PL1	PL I	Output 1 Power Limit	Low:	0	High:	100 %	100
		PL2	PL2	Output 2 Power Limit	Low:	0	High:	100 %	100
	✓	FUNC	FunC	Function Complexity Level	_	35[: Basic			1
Setup Menu		сомм	Coññ	Communication Interface Type	 0 none: No communication function 1 485: RS-485 interface 2 232: RS-232 interface 3 4-20: 4-20 mA analog retransmission output 4 0-20: 0-20 mA analog retransmission output 5 0-12: 0-1V analog retransmission output 6 0-52: 0-5V analog retransmission output 7 1-52: 1-5V analog retransmission output 8 0-10: 0-10V analog retransmission 			1	
		PROT	Prot	COMM Protocol Selection	0 ,-	outpu ・とい: Modb		col RTU mode	0

UM25001D 13

Table 1.4 Parameter Description (continued 2/7)

Contained in	Basic Function	Parameter Notation	Display Format	Description	Range	Default Value
		ADDR	Addr	Address Assignment of Digital COMM	Low: 1 High: 255	_
		BAUD	ЬЯид	Baud Rate of Digital COMM	0	5
					6	
		DATA	dAFA	Data Bit count of Digital COMM	0 7占, と : 7 data bits 1 8と, と : 8 data bits	1
		PARI	PArı	Parity Bit of Digital COMM	0 E E C : Even parity 1 odd: Odd parity 2 nonE: No parity bit	0
Setup	STOP 5Ł	StoP	Stop Bit Count of Digital COMM	0 / 	0	
Menu		AOFN	Ro.Fn	Analog Output Function	0 P□ /: Retransmit IN1 process value 1 P□ 2: Retransmit IN2 process value 2 P / - 2: Retransmit IN1 - IN2 difference process value 3 P2 - /: Retransmit IN2 - IN1 difference process value 4 5 □ : Retransmit set point value 5 □ /: Retransmit output 1 manipulation value 6 □ □ 2: Retransmit output 2 manipulation value 7 □ □ : Retransmit deviation(PV-SV) Value	0
		AOLO	RoLo	Analog Output Low Scale Value	Low: -19999 High: 45536	0°C (32.0°F)
		АОНІ	A o.H ı	Analog Output High Scale Value	Low: -19999 High: 45536	100.0°Ć (212.0°F)
	✓	IN1	וחו	IN1 Sensor Type Selection	0	1 (0)

Table 1.4 Parameter Description (continued 3/7)

Contained in	Basic Function	Parameter Notation	Display Format	Parameter Description	Range	Default Value
	√	IN1	ınl	IN1 Sensor Type Selection	7	1 (0)
	✓	IN1U	וח לט	IN1 Unit Selection	0	0 (1)
Setup	√	DP1	dP I	IN1 Decimal Point Selection	0 nodP: No decimal point 1 ーdP: 1 decimal digit 2 2ーdP: 2 decimal digits 3 3ーdP : 3 decimal digits	1
Menu	✓	IN1L	ın IL	IN1 Low Scale Value	Low: -19999 High: 45536	0
	✓	IN1H	, n !H	IN1 High Scale Value	Low: -19999 High: 45536	1000
		IN2	, n2	IN2 Signal Type Selection	0 nonE: IN2 no function 1	1
		IN2U	1 n Z.u	IN2 Unit Selection	Same as IN1U	2
		DP2	<i>dP2</i>	IN2 Decimal Point Selection	Same as DP1	1
		IN2L	1 n 2.L	IN2 Low Scale Value	Low: -19999 High: 45536	0
		IN2H	1 n2.H	IN2 High Scale Value	Low: -19999 High: 45536	1000
	✓	OUT1	out I	Output 1 Function	0 ア を ロー: Reverse (heating) control action 1 d, アト: Direct (cooling) control action	0
	✓	O1TY	o IEY	Output 1 Signal Type	orEL y: Relay output 1 55 rd: Solid state relay drive output 2 55 r: Solid state relay output 3 y - 20: 4-20 mA current module	0

Table 1.4 Parameter Description (continued 4/7)

Contained in		Parameter		Parameter Description	Range	Default Value
	√	O1TY	o I.E.Y	Output 1 Signal Type	4	0
	✓	CYC1	EHEI	Output 1 Cycle Time	Low: 0.1 High: 100.0 sec	18.0
	✓	O1FT	o I.F.E	Output 1 Failure Transfer Mode	Select BPLS (bumpless transfer) or $0.0\sim 100.0$ % to continue output 1 control function as the unit fails, power starts or manual mode starts.	BPLS
	✓	OUT2	out2	Output 2 Function	0 nonE: Output 2 no function 1 LooL: PID cooling control 2 = RL 2: Perform alarm 2 function 3 dCP5: DC power supply module installed	0
	✓	O2TY	o 2.E Y	Output 2 Signal Type	Same as O1TY	0
	✓	CYC2	E 4 E 2	Output 2 Cycle Time	Low: 0.1 High: 100.0 sec	18.0
	✓	O2FT	o2.FE	Output 2 Failure Transfer Mode	Select BPLS (bumpless transfer) or $0.0\sim100.0$ % to continue output 2 control function as the unit fails, power starts or manual mode starts.	BPLS
Setup Menu	✓	A1FN	A LFn	Alarm 1 Function	O none: No alarm function 1 L, nc: Dwell timer action 2 dEH, Deviation high alarm 3 dELo: Deviation low alarm 4 dbH, Deviation band out of band alarm 5 dbLo: Deviation band in band alarm 6 PUH: IN1 process value high alarm 7 PUH: IN1 process value low alarm 8 PUH: IN2 process value high alarm 9 PUH: IN2 process value low alarm 10 PHH: IN1 or IN2 process value high alarm 11 PHH: IN1 or IN2 process value low alarm 12 dHH: IN1-IN2 difference process value high alarm 13 dHH: IN1-IN2 difference process value low alarm 14 Lb: Loop break alarm 15 SEnb: Sensor break or A-D fails	2
	√	A1MD	A lād	Alarm 1 Operation Mode	0 のので : Normal alarm action 1 しとこと: Latching alarm action 2 Hoしる: Hold alarm action 3 しとHo: Latching & Hold action	0

16 UM25001D

Table 1.4 Parameter Description (continued 5/7)

Contained in	Basic Function	Parameter Notation	Display Format	Parameter Description	Range	Default Value
	✓	A1FT	A I.F.E	Alarm 1 Failure Transfer Mode	0 oFF : Alarm output OFF as unit fails 1 on : Alarm output ON as unit fails	1
	✓	A2FN	R2.Fn	Alarm 2 Function	Same as A1FN	2
	✓	A2MD	A2.ñd	Alarm 2 Operation Mode	Same as A1MD	0
	√	A2FT	A2FE	Alarm 2 Failure Transfer Mode	Same as A1FT	1
		EIFN	Er Fn	Event Input Function	0 none: Event input no function 1 5P2: SP2 activated to replace SP1 2 P, d2: PB2, TI2, TD2 activated to replace PB1, TI1, TD1 3 5P,P2: SP2, PB2, TI2, TD2 activated to replace SP1, PB1, TI1, TD1 4 r 5,R l: Reset alarm 1 output 5 r 5,R2: Reset alarm 2 output 6 r,R l2: Reset alarm 1 & alarm 2 7 do l: Disable Output 1 8 do 2: Disable Output 2 9 do l2: Disable Output 1 & Output 2 10 Lock All Parameters	1
Setup Menu		PVMD	PŸād	PV Mode Selection	0 P□ I: Use PV1 as process value 1 P□ 2: Use PV2 as process value 2 P I - 2: Use PV1 - PV2 (difference) as process value 3 P2 - I: Use PV2 - PV1 (difference) as process value	0
		FILT	Filt	Filter Damping Time Constant of PV Self Tuning Function	0	2
	✓	SELF	SELF	Selection	1 YE5: Self tune function enabled 0 nonE: Sleep mode function disabled	0
		SLEP	SLEP	Sleep mode Function Selection	1 4E5 : Sleep mode function disabled	0

Table 1.4 Parameter Description (continued 6/7)

Contained in	Basic Function	Parameter Notation	Display Format	Parameter Description	Range	Default Value
		SPMD	SP.ñd	Set point Mode Selection	0 5P L2: Use SP1 or SP2 (depends on EIFN) 1 n. n.r: Use minute ramp rate as set point 2 Hr.r: Use hour ramp rate as set point 3 PUI: Use IN1 process value as set point 4 PUZ: Use IN2 process value as set point 5 PURP: Selected for pump control	0
	✓	SP1L	SP IL	SP1 Low Scale Value	Low: -19999 High: 45536	0 °C (32.0 °F)
	✓	SP1H	SP I.H	SP1 High Scale Value	Low: -19999 High: 45536	1000.0 °C (1832.0 °F)
		SP2F	SP2F	Format of set point 2 Value	0 R[Lu: set point 2 (SP2) is an actual value 1 dEu: set point 2 (SP2) is a deviation value	0
	✓	DISF	di SF	Display Format	0 ア ロ: Display PV value 1 5 ロ: Display SV value	
Setup Menu	✓	SEL1	SEL I	Select 1'st Parameter	0 nonE: No parameter put ahead 1 ₺, nE: Parameter TIME put ahead 2 ₨	0
	✓	SEL2	SEL2	Select 2'nd Parameter	Same as SEL1	0
	✓	SEL3	SEL 3	Select 3'rd Parameter	Same as SEL1	0
	✓	SEL4	SELY	Select 4'th Parameter	Same as SEL1	0
	✓	SEL5	SEL S	Select 5'th Parameter	Same as SEL1	0
	✓	AD0	840	A to D Zero Calibration Coefficient	Low: -360 High: 360	_
	✓	ADG	A45	A to D Gain Calibration Coefficient	Low: -199.9 High: 199.9	
Calibration Mode	✓	V1G	7. 12	Voltage Input 1 Gain Calibration Coefficient	Low: -199.9 High: 199.9	_
Menu	✓	CJTL	C JE.L	Cold Junction Low Temperature Calibration Coefficient	Low: -5.00 °C High: 40.00 °C	_

18 UM25001D

Table 1.4 Parameter Description (continued 7/7)

Contained in	Basic Function	Parameter Notation	Display Format	Parameter Description		F	ange		Default Value
	✓	CJG	C J.G	Cold Junction Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
	✓	REF1	rEF.I	Reference Voltage 1 Calibration Coefficient for RTD 1	Low:	-199.9	High:	199.9	_
Calibration Mode Menu	✓	SR1	5r. I	Serial Resistance 1 Calibration Coefficient for RTD 1	Low:	-199.9	High:	199.9	_
	✓	MA1G	58 LG	mA Input 1 Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
	✓	V2G	750	Voltage Input 2 Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
	✓	PVHI	P Y.H.	Historical Maximum Value of PV	Low:	-19999	High:	45536	_
	✓	PVLO	PYLo	Historical Minimum Value of PV	Low:	-19999	High:	45536	_
	✓	MV1	H	Current Output 1 Value	Low:	0	High:	100.00 %	_
	✓	MV2	[Current Output 2 Value	Low:	0	High:	100.00 %	_
	✓	DV	97	Current Deviation (PV-SV) Value	Low:	-12600	High:	12600	_
Display	✓	PV1	Pº I	IN1 Process Value	Low:	-19999	High:	45536	_
Mode	✓	PV2	₽₽2	IN2 Process Value	Low:	-19999	High:	45536	_
Menu	✓	РВ	РЬ	Current Proportional Band Value	Low:	0	High:	500.0 °C (900.0 °F)	_
	✓	TI	Ŀ،	Current Integral Time Value	Low:	0	High:	4000 sec	_
	✓	TD	Еd	Current Derivative Time Value	Low:	0	High:	1440 sec	_
	✓	CJCT		Cold Junction Compensation Temperature	Low:	-40.00 °C	High:	90.00 °C	_
	✓	PVR	Ьñч	Current Process Rate Value	Low:	-16383	High:	16383	_
	✓	PVRH	PYr.H	Maximum Process Rate Value	Low:	-16383	High:	16383	_
	✓	PVRL	Purl	Minimum Process Rate Value	Low:	-16383	High:	16383	_

Input Type	J_TC	K_TC	T_TC	E_TC	B_TC	R_TC	S_TC			
Range Low	-120 °C (-184 °F)	-200 °C (-328 °F)	-250 °C (-418 °F)	-100 °C (-148 °F)	0 °C (32 °F)	0 °C (32 °F)	0 °C (32 °F)			
Range High	1000 °C (1832 °F)	1370 °C (2498 °F)	400 °C (752 °F)	900 °C (1652 °F)	1820 °C (3308 °F)	1767.8 °C (3214 °F)	1767.8 °C (3214 °F)			
Input Type	N_TC	L_TC	PT.DN	PT.JS	СТ	Linear ((V, mA)			
Range Low	-250 °C (-418 °F)	-200 °C (-328 °F)	-210 °C (-346 °F)	-200 °C (-328 °F)	0 Amp	-19999				
Range High	1300 °C (2372 °F)	900 °C (1652 °F)	700 °C (1292 °F)	600 °C (1112 °F)	90 Amp	455	36			

Table 1.5 Input (IN1 or IN2) Range

If A1FN =	PV1.H, PV1.L	PV2.H,PV2.L	P1.2.H, P1.2.L D1.2.H, D1.2.L
Range of A1SP same as range of	IN1	IN2	IN1, IN2

Table 1.6 Range Determination for A1SP

If A2FN =	PV1.H, PV1.L	PV2.H,PV2.L	P1.2.H, P1.2.L D1.2.H, D1.2.L
Range of A2SP same as range of	IN1	IN2	IN1, IN2

Table 1.7 Range Determination for A2SP

If PVMD =	PV1	PV2	P1-2, P2-1
Range of SP2 same as range of	IN1	IN2	IN1, IN2

Table 1.8 Range Determination for SP2

Exception: If any of A1SP, A2SP or SP2 is configured with respect to CT input, its adjustment range is unlimited.

Chapter 2 Installation

Dangerous voltages capable of causing death are sometimes present in this instrument. Before installation or beginning any troubleshooting procedures the power to all equipment must be switched off and isolated. Units suspected of being faulty must be disconnected and removed to a properly equipped workshop for testing and repair. Component replacement and internal adjustments must be made by a qualified maintenance person only.

To minimize the possibility of fire or shock hazards, do not expose this instrument to rain or excessive moisture.

Do not use this instrument in areas under hazardous conditions such as excessive shock, vibration, dirt, moisture, corrosive gases or oil. The ambient temperature of the areas should not exceed the maximum rating specified in Chapter 8.

2-1 Unpacking

Upon receipt of the shipment remove the unit from the carton and inspect the unit for shipping damage.

If any damage due to transit, report and claim with the carrier.

Write down the model number, serial number, and date code for future reference when corresponding with our service center. The serial number (S/N) and date code (D/C) are labeled on the box and the housing of control.

2-2 Mounting

Make panel cutout to dimension shown in Figure 2.1.

Take both mounting clamps away and insert the controller into panel cutout. Install the mounting clamps back. Gently tighten the screws in the clamp till the controller front panels is fitted snugly in the cutout.

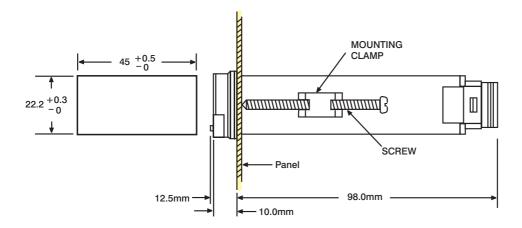


Figure 2.1 Mounting Dimensions

2-3 Wiring Precautions

- * Before wiring, verify the label for correct model number and options. Switch off the power while checking.
- * Care must be taken to ensure that maximum voltage rating specified on the label are not exceeded.
- * It is recommended that power of these units to be protected by fuses or circuit breakers rated at the minimum value possible.
- * All units should be installed inside a suitably grounded metal enclosure to prevent live parts being accessible from human hands and metal tools.
- * All wiring must conform to appropriate standards of good practice and local codes and regulations. Wiring must be suitable for voltage, current, and temperature rating of the system.
- * The "stripped" leads as specified in Figure 2.2 below are used for power and sensor connections.
- * Beware not to over-tighten the terminal screws.
- * Unused control terminals should not be used as jumper points as they may be internally connected, causing damage to the unit.
- * Verify that the ratings of the output devices and the inputs as specified in Chapter 8 are not exceeded.
- * Electric power in industrial environments contains a certain amount of noise in the form of transient voltage and spikes. This electrical noise can enter and adversely affect the operation of microprocessor-based controls. For this reason we strongly recommend the use of shielded thermocouple extension wire which connects the sensor to the controller. This wire is a twisted-pair construction with foil wrap and drain wire. The drain wire is to be attached to ground at one end only.

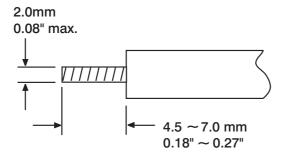


Figure 2.2 Lead Termination

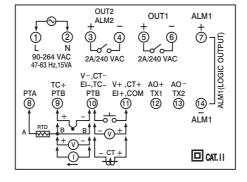


Figure 2.3 Rear Terminal Connection Diagram

2-4 Power Wiring

The controller is supplied to operate at 11-26 VAC / VDC or 90-264VAC. Check that the installation voltage corresponds with the power rating indicated on the product label before connecting power to the controller.

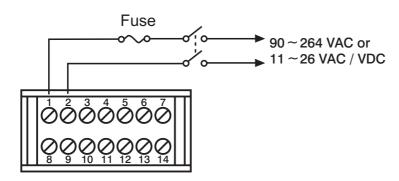


Figure 2.4 Power Supply Connections

This equipment is designed for installation in an enclosure which provides adequate protection against electric shock. The enclosure must be connected to earth ground.

Local requirements regarding electrical installation should be rigidly observed. Consideration should be given to prevent from unauthorized person access to the power terminals.

2-5 Sensor Installation Guidelines

Proper sensor installation can eliminate many problems in a control system. The probe should be placed so that it can detect any temperature change with minimal thermal lag. In a process that requires fairly constant heat output, the probe should be placed closed to the heater. In a process where the heat demand is variable, the probe should be closed to the work area. Some experiments with probe location are often required to find this optimum position.

In a liquid process, addition of a stirrer will help to eliminate thermal lag. Since the thermocouple is basically a point measuring device, placing more than one thermocouple in parallel can provide an average temperature readout and produce better results in most air heated processes.

Proper sensor type is also a very important factor to obtain precise measurements. The sensor must have the correct temperature range to meet the process requirements. In special processes the sensor might need to have different requirements such as leak-proof, anti-vibration, antiseptic, etc.

Standard sensor limits of error are ± 4 degrees F (± 2 degrees C) or 0.75% of sensed temperature (half that for special) plus drift caused by improper protection or an over-temperature occurrence. This error is far greater than controller error and cannot be corrected on the sensor except by proper selection and replacement.

2-6 Thermocouple Input Wiring

Thermocouple input connections are shown in Figure 2.5. The correct type of thermocouple extension lead-wire or compensating cable must be used for the entire distance between the controller and the thermocouple, ensuring that the correct polarity is observed throughout. Joints in the cable should be avoided, if possible.

If the length of thermocouple plus the extension wire is too long, it may affect the temperature measurement. A 400 ohms K type or a 500 ohms J type thermocouple lead resistance will produce 1 degree C temperature error approximately.

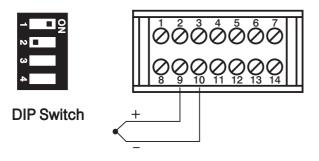


Figure 2.5
Thermocouple Input Wiring

The colour codes used on the thermocouple extension leads are shown in Table 2.1.

Table 2.1 Thermocouple Cable Colour Codes

Thermocouple	Cable	British	American	German	French
Type	Material	BS	ASTM	DIN	NFE
Т	Copper (Cu)	+ white	+ blue	+ red	+ yellow
	Constantan	– blue	- red	- brown	- blue
	(Cu-Ni)	* blue	* blue	* brown	* blue
J	Iron (Fe)	+ yellow	+ white	+ red	+ yellow
	Constantan	- blue	- red	- blue	- black
	(Cu-Ni)	* black	* black	* blue	* black
К	Nickel-Chromium (Ni-Cr) Nickel-Aluminum (Ni-Al)	+ brown - blue * red	+ yellow - red * yellow	+ red - green * green	+ yellow - purple * yellow
R S	Pt-13%Rh,Pt Pt-10%Rh,Pt	+ white - blue * green	+ black - red * green	+ red - white * white	+ yellow - green * green
В	Pt-30%Rh Pt-6%Rh	Use Copper Wire	+grey - red * grey	+red -grey * grey	Use Copper Wire

^{*} Colour of overall sheath

2-7 RTD Input Wiring

RTD connection are shown in Figure 2.6, with the compensating lead connected to terminal 9. For two-wire RTD inputs, terminals 9 and 10 should be linked. The three-wire RTD offers the capability of lead resistance compensation provided that the three leads should be of same gauge and equal length.

Two-wire RTD should be avoided, if possible, for the purpose of accuracy. A 0.4 ohm lead resistance of a two-wire RTD will produce 1 degree C temperature error.

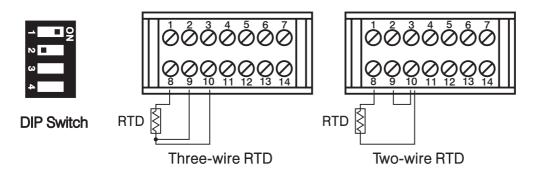


Figure 2.6 RTD Input Wiring

2-8 Linear DC Input Wiring

DC linear voltage and linear current connections for input 1 are shown in Figure 2.7 and Figure 2.8.

DC linear voltage and linear current connections for input 2 are shown in Figure 2.9 and Figure 2.10.

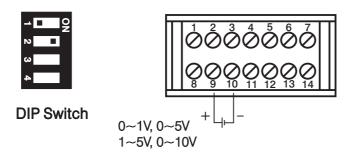


Figure 2.7 Input 1 Linear Voltage Wiring

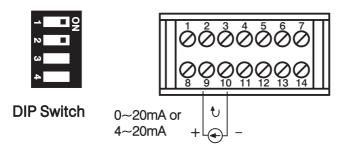


Figure 2.8 Input 1 Linear Current Wiring

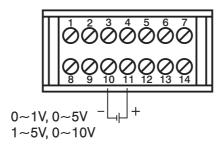


Figure 2.9 Input 2 Linear Voltage Wiring



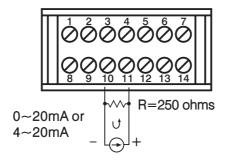


Figure 2.10 Input 2 Linear Current Wiring

IN2 = 0 - 5V or 1 - 5V


2-9 CT / Heater Current Input Wiring

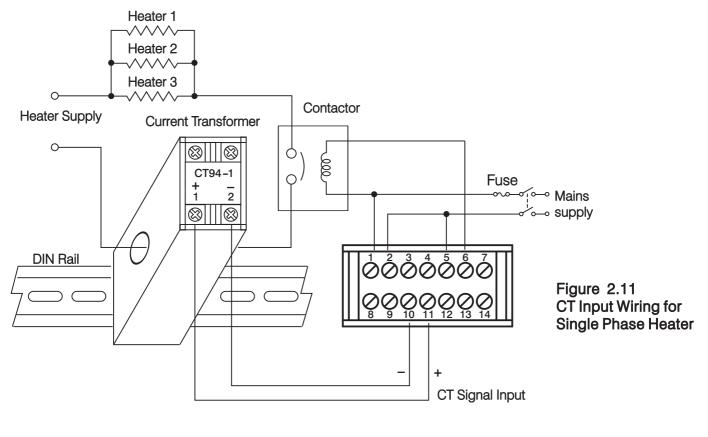

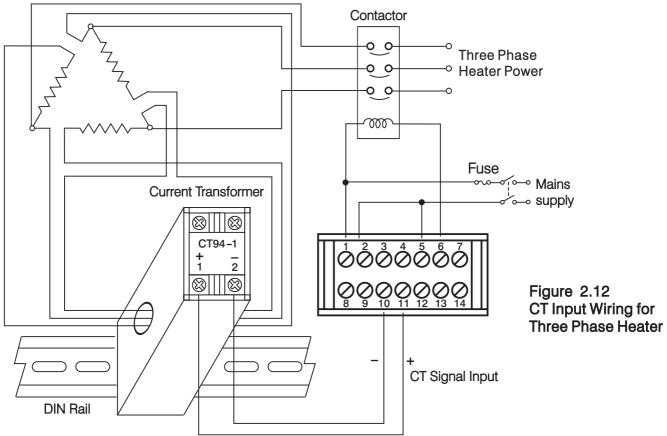

Make sure that the total current through CT94-1 not exceed 50A rms.

2-10 Event Input wiring

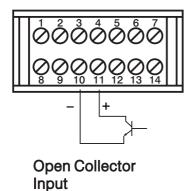

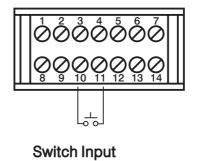


Figure 2.13 Event Input Wiring

The event input can accept a switch signal as well as an open collector signal. The event input function (EIFN) is activated as the switch is closed or an open collector (or a logic signal) is pulled down.

Also refer to **Section 4-1** for event input function.

2-11 Output 1 Wiring




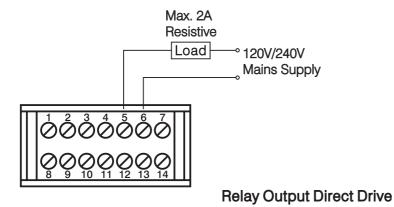


Figure 2.14 Output 1 Wiring

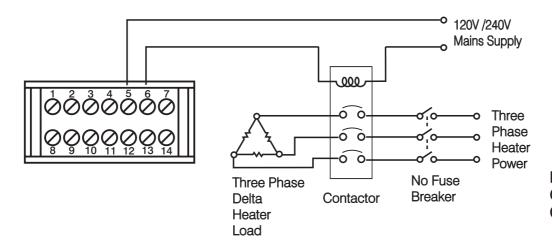


Relay or Triac (SSR) Output to Drive Contactor

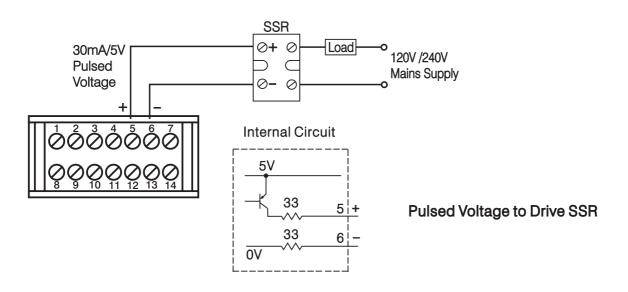


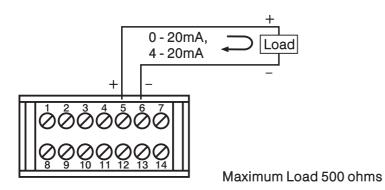

Linear Current

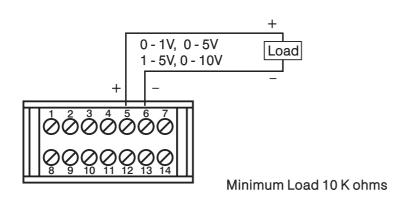


Linear Voltage

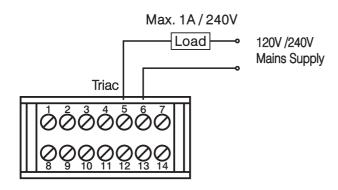


Triac (SSR) Output Direct Drive


2-12 Output 2 Wiring

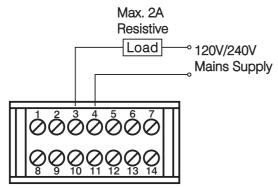


Relay Output Direct Drive


Figure 2.15 Output 2 Wiring

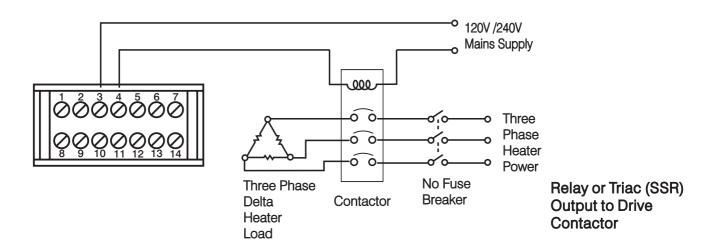

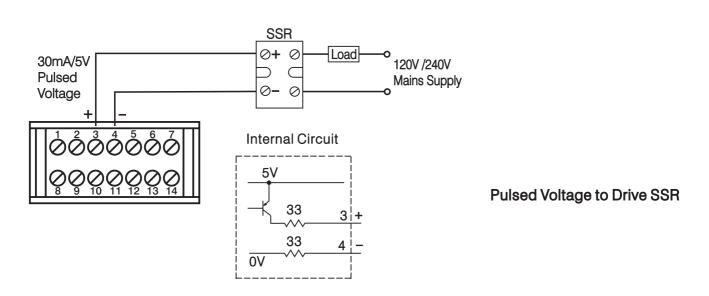


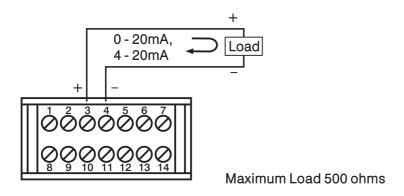

Linear Current

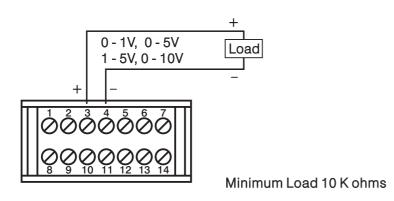

Linear Voltage

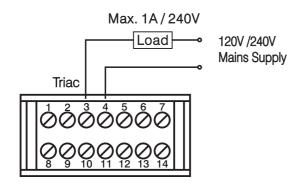

Triac (SSR) Output Direct Drive

2-13 Alarm 1 Wiring


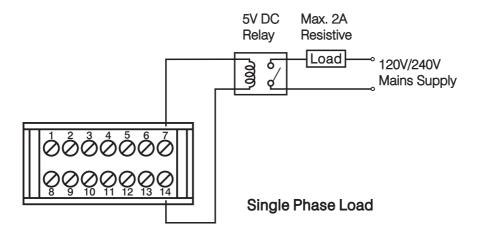


Figure 2.16 Alarm 1 Wiring

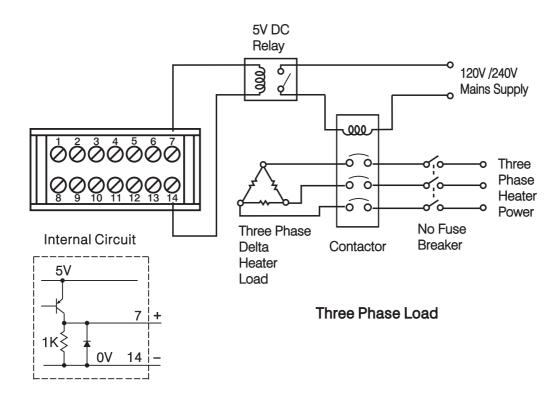

2-14 Alarm 2 Wiring



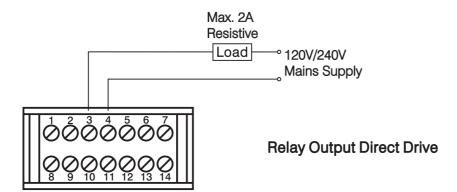


Figure 2.17 Alarm 2 Wiring

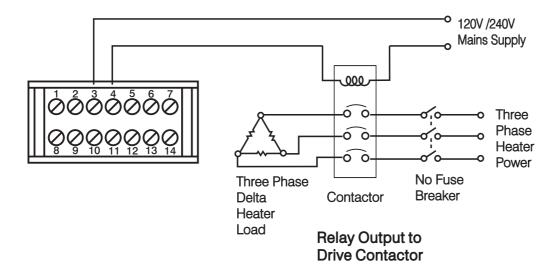

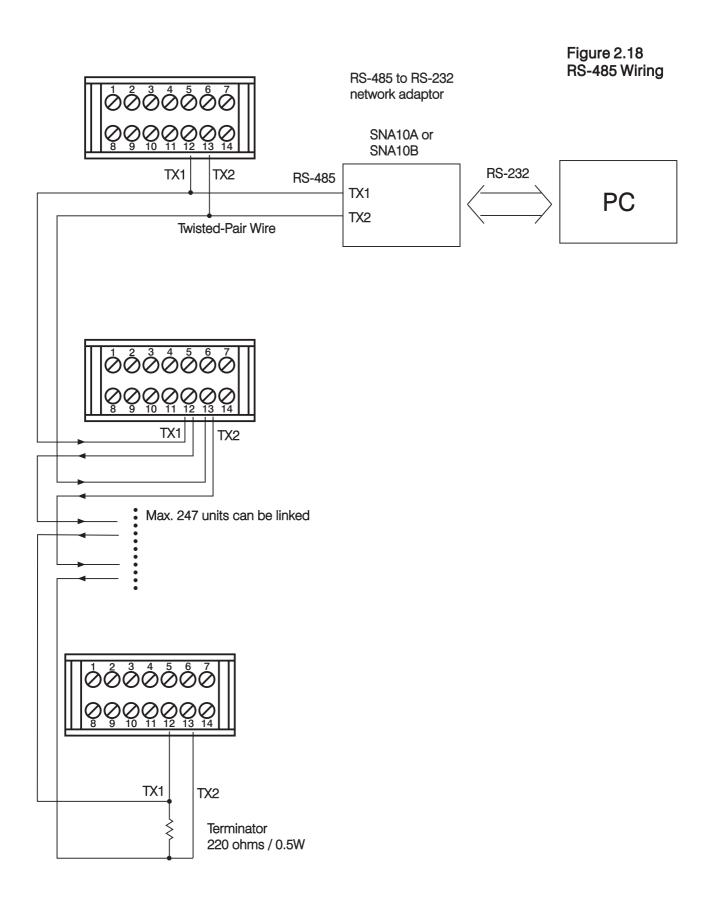

2-16 RS-232


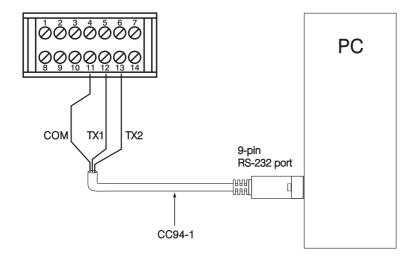


Figure 2.19 RS-232 Wiring


Note: If the BTC-2500 is configured for RS-232 communication, the input 2 and EI (Event Input) are disconnected internally. The unit can no longer perform event input function (EIFN) and input 2 function.

When you insert a RS-232 module (CM94-2) to the connectors on CPU board (C250), the jumper J51 and J52 **must** be modified as following: J52 must be shorted and J51 must be cut and left open. Location of jumper is shown in the following diagram.

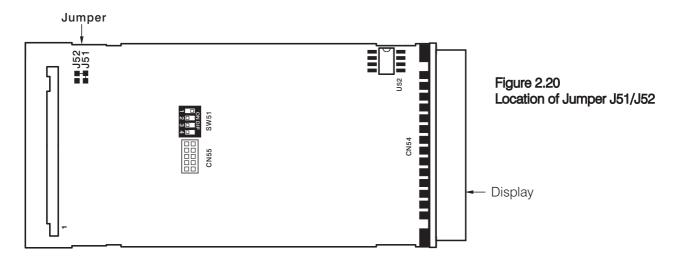

If you use a conventional 9-pin RS-232 cable instead of CC94-1, the cable must be modified according to the following circuit diagram.

To DTE(PC) RS-232 Port

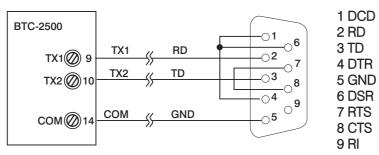

Female DB-9

Figure 2.21 Configuration of RS-232 Cable

2-17 Analog Retransmission


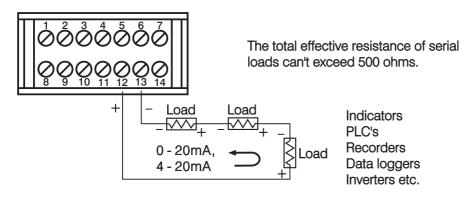


Figure 2.22 Analog Retransmission Wiring


Retransmit Current

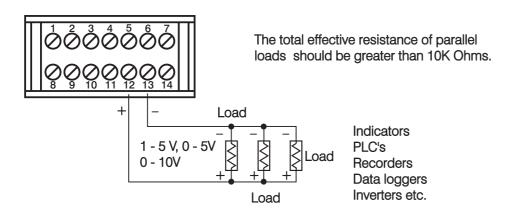

Retransmit Voltage

2-18 Programming Port

See Figure 1.3 in Section 1-3 to find the programming port location.

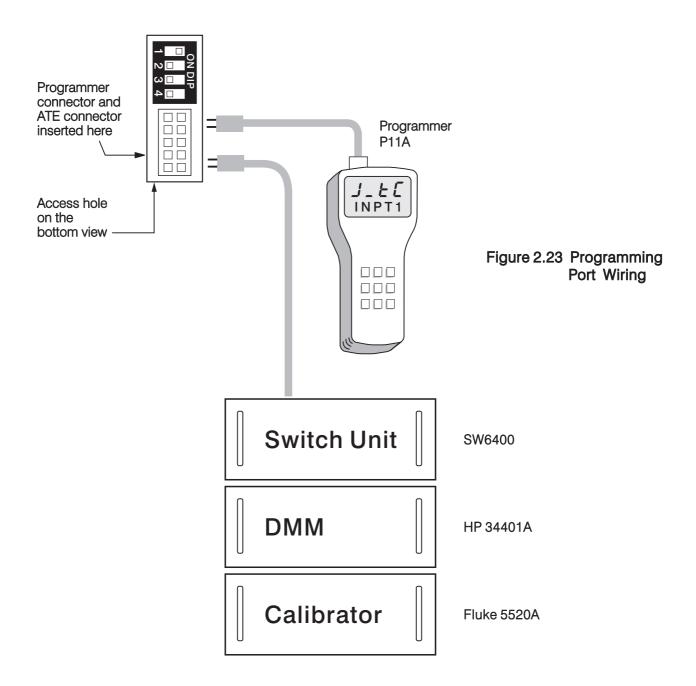

NOTE

The programming port is used for off-line automatic setup and testing procedures only. Don't attempt to make any connection to these pins when the unit is used for a normal control purpose.

Chapter 3 Programming the Basic Function

This unit provides an useful parameter "FUNC" which can be used to select the function complexity level before setup. If the Basic Mode (FUNC = BASC) is selected for a simple application, then the following functions are ignored and deleted from the full function menu:

RAMP, SP2, PB2, TI2, TD2, PL1, PL2, COMM, PROT, ADDR, BAUD, DATA, PARI, STOP, AOFN, AOLO, AOHI, IN2, IN2U, DP2, IN2L, IN2H, EIFN, PVMD, FILT, SLEP, SPMD and SP2F.

Basic Mode capabilities:

- (1) Input 1: Thermocouple, RTD, Volt, mA
- (2) Input 2: CT for heater break detection
- (3) Output 1: Heating or Cooling (Relay, SSR, SSRD, Volt, mA)
- (4) Output 2: Cooling (Relay, SSR, SSRD, Volt, mA), DC Power supply.
- (5) Alarm 1: Relay for Deviation, Deviation Band, Process, Heater Break, Loop Break, Sensor Break, Latch, Hold or Normal Alarm.
- (6) Alarm 2: Relay for Deviation, Deviation Band, Process, Heater Break, Loop Break, Sensor Break, Latch, Hold or Normal Alarm.
- (7) Dwell Timer
- (8) Heater Break Alarm
- (9) Loop Break Alarm
- (10) Sensor Break Alarm
- (11) Failure Transfer
- (12) Bumpless Transfer
- (13) PV1 Shift
- (14) Programmable SP1 Range
- (15) Heat-Cool control
- (16) Hardware Lockout
- (17) Self-Tune
- (18) Auto-Tune
- (19) ON-OFF, P, PD, PI, PID Control
- (20) User Defined Menu (SEL)
- (21) Manual Control
- (22) Display Mode
- (23) Reload Default Values
- (24) Isolated DC Power Supply
- (25) PV or SV Selection

3-1 Input 1

Press to enter Setup Mode. Press to select parameter. The upper display indicates the parameter symbol, and the lower display indicates the selection or the value of parameter.

IN1: Selects the sensor type and signal type for Input 1.

Range: (Thermocouple) J_TC, K_TC, T_TC, E_TC, B_TC, R_TC, S_TC,

N_TC, L_TC

(RTD) PT.DN, PT.JS

(Linear) 4-20, 0-20, 0-1V, 0-5V, 1-5V, 0-10

Default: J TC if °F is selected, K TC if °C is selected.

IN1U: Selects the process unit for Input 1.

Range: °C, °F, PU (process unit) If the unit is neither °C nor °F, then

selects PU.

Default: °C or °F.

 $\ensuremath{\mathsf{DP1}}$: Selects the location of the decimal point for most (not all) process

related parameters.

Range: (For T/C and RTD) NO.DP, 1-DP (For Linear) NO.DP, 1-DP, 2-DP, 3-DP

Default: 1-DP

40

UM25001C

If you don't need:

- (1) Second setpoint
- (2) Second PID
- (3) Event input
- (4) Soft start (RAMP)
- (5) Remote set point
- (6) Complex process value
- (7) Output power limit
- (8) Digital communication
- (9) Analog retransmission
- (10) Power shut off (Sleep Mode)
- (11) Digital filter
- (12) Pump control
- (13) Remote lockout

then you can use Basic Mode.

IN₁

IN1U

DP1

dP 1

 $I \cap I$

IN1L: Selects the low scale value for the Linear type input 1.

Hidden if: T/C or RTD type is selected for IN1.

IN1L in IL

IN1H: Selects the high scale value for the Linear type input 1.

IN1H n !H

Hidden if: T/C or RTD type is selected for IN1.

How to use IN1L and IN1H:

If 4 - 20 mA is selected for IN1, let SL specifies the input signal low (ie. 4 mA), SH specifies the input signal high (ie. 20 mA), S specifies the current input signal value, the conversion curve of the process value is shown as follows:

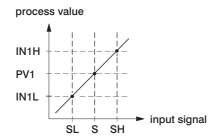


Figure 3.1 Conversion Curve for **Linear Type Process Value**

O1TY

o 164

O2TY

02.53

Formula: $PV1 = IN1L + (IN1H - IN1L) \frac{S - SL}{SH - SL}$

Example: A 4-20 mA current loop pressure transducer with range 0 - 15 kg/cm²

is connected to input 1, then perform the following setup:

IN1L = 0.0IN1 = 4 - 20IN1U = PUIN1H = 15.0

DP1 = 1-DP

Of course, you may select other value for DP1 to alter the resolution.

3-2 OUT1 & OUT2 Types

O1TY: Selects the signal type for Output 1.

The selection should be consistent with the output 1 module installed.

The available output 1 signal types are:

RELY: Mechanical relay

SSRD: Pulsed voltage output to drive SSR SSR : Isolated zero-switching solid state relay

4 - 20 : 4 - 20 mA linear current output 0 - 20 : 0 - 20 mA linear current output

0 - 1 V : 0 - 1 V linear voltage output

0 - 5 V: 0 - 5 V linear voltage output 1 - 5 V: 1 - 5 V linear voltage output

0 - 10V: 0 - 10 V linear voltage output

O2TY: Selects the signal type for Output 2

The selection should be consistent with the output 2 module installed.

The available output 2 signal types are the same as for O1TY.

The range for linear current or voltage may not be very accurate. For 0 % output, the value for 4 - 20 mA may be 3.8 mA to 4 mA; while for 100 % output, the value for 4 - 20 mA may be 20 mA to 21 mA. However, this deviation will not degrade the control performance at all.

3-3 Rearrange User Menu

The conventional controllers are designed with a fixed parameters' scrolling. If you need a more friendly operation to suit your application, the manufacturer will say " sorry " to you. The BTC-2500 has the flexibility for you to select those parameters which are most significant to you and put these parameters in the front of display sequence.

 $\ensuremath{\mathsf{SEL1}}$: Selects the most significant parameter for view and change.

 $\ensuremath{\mathsf{SEL2}}$: Selects the 2'nd $% \ensuremath{\mathsf{Significant}}$ is significant parameter for view and change.

SEL3: Selects the 3'rd significant parameter for view and change.

SEL4: Selects the 4th significant parameter for view and change.

SEL5: Selects the 5th significant parameter for view and change. Range: NONE, TIME, A1.SP, A1.DV, A2.SP, A2.DV, RAMP, OFST,

REFC, SHIF, PB1, TI1, TD1, C.PB, DB, SP2, PB2, TI2, TD2

When using the up-down key to select the parameters, you may not obtain all of the above parameters. The number of visible parameters is dependent on the setup condition. The hidden parameters for the specific application are also deleted from the SEL selection.

Example:

A1FN selects TIMR

A2FN selects DE.HI

PB1 = 10

TI1 = 0

SEL1 selects TIME


SEL2 selects A2.DV

SEL3 selects OFST

SEL4 selects PB1

SEL5 selects NONE

Now, the upper display scrolling becomes :



3-4 Display SV Instead of PV

In certain applications where set point value (SV) is more important than process value (PV) for the user, the parameter **DISF** (display format) then can be used to achieve this purpose.

Press \bigcirc keys to enter setup menu $\boxed{5EE}$, then press \bigcirc several times until $\boxed{g, 5F}$ appears on the display. If you need the process value to be displayed, then select $\boxed{P\underline{v}}$ by using \bigcirc or \bigcirc key for DISF, If you need set point value instead of process value to be displayed, then select $\boxed{5\underline{v}}$ for DISF. Also refer to the flow chart in **Section 1-5** to see the location of DISF.

SEL1

SEL2

SEL3

SEL4

SEL5

has two values:

Display process value

Display set point value

42 UM25001D

3-5 Heat Only Control

Heat Only ON-OFF Control: Select REVR for OUT1, Set PB1 to 0, SP1 is used to adjust set point value, O1HY is used to adjust dead band for ON-OFF control, TIME is used to adjust the dwell timer (enabled by selecting TIMR for A1FN or A2FN). The output 1 hysteresis (O1HY) is enabled in case of PB1 = 0 . The heat only on-off control function is shown in the following diagram :

Setup ON-OFF:

OUT1 = FETT

PB1 = 0

Adjust:SP1, O1HY, TIME(if enabled)

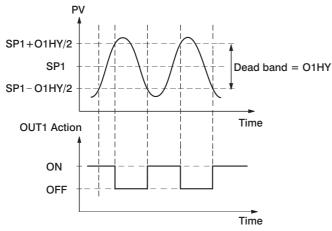


Figure 3.2 Heat Only
ON-OFF Control

The ON-OFF control may introduce excessive process oscillation even if hysteresis is minimized to the smallest. If ON-OFF control is set (ie. PB1 = 0), TI1, TD1, CYC1, OFST, CPB and PL1 will be hidden and have no function to the system. The manual mode, auto-tuning, self-tuning and bumpless transfer will be disabled too.

Heat only P (or PD) control : Select REVR for OUT1, set TI1 to 0, SP1 is used to adjust set point value, TIME is used to adjust the dwell timer (enabled by selecting TIMR for A1FN or A2FN). OFST been enabled in case of TI1 = 0 is used to adjust the control offset (manual reset). Adjust CYC1 according to the output 1 type (O1TY).Generally, CYC1= 0.5 \sim 2 sec for SSRD and SSR, CYC1=10 \sim 20 sec for relay output .CYC1 is ignored if linear output is selected for O1TY. **O1HY is hidden** if PB1 is not equal to 0.

OFST Function: OFST is measured by % with range 0 - 100.0 %. In the steady state (ie. process has been stabilized) if the process value is lower than the set point a definite value, say 5 °C, while 20 °C is used for PB1, that is lower 25 %, then increase OFST 25 %, and vice versa. After adjusting OFST value, the process value will be varied and eventually, coincide with set point. Using the P control (Tl1 set to 0), the auto-tuning and self-tuning are disabled. Refer to section 3-21 " manual tuning " for the adjustment of PB1 and TD1. Manual reset (adjust OFST) is not practical because the load may change from time to time and often need to adjust OFST repeatedly. The PID control can avoid this situation.

Heat only PID control: Selecting REVR for OUT1, SP1 is used to adjust set point value. TIME is used to adjust the dwell timer (enabled by selecting TIMR for A1FN or A2FN). PB1 and Tl1 should not be zero. Adjust CYC1 according to the output 1 type (O1TY). Generally, CYC1 = $0.5 \sim 2$ sec for SSRD and SSR, CYC1 = $10 \sim 20$ sec for relay output. CYC1 is ignored if linear output is selected for O1TY.

In most cases the self-tuning can be used to substitute the auto-tuning. See **Section 3-19.** If self-tuning is not used (select NONE for SELF), then use auto-tuning for the new process, or set PB1, TI1 and TD1 with historical values. See section 3-20 for auto-tuning operation. If the control result is still unsatisfactory, then use manual tuning to improve the control . See section 3-21 for manual tuning. BTC-2500 contains a **very clever PID and Fuzzy** algorithm to achieve a **very small overshoot and very quick response** to the process if it is properly tuned.

Setup P:

OUT1 = FEUT

TI1 = 0

CYC1 (if RELAY, SSRD or SSR is selected for O1TY)

Adjust:

SP1, OFST, TIME (if enabled), PB1 (\neq 0), TD1

Auto-tuning:

Used for new process. during initial tuning

Self-tuning:

Used for a process any time.

Manual Tuning:

May be used if self-tuning and auto-tuning are inadequate.

3-6 Cool Only Control

ON-OFF control, P (PD) control and PID control can be used for cool control. Set OUT1 to DIRT (direct action). The other functions for **cool only ON-OFF** control, **cool only P (PD)** control and **cool only PID** control are same as descriptions in section 3-5 for heat only control except that the output variable (and action) for the cool control is inverse to the heat control, such as the following diagram shows:

Setup Cool Control:

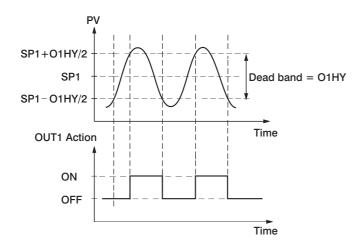


Figure 3.3 Cool Only
ON-OFF Control

Refer to section 3-5 in which similar descriptions for heat only control can be applied to cool only control.

3-7 Heat-Cool Control

The Heat-Cool Control can use one of 6 combinations of control modes. Setup of parameters for each control mode are shown in the following table.

Control Modes Heat	Cool	Setup Values												
Control Modes	Uses	Uses	OUT1	OUT2	O1HY	OFST	PB1	TI1	TD1	СРВ	DB	A2FN	A2MD	A2HY
Heat : ON-OFF Cool : ON-OFF	OUT1	OUT2	REVR	=AL2	☆	×	=0	×	×	×	×	DE.HI or PV1.H	NORM	☆
Heat : ON-OFF Cool : P (PD)	OUT2	OUT1	DIRT	=AL2	×	☆	≠0	=0	☆	×	×	DE.LO or PV1.L	NORM	☆
Heat : ON-OFF Cool : PID	OUT2	OUT1	DIRT	=AL2	×	×	≠0	≠0	☆	×	×	DE.LO or PV1.L	NORM	☆
Heat : P (PD) Cool : ON-OFF	OUT1	OUT2	REVR	=AL2	×	☆	≠0	=0	☆	×	×	DE.HI or PV1.H	NORM	☆
Heat : PID Cool : ON-OFF	OUT1	OUT2	REVR	=AL2	×	×	≠0	≠0	☆	×	×	DE.HI or PV1.H	NORM	☆
Heat : PID Cool : PID	OUT1	OUT2	REVR	COOL	×	×	≠0	≠0	☆	☆	☆	×	×	×

× : Don't care

☆ : Adjust to meet process requirements

Table 3.1 Heat-Cool Control Setup

NOTE: The ON-OFF control may result excessive overshoot and undershoot problems in the process. The P (or PD) control will result in a deviation process value from the set point. It is recommended to use PID control for the Heat-Cool control to produce a stable and zero offset process value.

Other Setup Required: O1TY, CYC1, O2TY, CYC2, A2SP, A2DV

O1TY & O2TY are set in accordance with the types of OUT1 & OUT2 installed. CYC1 & CYC2 are selected according to the output 1 type (O1TY) & output 2 type (O2TY).

Generally, selects $0.5 \sim 2$ sec. for CYC1, if SSRD or SSR is used for O1TY; $10 \sim 20$ sec. if relay is used for O1TY, and CYC1 is ignored if linear output is used. Similar condition is applied for CYC2 selection.

If OUT2 is configured for ON-OFF control (by selecting = AL2), the OUT2 acts as alarm output, and the process alarm as well as deviation alarm (see section 3-9 & 3-10) can be used. Adjust A2SP to change set point if process alarm is used, and adjust SP1 (with preset A2DV) to change set point if deviation alarm is used.

Examples:

Heat PID+Cool ON-OFF: Set OUT1= REVR, OUT2= =AL2, A2FN= PV1.H, A2MD=NORM, A2HY=0.1, PB1 \neq 0, TI1 \neq 0, TD1 \neq 0, and set appropriate values for O1TY and CYC1.

Heat PID+Cool PID: set OUT1=REVR, OUT2=COOL, CPB=100, DB=-4.0, PB1≠0, TI1≠0 TD1≠0, and set appropriate values for O1TY, CYC1, O2TY, CYC2.

If you have no idea about a new process, then use self-tuning program to optimize the PID values by selecting YES for SELF to enable the self-tuning program .See section 3-19 for self-tuning description. You can use the auto-tuning program for the new process or directly set the appropriate values for PB1, TI1 & TD1 according to the historical records for the repeated systems. If the control behavior is still inadequate, then use manual tuning to improve the control. See section 3-21 for manual tuning.

UM25001D 45

CPB Programming: The cooling proportional band is measured by % of PB with range 1~255. Initially set 100% for CPB and examine the cooling effect. If cooling action should be enhanced then **decrease CPB**, if cooling action is too strong then **increase CPB**. The value of CPB is related to PB and its value remains unchanged throughout the self-tuning and auto-tuning procedures.

Adjustment of CPB is related to the cooling media used. For air is used as cooling media, adjust CPB at 100(%). For oil is used as cooling media, adjust CPB at 125(%). For water is used as cooling media, adjust CPB at 250(%).

DB Programming: Adjustment of DB is dependent on the system requirements. If more positive value of DB (greater dead band) is used, an unwanted cooling action can be avoided but an excessive overshoot over the set point will occur. If more negative value of DB (greater overlap) is used, an excessive overshoot over the set point can be minimized but an unwanted cooling action will occur. It is adjustable in the range -36.0% to 36.0 % of PB1 (or PB2 if PB2 is selected). A negative DB value shows an overlap area over which both outputs are active. A positive DB value shows a dead band area over which neither output is active.

46 UM25001D

3-8 Dwell Timer

Alarm 1 or alarm 2 can be configured as dwell timer by selecting TIMR for A1FN or A2FN, but not both, otherwise Er07 will appear. As the dwell timer is configured, the parameter TIME is used for dwell time adjustment. The dwell time is measured in minute ranging from 0 to 6553.5 minutes. Once the process reaches the set point the dwell timer starts to count from zero until time out. The timer relay will remain unchanged until time out. The dwell timer operation is shown as following diagram.

Error Code

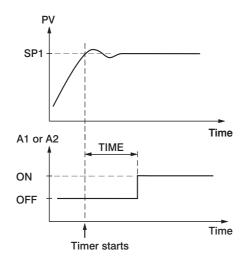


Figure 3.4 Dwell Timer Function

If alarm 1 is configured as dwell timer, A1SP, A1DV, A1HY and A1MD are hidden. Same case is for alarm 2.

Example:

Set A1FN=TIMR or A2FN=TIMR but not both.

Adjust TIME in minutes

A1MD (if A1FN=TIMR) or A2MD (if A2FN=TIMR) is ignored in this case. If alarm 1 is selected for dwell timer, an external 5V DC relay is required to drive AC load.

3-9 Process Alarms

There are at most two independent alarms available by adjusting OUT2. If =AL2 is selected for OUT2, then OUT2 will perform alarm 2 function. Now A2FN can't be selected with NONE, otherwise **Er06** will be displayed.

A process alarm sets an absolute trigger level (or temperature). When the process (could be PV1, PV 2 or PV1-PV2) exceeds that absolute trigger level an alarm occurs. A process alarm is independent from set point.

Adjust A1FN (Alarm 1 function) in setup menu. One of 8 functions can be selected for process alarm. These are: PV1.H, PV1.L, PV2.H, PV2.L, P1.2.H, P1.2.L, D1.2.H, D1.2.L. When the PV1.H or PV1.L is selected the alarm examines the PV1 value. When the PV2.H or PV2.L is selected the alarm examines the PV2 value. When the P1.2.H or P1.2.L is selected the alarm occurs if the PV1 or PV2 value exceed the trigger level. When the D1.2.H or D1.2.L is selected the alarm occurs if the PV1-PV2 (difference) value exceeds the trigger level. The trigger level is determined by A1SP (Alarm 1 set point) and A1HY (Alarm 1 hysteresis value) in User Menu for alarm 1. The hysteresis value is introduced to avoid interference action of alarm in a noisy environment. Normally A1HY can be set with a minimum (0.1) value.

A1DV and/or A2DV are hidden if alarm 1 and/or alarm 2 are set with process alarm.

Normal Alarm: A1MD = NORM

When a normal alarm is selected, the alarm output is de-energized in the non-alarm condition and energized in an alarm condition.

Latching Alarm : A1MD = LTCH

If a latching alarm is selected, once the alarm output is energized, it will remain unchanged even if the alarm condition is cleared. The latching alarms are disabled when the power is shut off or if event input is applied with proper selection of EIFN.

Holding Alarm : A1MD = HOLD


A holding alarm prevents an alarm from power up. The alarm is enabled only when the process reaches the set point value (may be SP1 or SP2, See section 4-1 event input). Afterwards, the alarm performs same function as normal alarm.

Latching / Holding Alarm : A1MD = LT.HO

A latching / holding alarm performs both holding and latching function.

Examples:

$$A1SP = 200$$
 $A1HY = 10.0$
 $A1MD = NORM$ $A1FN = PV1.H$

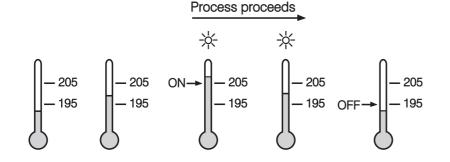

Error Code

8 Types of Process Alarms:

PV1.H, PV1.L, PV2.H, PV2.L, P1.2.H, P1.2.L, D1.2.H, D1.2.L

Process Alarm 1

Setup: A1FN, A1MD Adjust: A1SP, A1HY

Trigger level = $A1SP \pm 1/2 A1HY$

Process Alarm 2

Setup: OUT2, A2FN, A2MD

Adjust: A2SP, A2HY

Trigger level = $A2SP \pm 1/2 A2HY$

Reset Latching alarm

- 1. Power off
- 2. Apply Event input in accordance with proper selection of EIFN

Figure 3.5 Normal Process Alarm

(3-9 2'nd page)

$$A1SP = 200$$
 $A1HY = 10.0$ $A1MD = LTCH$ $A1FN = PV1.H$

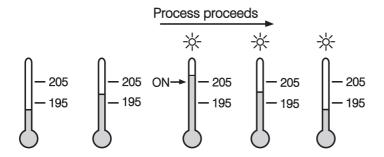


Figure 3.6 Latching Process Alarm

Process proceeds

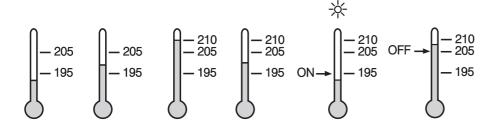


Figure 3.7 Holding Process Alarm

$$A1SP = 200$$
 $A1HY = 10.0$ $SP1 = 210$ $A1MD = LT.HO$ $A1FN = PV1.L$

Process proceeds

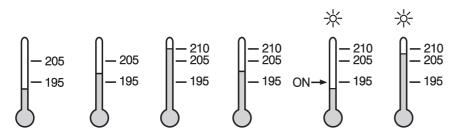


Figure 3.8 Latching / Holding Process Alarm

Although the above descriptions are based on alarm 1, the same conditions can be applied to alarm 2.

3-10 Deviation Alarm

OUT2 can be configured as alarm 2 by selecting=AL2. If OUT2 selects=AL2, then output 2 will perform alarm 2 function. Now A2FN can't be selected with NONE, otherwise Er06 will appear.

A deviation alarm alerts the user when the process deviates too far from set point. The user can enter a positive or negative deviation value (A1DV, A2DV) for alarm 1 and alarm 2. A hysteresis value (A1HY or A2HY) can be selected to avoid interference problem of alarm in a noisy environment. Normally, A1HY and A2HY can be set with a minimum (0.1) value.

Trigger levels of alarm are moving with set point.

For alarm 1, Trigger levels=SP1+A1DV ± 1/2 A1HY.

For alarm 2, Trigger levels=SP1+A2DV ± 1/2 A2HY.

A1SP and/or A2SP are hidden if alarm 1 and/or alarm 2 are set with deviation alarm. One of 4 kinds of alarm modes can be selected for alarm 1 and alarm 2. These are: Normal alarm, Latching alarm, Holding alarm and Latching/Holding alarm. See Section 3-9 for descriptions of these alarm modes.

Error Code

2 Types of Deviation Alarms : DE.HI, DE.LO

Deviation Alarm 1 Setup: A1FN, A1MD Adjust: SP1, A1DV, A1HY

Trigger levels=SP1+A1DV ± 1/2A1HY

Deviation Alarm 2:

Setup: OUT2, A2FN, A2MD Adjust: SP1, A2DV, A2HY

Trigger levels=SP1+A2DV±/2A2HY

Examples:

A1FN = DE.HI, A1MD = NORM, SP1 = 100, A1DV = 10, A1HY = 4

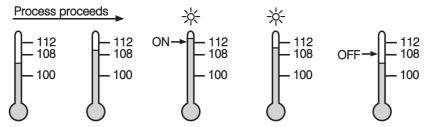


Figure 3.9 Normal Deviation Alarm

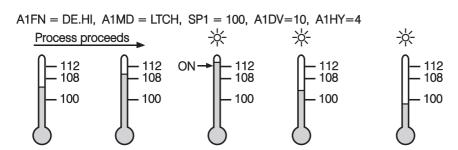


Figure 3.10 Latching Deviation Alarm

A1HY = DE.LO, A1MD = HOLD, SP1 = 100, A1DV = -10, A1HY = 4


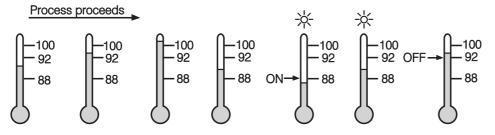


Figure 3.11 Holding Deviation Alarm

A1HY= DE.LO, A1MD = LT.HO, SP1 = 100, A1DV= -10, A1HY=4



3-11 Deviation Band Alarm

A deviation band alarm presets two reference levels relative to set point. Two types of deviation band alarm can be configured for alarm 1 and alarm 2. These are deviation band high alarm (A1FN or A2FN select DB.HI) and deviation band low alarm (A1FN or A2FN select DB.LO). If alarm 2 is required, then select =AL2 for OUT2. Now A2FN can't be selected with NONE, otherwise Er06 will appear. A1SP and A1HY are hidden if alarm 1 is selected with deviation band alarm. Similarly, A2SP and A2HY are hidden if alarm 2 is selected with deviation band alarm.

Trigger levels of deviation band alarm are moving with set point. For alarm 1, trigger levels=SP1 \pm A1DV. For alarm 2, trigger levels=SP1 \pm A2DV. One of 4 kinds of alarm modes can be selected for alarm 1 and alarm 2. These are : Normal alarm, Latching alarm, Holding alarm and Latching/Holding alarm. See Section 3-9 for descriptions of these alarm modes.

2 Types of Deviation Band Alarms:

DB.HI, DB.LO

Deviation Band Alarm 1:

Setup: A1FN, A1MD Adjust: SP1, A1DV

Trigger levels = SP1 ± A1DV Deviation Band Alarm 2 : Setup : OUT2, A2FN, A2MD

Adjust: SP1, A2DV

Trigger levels = $SP1 \pm A2DV$

Error Code

Examples:

A1FN = DB.HI, A1MD = NORM, SP1 = 100, A1DV = 5

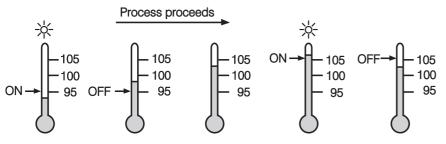


Figure 3.13 Normal Deviation Band Alarm

A1FN = DB.LO, A1MD = LTCH, SP1 = 100, A1DV = 5

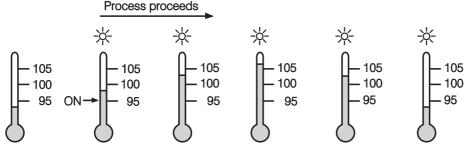


Figure 3.14 Latching Deviation Band Alarm

A1FN = DB.HI, A1MD = HOLD, SP1 = 100, A1DV = 5

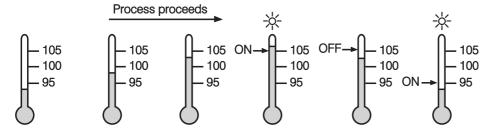


Figure 3.15 Holding Deviation Band Alarm

A1FN = DB.HI, A1MD = LT.HO, SP1 = 100, A1DV = 5

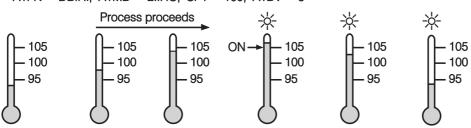


Figure 3.16 Latching /Holding Deviation Band Alarm

UM25001D 51


3-12 Heater Break Alarm

A current transformer (parts No. CT94-1) should be installed to detect the heater current if a heater break alarm is required. The CT signal is sent to input 2, and the PV2 will indicate the heater current in 0.1 Amp. resolution. The range of current transformer is 0 to 50.0 Amp.

For more detailed descriptions about heater current monitoring, please see Section 3-25.

Example:

A furnace uses two 2KW heaters connected in parallel to warm up the process. The line voltage is 220V and the rating current for each heater is 9.09A. If we want to detect any one heater break, set A1SP=13.0A, A1HY=0.1 A1FN=PV2.L, A1MD=NORM, then



20 30 10 A 50 Heater Break Alarm 1

Setup : IN2 = CT

A1FN = PV2.L

A1MD = NORMA1HY = 0.1

Adjust: A1SP

Trigger levels : A1SP $\pm 1/2$ A1HY

Heater Break Alarm 2

Setup: IN2 = CT

A2FN = PV2.L

A2MD = NORM

A2HY = 0.1

Adjust: A2SP

Trigger levels : A2SP ± 1/2 A2HY

Limitations:

- 1. Linear output can't use heater break alarm.
- 2. CYC1 should use 1 second or longer to detect heater current reliably.

Figure 3.17 Heater Break Alarm

3-13 Loop Break Alarm

A1FN selects LB if alarm 1 is required to act as a loop break alarm. Similarly, if alarm 2 is required to act as a loop break alarm, then set OUT2 with=AL2 and A1FN with LB.

TIME, A1SP, A1DV and A1HY are hidden if alarm 1 is configured as a loop break alarm. Similarly, TIME, A2SP, A2DV and A2HY are hidden if alarm 2 is configured as a loop break alarm.

One of 4 kinds of alarm modes can be selected for alarm 1 and alarm 2. These are: Normal alarm, Latching alarm, Holding alarm and Latching/Holding alarm. However, the Holding mode and Latching/Holding mode are not recommended to be chosen for loop break alarm since loop break alarm will not perform holding function even if it is set with holding or latching/holding mode. See Section 3-9 for the descriptions of these alarm modes.

Loop Break Conditions are detected during a time interval of 2TI1 (double of integral time, but 120 seconds maximum). Hence the loop break alarm doesn't respond quickly as it occurs. If the process value doesn't increase (or decrease) while the control variable MV1 has reached to its maximum (or minimum) value within the detecting time interval, a loop break alarm (if configured) will be actuated.

Loop Break Alarm 1 Setup : A1FN = LB

A1MD = NORM, LTCH

Loop Break Alarm 2 Setup : OUT2 = =AL2 A2FN = LB

A2MD = NORM, LTCH

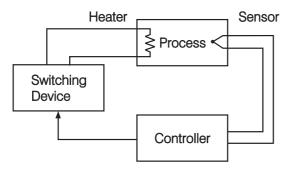


Figure 3.18 Loop Break Sources

Loop Break Sources: Sensor, Controller, Heater, Switching Device

Loop Break Alarm (if configured) occurs when any following condition happens:

- 1. Input sensor is disconnected (or broken).
- 2. Input sensor is shorted.
- 3. Input sensor is defective.
- 4. Input sensor is installed outside (isolated from) the process.
- 5. Controller fails (A-D converter damaged).
- 6. Heater (or generally, chiller, valve, pump, motor etc.) breaks or fails or uninstalled.
- 7. Switching device (used to drive heater) is open or shorted.

3-14 Sensor Break Alarm

Alarm 1 or alarm 2 can be configured as sensor break alarm by selecting SENB $\boxed{5Enb}$ for A1FN or A2FN. If alarm 2 is required for sensor break alarm, then OUT2 should be selected with =AL2.

The sensor break alarm is activated as soon as failure mode occurs. Refer to **Section 3-17** for failure mode conditions. Note that **A-D failure** also creates a sensor break alarm. TIME,A1SP, A1DV, and A1HY are hidden if alarm 1 is configured as a sensor break alarm. Similarly, TIME, A2SP, A2DV and A2HY are hidden if alarm 2 is configured as a sensor break alarm.

One of 4 kinds of alarm modes can be selected for sensor break alarm. These are: Normal alarm, Latching alarm, Holding alarm and Latching/Holding alarm. However, the Holding alarm and Latching/Holding alarm are not recommended to be chosen for sensor break alarm since sensor break alarm will not perform holding function even if it is set with holding or latching/holding mode. See **Section 3-9** for the descriptions of these alarm modes.

Sensor Break Alarm 1 Setup: A1FN=SENB A1MD=NORM, LTCH

Hidden: TIME, A1SP, A1DV A1HY

Sensor Break Alarm 2
Setup: OUT2= =AL2
A2FN=SENB
A2MD=NORM, LTCH
Hidden: TIME, A2SP, A2DV

A2HY

3-15 SP1 Range

SP1L (SP1 low limit value) and SP1H (SP1 high limit value) in setup menu are used to confine the adjustment range of SP1.

Example: A freezer is working in its normal temperature range -10 °C to -15 °C. In order to avoid an abnormal set point, SP1L and SP1H are set with the following values:

 $SP1L = -15 \degree C$ $SP1H = -10 \degree C$

Now SP1 can only be adjusted within the range from -10 °C to -15 °C.

SP1H
SP1L
IN1L (or sensor range high)

Figure 3.19 SP1 Range

Setup: SP1L, SP1H

3-16 PV1 Shift

In certain applications it is desirable to shift the controller display value from its actual value. This can be easily accomplished by using the PV1 shift function.

Press the "scroll" key to the parameter SHIF. The value you adjust here, either positive or negative, will be added to the actual value. The SHIF function will alter PV1 only.

Here is an example. A process is equipped with a heater, a sensor and a subject to be warmed up. Due to the design and position of the components in the system, the sensor could not be placed any closer to the part. Thermal gradient (different temperature) is common and necessary to an extent in any thermal system for heat to be transferred from one point to another. If the difference between the sensor and the subject is 35 °C, and the desired temperature at the subject to be heated is 200 °C, the controlling value or the temperature at the sensor should be 235 °C. You should input -35 °C as to subtract 35 °C from the actual process display. This in turn will cause the controller to energize the load and bring the process display up to the set point value.

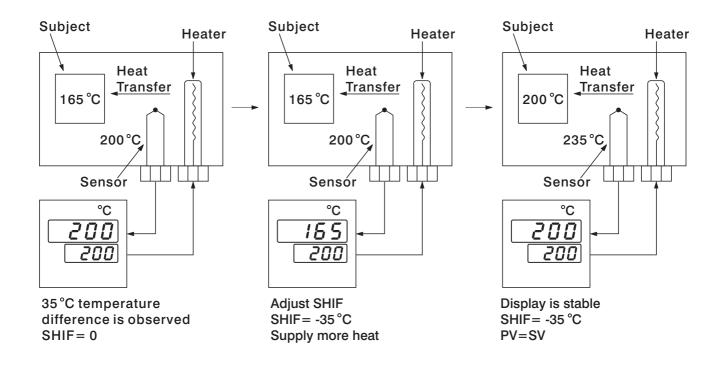


Figure 3.20 PV1 Shift Application

3-17 Failure Transfer

The controller will enter failure mode as one of the following conditions occurs:

- 1. SB1E occurs (due to the input 1 sensor break or input 1 current below 1mA if 4-20 mA is selected or input 1 voltage below 0.25V if 1-5 V is selected) if PV1, P1-2 or P2-1 is selected for PVMD or PV1 is selected for SPMD.
- 2. SB2E occurs (due to the input 2 sensor break or input 2 current below 1mA if 4-20 mA is selected or input 2 voltage below 0.25V if 1-5 V is selected) if PV2, P1-2 or P2-1 is selected for PVMD or PV2 is selected for SPMD.
- 3. ADER occurs due to the A-D converter of the controller fails.

The output 1 and output 2 will perform the failure transfer function as one of the following conditions occurs:

- 1. During power starts (within 2.5 seconds).
- 2. The controller enters the failure mode.
- 3. The controller enters the manual mode.
- 4. The controller enters the calibration mode.

Output 1 Failure Transfer, if activated, will perform:

- 1. If output 1 is configured as proportional control (PB1 \neq 0), and BPLS is selected for O1FT, then output 1 will perform bumpless transfer. Thereafter the previous averaging value of MV1 will be used for controlling output 1.
- 2. If output 1 is configured as proportional control (PB1 ≠ 0), and a value of 0 to 100.0 % is set for O1FT, then output 1 will perform failure transfer. Thereafter the value of O1FT will be used for controlling output 1.
- 3. If output 1 is configured as ON-OFF control (PB1 = 0), then output 1 will be driven OFF if O1FN selects REVR and be driven ON if O1FN selects DIRT.

Output 2 Failure Transfer, if activated, will perform:

- 1. If OUT2 selects COOL, and BPLS is selected for O1FT, then output 2 will perform bumpless transfer. Thereafter the previous averaging value of MV2 will be used for controlling output 2.
- 2. If OUT2 selects COOL, and a value of 0 to 100.0 % is set for O2FT, then output 2 will perform failure transfer. Thereafter the value of O1FT will be used for controlling output 2.

Alarm 1 Failure Transfer is activated as the controller enters failure mode. Thereafter the alarm 1 will transfer to the ON or OFF state preset by A1FT. **Exception:** If Loop Break (LB) alarm or sensor Break (SENB) alarm is configured for A1FN, the alarm 1 will be switched to ON state independent of the setting of A1FT. If Dwell Timer (TIMR) is configured for A1FN, the alarm 1 will not perform failure transfer.

Alarm 2 Failure Transfer is activated as the controller enters failure mode. Thereafter the alarm 2 will transfer to the ON or OFF state preset by A2FT.

Exception: If Loop Break (LB) alarm or sensor Break (SENB) alarm is configured for A2FN, the alarm 2 will be switched to ON state independent of the setting of A2FT. If Dwell Timer (TIMR) is configured for A2FN, the alarm 2 will not perform failure transfer.

Failure Mode Occurs as:

- 1. SB1E
- 2. SB2E
- 3. ADER

Failure Transfer of outout 1 and output 2 occurs as:

- 1. Power start (within 2.5 seconds)
- 2. Failure mode is activated
- 3. Manual mode is activated
- 4. Calibration mode is activated

Failure Transfer of alarm 1 and alarm 2 occurs as:

1. Failure mode is activated

Failure Transfer Setup:

- 1. O1FT
- 2. O2FT
- 3. A1FT
- 4. A2FT

3-18 Bumpless Transfer


The bumpless transfer function is available for output 1 and output 2 (provided that OUT2 is configured as COOL).

Bumpless Transfer is enabled by selecting BPLS for O1FT and/or O2FT and activated as one of the following cases occurs:

- 1. Power starts (within 2.5 seconds).
- 2. The controller enters the failure mode. See section 3-17 for failure mode descriptions.
- 3. The controller enters the manual mode. See section 3-23 for manual mode descriptions.
- 4. The controller enters the calibration mode. See chapter 6 for calibration mode descriptions.


As the bumpless transfer is activated, the controller will transfer to open-loop control and uses the previous averaging value of MV1 and MV2 to continue control.

Without Bumpless Transfer

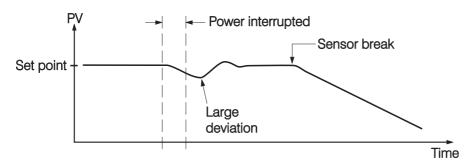

Since the hardware and software need time to be initialized, the control is abnormal as the power is recovered and results in a large disturbance to the process. During the sensor breaks, the process loses power.

With Bumpless Transfer

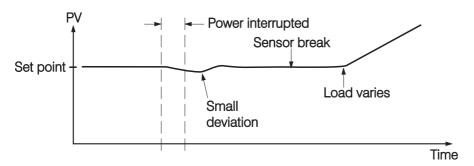

After bumpless transfer configured, the correct control variable is applied immediately as the power is recovered, the disturbance is small. During the sensor breaks, the controller continues to control by using its previous value. If the load doesn't change, the process will remain stable. Thereafter, once the load changes, the process may run away. Therefore, you should not rely on a bumpless transfer for a longer time. For fail safe reason, an additional alarm should be used to announce the operator when the system fails. For example, a Sensor Break Alarm, if configured, will switch to failure state and announces the operator to use manual control or take a proper security action when the system enters failure mode.

Bumpless Transfer Setup:

- 1.01FT = BPLS
- 2.02FT = BPLS

Bumpless Transfer Occurs as:

- 1. Power Starts (within 2.5 seconds)
- 2. Failure mode is activated
- 3. Manual mode is activated
- 4. Calibration mode is activated

Figure 3.21 Benefits of Bumpless Transfer

Warning: After system fails, never depend on bumpless transfer for a long time, otherwise it might cause a problem to the system to run away.

3-19 Self-tuning

The Self-tuning which is designed by using an **innovative algorithm** provides an alternative option for tuning the controller. It is activated as soon as SELF is selected with YES. When Self-tuning is working, the controller will change its working PID values and compares the process behavior with previous cycle. If the new PID values achieve a better control, then changing the next PID values in the same direction, otherwise, changing the next PID values in reverse direction. When an optimal condition is obtained, the optimal PID values will be stored in PB1, TI1, TD1 or PB2, TI2, TD2 which is determined by Event Input conditions. See **Section 4-1**. When Self-tuning is completed, the value of SELF will be changed from YES to NONE to disable self-tuning function.

When the Self-tuning is enabled, the control variables are tuned slowly so that the disturbance to the process is less than auto-tuning. Usually, the Self-tuning will perform successfully with no need to apply additional auto-tuning.

Exceptions: The Self-tuning will be disabled as soon as one of the following conditions occurs:

- 1. SELF is selected with NONE.
- 2. The controller is used for on-off control, that is PB=0.
- 3. The controller is used for manual reset, that is TI=0.
- 4. The controller is under loop break condition.
- 5. The controller is under failure mode (e.g. sensor break).
- 6. The controller is under manual control mode.
- 7. The controller is under sleep mode.
- 8. The controller is being calibrated.

If the self-tuning is enabled, the auto-tuning can still be used any time. The self-tuning will use the auto-tuning results for its initial values.

Benefits of Self-tuning:

- 1. Unlike auto-tuning, Self-tuning will produce less disturbance to the process.
- 2. Unlike auto-tuning, Self-tuning doesn't change control mode during tuning period. It always performs PID control.
- 3. Changing set point during Self-tuning is allowable. Hence, Self-tuning can be used for ramping set point control as well as remote set point control where the set point is changed from time to time.

Operation:

The parameter SELF is contained in setup menu. Refer to **Section 1-5** to obtain SELF for initiating a self-tuning.

Self-tune Menu

SELF

Selects

Disable Self-tuning

or

YES

Enable Self-tuning

Default SELF=NONE

Benefits of Self-tune:

- 1. Less disturbance to the process.
- Perform PID control during tuning period.
- Available for ramping set point control and remote set point control.

3-20 Auto-tuning



The auto-tuning process is performed at set point.

The process will oscillate around the set point during tuning process. Set a set point to a lower value if overshooting beyond the normal process value is likely to cause damage.

The auto-tuning is applied in cases of:

- * Initial setup for a new process
- * The set point is changed substantially from the previous auto-tuning value
- * The control result is unsatisfactory

Operation:

- 1. The system has been installed normally.
- 2. Use the default values for PID before tuning. The default values are: PB1=PB2=18.0°F TI1=TI2=100 sec, TD1=TD2=25.0 sec, Of course, you can use other reasonable values for PID before tuning according to your previous experiences. But don't use a zero value for PB1 and TI1 or PB2 and TI2, otherwise, the auto-tuning program will be disabled.
- Set the set point to a normal operating value or a lower value if overshooting beyond the normal process value is likely to cause damage.
- 5. Press of for at least 3 seconds. The upper display will begin to flash and the auto-tuning procedure is beginning.

NOTE:

Any of the ramping function, remote set point or pump function, if used, will be disabled once auto-tuning is proceeding.

Procedures:

The auto-tuning can be applied either as the process is warming up (Cold Start) or as the process has been in steady state (Warm Start). See Figure 3.22.

If the auto-tuning begins apart from the set point (Cold Start), the unit enters Warm-up cycle. As the process reaches the set point value, the unit enters waiting cycle. The waiting cycle elapses a double integral time (TI1 or TI2, dependent on the selection, see Section 4.1) then it enters a learning cycle. The double integral time is introduced to allow the process to reach a stable state. Before learning cycle, the unit performs pre-tune function with a PID control. While in learning cycle the unit performs post-tune function with an ON-OFF control. Learning cycle is used to test the characteristics of the process. The data are measured and used to determine the optimal PID values. At the end of the two successive ON-OFF cycles the PID values are obtained and automatically stored in the nonvolatile memory.

After the auto-tuning procedures are completed, the process display will cease to flash and the unit revert to PID control by using its new PID values.

During pre-tune stage the PID values will be modified if any unstable phenomenon which is caused by incorrect PID values is detected. Without pre-tune stage, like other conventional controller, the tuning result will be strongly related to the time when the auto-tuning is applied. Hence different values will be obtained every time as auto-tuning is completed without pre-tune. It is particularly true when the auto-tuning are applied by using cold start and warm start.

Applicable Conditions:
PB1 ≠0, Tl1 ≠0 if PB1,Tl1,TD1
assigned

PB2≠0, Tl2≠0, if PB2, Tl2, TD2 assigned

Pre-tune Function Advantage:Consistent tuning results can be obtained


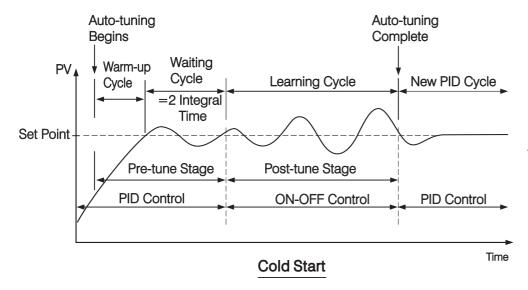


Figure 3.22 Auto-tuning Procedure

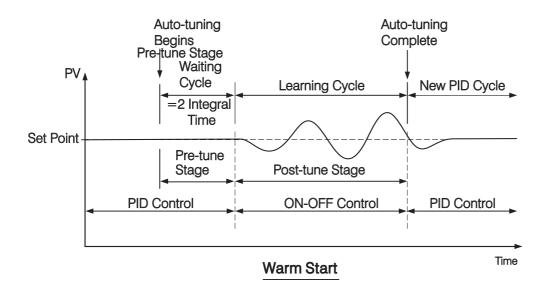

If the auto-tuning begins near the set point (warm start), the unit passes the warm-up cycle and enters the waiting cycle. Afterward the procedures are same as that described for cold start.

月上 上 ー Auto-Tuning Error

If auto-tuning fails an ATER message will appear on the upper display in cases of :

日とと一 Auto-Tuning Error

- If PB exceeds 9000 (9000 PU, 900.0 °F or 500.0 °C).
- or if TI exceeds 1000 seconds.
- or if set point is changed during auto-tuning procedure.
- or if event input state is changed so that set point value is changed.

Solutions to REE


- 1. Try auto-tuning once again.
- 2. Don't change set point value during auto-tuning procedure.
- 3. Don't change event input state during auto-tuning procedure.
- 4. Use manual tuning instead of auto-tuning. (See section 3-21).
- 5. Touch any key to reset [ALE] message.

3-21 Manual Tuning

In certain applications (very few) using both self-tuning and auto-tuning to tune a process may be inadequate for the control requirement, then you can try manual tuning.

Connect the controller to the process and perform the procedures according to the flow chart shown in the following diagram.

Figure 3.23 Manual Tuning Procedure

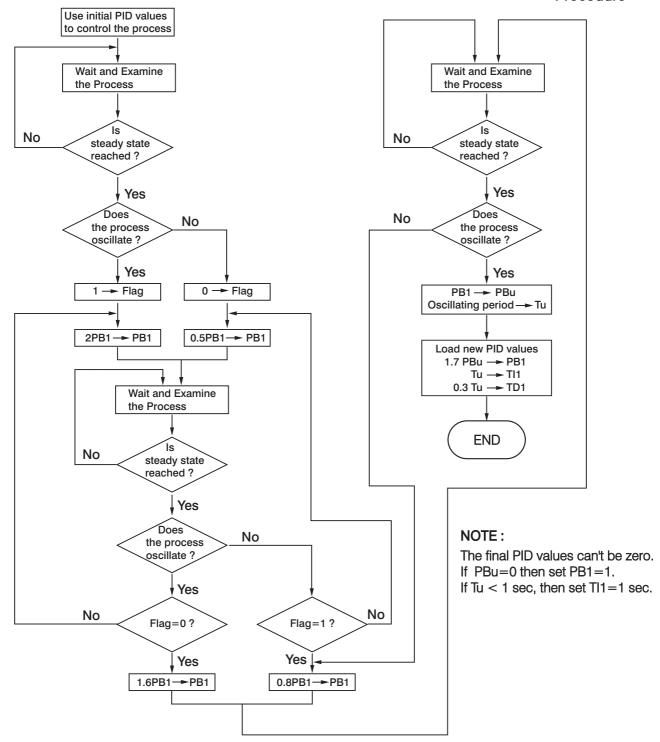

The above procedure may take a long time before reaching a new steady state since the P band was changed. This is particularly true for a slow process. So the above manual tuning procedures will take from minutes to hours to obtain optimal PID values.

The PBu is called the **Ultimate P Band** and the period of oscillation Tu is called the **Ultimate Period** in the flow chart of Figure 3.23 . When this occurs, the process is called in a **critical steady state**. Figure 3.24 shows a critical steady state occasion.

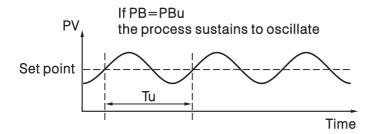


Figure 3.24 Critical Steady State

If the control performance by using above tuning is still unsatisfactory, the following rules can be applied for further adjustment of PID values:

ADJUSTMENT SEQUENCE	SYMPTOM	SOLUTION			
(d) Drawartianal Dand (D)	Slow Response	Decrease PB1 or PB2			
(1) Proportional Band (P) PB1 and/or PB2	High overshoot or Oscillations	Increase PB1 or PB2			
(O) Into aval Time (1)	Slow Response	Decrease TI1 or TI2			
(2) Integral Time (1) Til and/or Ti2	Instability or Oscillations	Increase TI1 or TI2			
(3) Derivative Time (D)	Slow Response or Oscillations	Decrease TD1 or TD2			
TD1 and/or TD2	High Overshoot	Increase TD1 or TD2			

Table 3.2 PID Adjustment Guide

Figure 3.25 shows the effects of PID adjustment on process response.

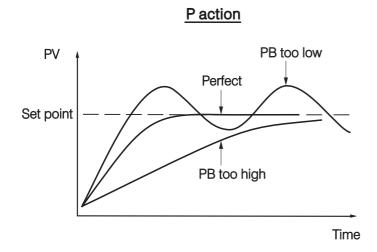


Figure 3.25 Effects of PID Adjustment



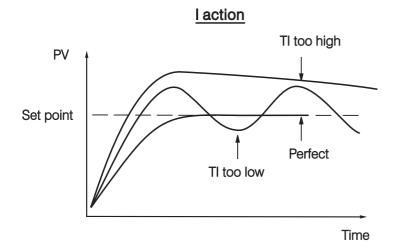


Figure 3.25 (Continued) Effects of PID Adjustment

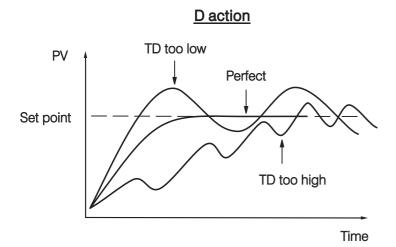


3-22 Signal Conditioner DC Power Supply

Three types of isolated DC power supply are available to supply an external transmitter or sensor. These are 20V rated at 25mA, 12V rated at 40 mA and 5V rated at 80 mA. The DC voltage is delivered to the output 2 terminals.

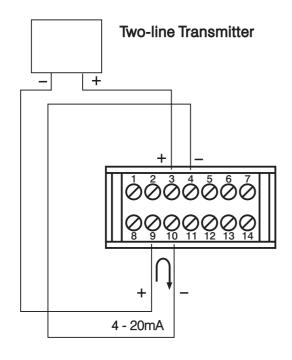

Set
OUT2= d[P5]
(DC Power Supply)

Figure 3.26 DC Power Supply Applications

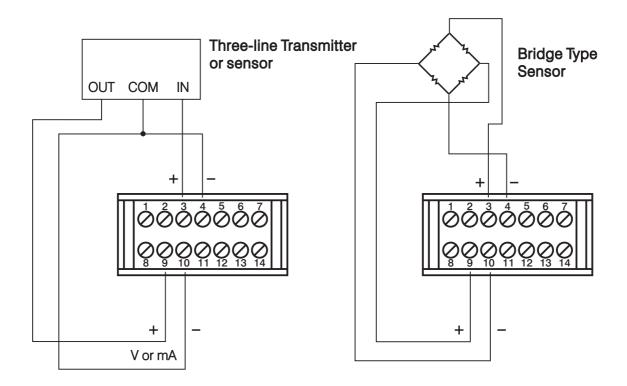

Caution:

Don't use the DC power supply beyond its rating current to avoid damage. Purchase a correct voltage to suit your external devices. See ordering code in section 1-2.

3-23 Manual Control

The manual control may be used for the following purposes:

- (1) To test the process characteristics to obtain a step response as well as an impulse response and use these data for tuning a controller.
- (2) To use manual control instead of a close loop control as the sensor fails or the controller's A-D converter fails. NOTE that a bumpless transfer can not be used for a longer time. See section 3-18.
- (3) In certain applications it is desirable to supply a process with a constant demand.

Operation:

Press \bigcirc \bigcirc until \bigcirc until \bigcirc (Hand Control) appears on the display. Press \bigcirc for 3 seconds then the upper display will begin to flash and the lower display will show \bigcirc . The controller now enters the manual control mode. Pressing \bigcirc the lower display will show \bigcirc and \bigcirc alternately where \bigcirc indicates output 1 (or heating) control variable value MV1 and \bigcirc indicates output 2 (or cooling) control variable value MV2. Now you can use up-down key to adjust the percentage values for H or C.

The controller performs open loop control as long as it stays in manual control mode. The H value is exported to output 1 (OUT1) and C value is exported to output 2 provided that OUT2 is performing cooling function (ie. OUT2 selects COOL).

Exception

If OUT1 is configured as ON-OFF control (ie. PB1=0 if PB1 is assigned or PB2=0 if PB2 is assigned by event input), the controller will never perform manual control mode.

Exit Manual Control

To press $ext{ } ext{ } ex$

<u>#38</u>**4 Means** MV1=38.4 % for OUT1 (or Heating)

MV2=7.63 % for OUT2 (or Cooling)

3-24 Display Mode

Operation

Press \bigcirc Several times until \bigcirc , \bigcirc P (Display) appears on the display. Then press \bigcirc to enter the display mode. You can select more parameters to view by pressing \bigcirc or pressing \bigcirc in reverse sequence. The system mode of the controller and its operation will remain unchanged. Entering the Display Mode, the upper display will show the parameter value and the lower display will show the parameter symbol except \bigcirc and \bigcirc shows the percentage value for output 1 and \bigcirc shows the percentage value for output 2 on the lower display while the upper display shows the current process value.

PVHI/PVLO show the historical extreme (maximum or minimum) values of the process on the upper display. The historical extreme values are saved in a nonvolatile memory even if it is unpowered. Press of for at least 6 seconds to reset both the historical values PVHI and PVLO and begin to record new peak process values.

MV1/MV2 show the process value on the upper display and H_{--} shows the percentage control value for the output 1, H_{--} shows the percentage control value for the output 2.

DV shows the difference value between process and set point (ie. PV-SV). PVHI PUR This value is used to control the output 1 and output 2. PVLO PULO PV1 shows the process value of input 1 on the upper display. MV1 H_{-} PV2 shows the process value of input 2 on the upper display. MV2 [[...] <u>8</u>9 DV PB shows the current proportional band value used for control. PUI PV1 shows the current integral time used for control. PV2 TD shows the current derivative time used for control. Since the controller is performing FUZZY control the values of PB, TI, and Pb PB TD may change from time to time. TΙ ī. CJCT shows the temperature at the cold junction, measured in °C TD Łδ independent of the unit used. CJCT [JEE] PVR Shows the changing rate of the process in °C (°F or PU) per minute. ρ_{ν_r} It may be negative if the process is going down. PVRH Pyr.H PVRH/PVRL The maximum and minimum changing rate of the process since

PVRL Puril

NOTE

value while PVRL is a negative value.

The controller will never revert to its PV/SV display from Display Mode unless you press the ເ⊗ ເ⊗ keys.

power up, are measured in °C (°F or PU) per minute. PVRH is a positive

3-25 Heater Current Monitoring

A current transformer, CT94-1, should be equipped to measure the heater current. Select CT for IN2. The input 2 signal conditioner measures the heater current during the heater is powered and the current value will remain unchanged during the heater is unpowered. The PV2 will indicate the heater current. About how to read PV2 value, please refer to **section 3-24**.

NOTES

If the heater to be measured is controlled by output 1, then CYC1 should select 1 second or longer and O1TY should use RELY, SSRD or SSR . Similarly, if the heater to be measured is controlled by output 2, then CYC2 should select 1 second or longer and O2TY should use RELY, SSRD or SSR to provide an adequate time for A to D converter to measure the signal. Since CT94-1 can detect a full-wave AC current only, a DC or half-wave AC can't be measured.

Accessory Installed:

CT94-1

Setup

IN2=CT

O1TY or O2TY=RELY, SSRD or SSR CYC1 or CYC2 ≥1 sec

Limitations

- 1. Linear output type can't be used.
- CYC1 (or CYC2) should select 1 second or longer to detect heater current reliably.
- Only full-wave AC current can be detected.

3-26 Reload Default Values

The default values listed in Table 1.4 are stored in the memory as the product leaves the factory. In certain occasions it is desirable to retain these values after the parameter values have been changed. Here is a convenient tool to reload the default values.

Operation

Press \bigcirc \bigcirc several times until \bigcirc Then press \bigcirc . The upper display will show \bigcirc . Use up-down key to select 0 to 1. If $^{\circ}$ C unit is required, select 0 for FILE and if $^{\circ}$ F unit is required, select 1 for FILE. Then Press \bigcirc for at least 3 seconds. The display will flash a moment and the default values are reloaded.

FILE 0
°C Default File

FILE 1
°F Default File

CAUTION

The procedures mentioned above will change the previous setup data. Before doing so, make sure that if it is really required.

Chapter 4 Programming the Full Function

4-1 Event Input

Refer to Section 2-10 for wiring an event input.

The Event input accepts a digital type signal. **Two** types of signal: **(1)** relay or switch contacts and **(2)** open collector pull low, can be used to switch the event input.

One of ten functions can be chosen by using $[\underline{\mathcal{E}},\underline{\mathcal{F}}_n]$ (EIFN) contained in setup menu.

NONE: Event input no function

If chosen, the event input function is disabled. The controller will use PB1, TI1 and TD1 for PID control and SP1 (or other values determined by SPMD) for the set point.

SP2: If chosen, the SP2 will replace the role of SP1 for control.

PID2: If chosen, the second PID set PB2, TI2 and TD2 will be used to replace PB1, TI1 and TD1 for control.

SP.P2: If chosen, the SP2, PB2, TI2 and TD2 will replace SP1, PB1, TI1 and TD1 for control.

NOTE: If the second PID set is chosen during **Auto-tuning** and/or **Self-tuning** procedures, the new PID values will be stored in PB2, TI2 and TD2.

RS.A1: Reset Alarm 1 as the event input is activated. However, if alarm 1 condition is still existent, the alarm 1 will be retriggered again while the event input is released.

RS.A2: Reset Alarm 2 as the event input is activated. However, if alarm 2 condition is still existent, the alarm 2 will be retriggered again while the event input is released.

R.A1.2: Reset both Alarm 1 and Alarm 2 as the event input is activated. However, if the alarm 1 and/or alarm 2 are still existent, the alarm 1 and/or alarm 2 will be triggered again while the event input is released.

The RS.A1, RS.A2 and R.A1.2 are particularly suitable to be used for a Latching and/or Latching/Holding alarms.

D.O1: Disable Output 1 as the event input is activated. The output 1 control variable MV1 is cleared to zero.

D.O2: Disable Output 2 as the event input is activated. The output 2 control variable MV2 is cleared to zero.

D.O1.2: Disable both Output 1 and Output 2 by clearing MV1 and MV2 values as soon as the event input is activated.

When any of D.O1, D.O2 or D.O1.2 is selected for EIFN, the output 1 and/or output 2 will revert to their normal conditions as soon as the event input is released.

LOCK: All parameters are locked to prevent from being changed. See **Section 4-13** for more details.

Terminals:

- 11 Event input +
- 10 Event input -

EIFN

- 0 NONE
- 1 SP2
- 2 PID2
- 3 SP.P2
- 4 RS.A1
- 5 RS.A2
- 6 R.A1.2
- 7 D.O1
- 8 D.O2
- 9 D.O1.2
- 10 LOCK

SP2F Function: Define format of SP2 value . If SP2F in the setup menu is selected with ACTU, the event input function will use SP2 value for its second set point. If SP2F is selected with DEVI, the SP1 value will be added to SP2. The sum of SP1 and SP2 (SP1+SP2) will be used by the event input function for the second set point value. In certain applications it is desirable to move second set point value with respect to set point 1 value. The DEVI function for SP2 provides a convenient way in this case.

SP2F=Format of SP2 Value ACTU: SP2 is an actual value

DEVI: SP2 is a deviation value

Modification from RS-232 to Event input:

Because of limitation of pin number, pin 11 is used for both Event input and RS-232. If you want to change function of BTC-2500 from RS-232 to event input, you must modify jumper J51 and J52 on CPU board by opening jumper J52 and shorting jumper J51. Refer to Section 2-16 for the location of jumper J51/J52.

4-2 Second Set Point

for SP2F.

In certain applications it is desirable to change the set point automatically without the need to adjust the set point. You can apply a signal to event input terminals (pin 10 and pin 11). The signal applied to event input may come from a Timer, a PLC, an Alarm Relay, a Manual Switch or other devices. Select SP2 for EIFN which is contained in setup menu.

This is available only with the case that SP1.2. MIN.R or HR.R is used for SPMD, where MIN.R and HR.R are used for the ramping function. See Section 4-4.

Application 1: A process is required to be heated at a higher temperature as soon as its pressure exceeds a certain limit. Set SPMD=SP1.2, EIFN=SP2 (or SP.P2 if the second PID is required for the higher temperature too). The pressure gauge is switched ON as it senses a higher pressure. Connect the output contacts of the pressure gauge to the event input. SP1 is set with a normal temperature and SP2 is set with a higher temperature. Choose ACTU

Application 2: An oven is required to be heated at 300 °C from eight o'clock AM to six o'clock PM. After six o'clock PM it is desirable to be maintained at 80 °C. Use a programmable 24 hours cycle timer for this purpose. The timer output is used to control event input. Set SPMD=SP1.2, and EIFN=SP2 (or SP.P2 if the second PID is required to be used for the second set point).

SP1 is set with 300 °C and SP2 is set with 80 °C. Choose ACTU for SP2F. After six o'clock PM the timer output is closed. The event input function will select SP2 (=80 °C) to control the process.

Refer to Section 4-1 for more descriptions about SP2F function.

Apply Signal To

- (11) Event input +
- (10) Event input -

Setup

EIFN choose SP2 or SP.P2

Availability

SPMD choose

SP (2) חותר

Her

Format of SP2 Value

SP2F choose

REとい Actual Value

or dE 2. Deviation Value

4-3 Second PID Set

In certain applications the process characteristics is strongly related to its process value. The BTC-2500 provides two set of PID values. When the process is changed to different set point, the PID values can be switched to another set to achieve an optimum condition.

Auto-tuning Second PID

The optimal PID values for a process may vary with its process value and set point. Hence if a process is used for a wide range of set point, dual PID values are necessary to optimize the control performance. If the first PID set is selected (event input is not applied) during auto-tuning procedure, the PID values will be stored in PB1, TI1 and TD1. Similarly, if the second PID set is selected (event input is applied while PID2 or SP.P2 is selected for EIFN) during auto-tuning, the PID values will be stored in PB2, TI2 and TD2 as soon as auto-tuning is completed.

Application 1: Programmed by Set Point

Choose SP.P2 for EIFN then both set point and PID values will be switched to another set simultaneously. The signal applied to event input may come from a Timer, a PLC, an Alarm Relay, a Manual Switch or other devices.

Application 2: Programmed by Process Value

If the process value exceeds a certain limit, 500 °C for example, it is desirable to use another PID values to optimize the control performance. You can use a process high alarm to detect the limit of the process value. Choose PV1H for A1FN, A1MD selects NORM, adjust A1SP to be equal to 500 °C, and choose PID2 for EIFN. If the temperature is higher than 500 °C, then alarm 1 is activated. The alarm 1 output is connected to event input, the PID values will change from PB1, TI1 and TD1 to PB2, TI2 and TD2.

Refer to Section 5-9 for more details.

Apply Signal To

- 11 Event input +
- 10 Event input -

Setup

EIFN choose PID2 or SP.P2

EIFN= SP.P2

EIFN= PID2

Alarm output Controls the Event input

See Section 5-9


4-4 Ramp & Dwell

Ramp

The ramping function is performed during power up as well as any time the set point is changed. Choose MINR or HRR for SPMD, the unit will perform the ramping function. The ramp rate is programmed by using RAMP which is contained in user menu.

Example without Dwell Timer

Select MINR for SPMD, IN1U selects °C, DP1 selects 1-DP, Set RAMP=10.0. SP1 is set to 200 °C initially, and changed to 100 °C after 30 minutes since power up. The starting temperature is 30 °C. After power up the process is running like the curve shown below:

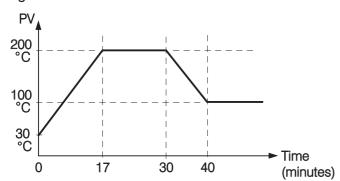


Note: When the ramp function is used, the lower display will show the current ramping value. However it will revert to show the set point value as soon as the up or down key is touched for adjustment. The ramping value is initiated to process value either power up or RAMP and /or set point are changed. Setting RAMP to zero means no ramp function at all.

Dwell

The Dwell timer can be used separately or accompanied with a Ramp. If A1FN selects TIMR, the alarm 1 will act as a dwell timer. Similarly, alarm 2 will act as a dwell timer if A2FN selects TIMR. The timer is programmed by using TIME which is contained in user menu. The Timer starts to count as soon as the process reaches its set point, and triggers an alarm as time out. Here is an example.

Example without Ramp

Select TIMR for A1FN, IN1U selects °F, DP1 selects NODP, Set TIME=30.0 SP1 is set to 400°F initially, and corrected to 200°F before the process reaches 200°F. As the process reaches set point (ie. 200°F) the timer starts to count. The TIME value can still be corrected without disturbing the Timer before time out. The TIME is changed to 40.0 after 28 minutes since the process reached its set point. The behavior of process value and alarm 1 are shown below.

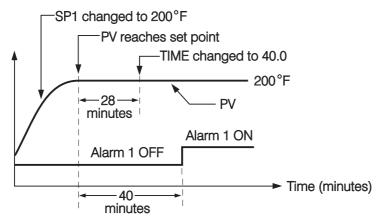

SPMD Choose

<u>הֿי הר</u> Unit / minute or <u>Hr.r</u> Unit / hour

Adjust

์ *เริกิ* RAMP

Figure 4.1 RAMP Function

A1FN or A2FN Choose

Erāc TIMER

Adjust

E, 5E TIME

Figure 4.2 Dwell Timer

Once the timer output was energized it will remain unchanged until power down or an event input programmed for resetting alarm is applied.

Note: The TIMR can't be chosen for both A1FN and A2FN simultaneously, otherwise an $\mathcal{E}_{\mathcal{F}}$ error code will produce.

Error Code.

Ramp & Dwell

A ramp may be accompanied with a dwell timer to control the process. Here is an example.

Example with Ramp & Dwell

Select HRR for SPMD, IN1U selects PU, DP1 select 2-DP, Set RAMP=60.00 A2FN selects TIMR, Set TIME=20.0 As power is applied the process value starts from 0.00 and set SP1=30.00, SP2=40.00. The timer output is used to control event input

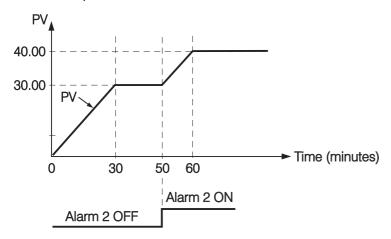


Figure 4.3 Ramp Accompanied with a Dwell Timer

4-5 Remote Set Point

SPMD selecting PV1 or PV2 will enable the BTC-2500 to accept a remote set point signal. If PV1 is selected for SPMD, the remote set point signal is sent to Input 1, and Input 2 is used for process signal input. If PV2 is selected for SPMD, the remote set point signal is sent to Input 2, and Input 1 is used for process signal. To achieve this, set the following parameters in the Setup menu.

Setup

FUNC=FULL SPMD=PV2, PVMD=PV1 or SPMD=PV1, PVMD=PV2

Case 1: Use Input 2 to accept remote set point

FUNC=FULL

IN2, IN2U, DP2, IN2L, IN2H, are set according to remote signal.

PVMD=PV1

IN1, IN1U, DP1, are set according to the process signal

IN1L, IN1H if available, are set according to the process signal

SPMD= PV2

Case 2: Use Input 1 to accept remote set point

FUNC=FULL

IN1, IN1U, DP1, IN1L, IN1H, are set according to remote signal.

PVMD=PV2

IN2, IN2U, DP2, are set according to the process signal

IN2L, IN2H if available, are set according to the process signal

SPMD= PV1

Note: If PV1 are chosen for both SPMD and PVMD, an \(\begin{array}{c} \in \begin{array}{c} \

Error Message

 $E \cap G \mid I$

E-02

4-6 Differential Control

In certain applications it is desirable to control a second process such that its process value always deviates from the first process with a constant value. To achieve this, set the following parameter in the Setup menu.

FUNC=FULL

IN1,IN1L,IN1H are set according to input 1 signal IN2,IN2L,IN2H are set according to input 2 signal IN1U, DP1, IN2U, DP2, are set according to input 1 and input 2 signal PVMD=P1-2 or P2-1 SPMD=SP1.2

The response of PV2 will be parallel to PV1 as shown in the following diagram

PV1 PV2 PV=PV1 - PV2 or PV2 - PV1 Set point=SP1 or SP2 Time

Figure 4.4 Relation between PV1 and PV2 for a Differential Control

The PV display will indicate PV1-PV2 value if P1-2 is chosen for PVMD, or PV2-PV1 value if P2-1 is chosen for PVMD. If you need PV1 or PV2 to be displayed instead of PV, you can use the Display Mode to select PV1 or PV2 to be viewed. See **Section 3-24**.

Error Messages

If PVMD selects P1-2 or P2-1, while SPMD selects PV1 or PV2, an *Er II* Error Code will appear.

In this case the signals used for input 1 and input 2 should be the same unit and same decimal point, that is, IN1U=IN2U, DP1=DP2, otherwise $\boxed{\mathcal{E} r \mathcal{G} \mathcal{G}}$ Error Code will appear.

Error Message

Setup

PVMD=P1-2

SPMD=SP1.2

or PVMD=P2-1

<u>E-03</u>

4-7 Output Power Limits

In certain system the heater (or cooler) is over-designed such that the process is too heavily heated or cooled. To avoid an excessive overshoot and/or undershoot you can use the Power Limit function.

Output 1 power limit PL1 is contained in User Menu. If output 2 is not used for cooling (that is COOL is not selected for OUT2), then PL2 is **hidden**. If the controller is used for ON-OFF control, then both PL1 and PL2 are **hidden**.

Operation:

Press of for 3 seconds, then press of several times to reach PL1 and PL2. The PL1 and PL2 are adjusted by using up-down keys with range 0 - 100%.

Example:

OUT2=COOL, PB1=10.0 °C, CPB=50, PL1=50, PL2=80 The output 1 and output 2 will act as following curves:


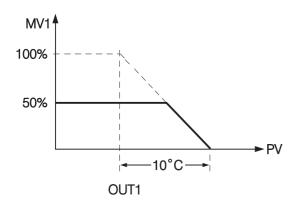


Figure 4.5 Power Limit Function

Menu

PL1

PL2

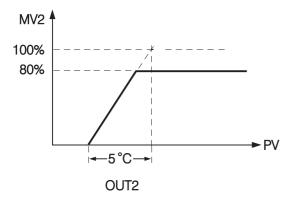

NOTE:

The adjusting range of MV1 (H) and MV2 (C) for manual control and/or failure transfer are not limited by PL1 and PL2.

4-8 Data Communication

Two types of interface are available for Data Communication. These are RS-485 and RS-232 interface. Since RS-485 uses a differential architecture to drive and sense signal instead of a single ended architecture which is used for RS-232, RS-485 is less sensitive to the noise and suitable for a longer distance communication. RS-485 can communicate without error over 1 km distance while RS-232 is not recommended for a distance over 20 meters.

Using a PC for data communication is the most economic way. The signal is transmitted and received through the PC communication Port (generally RS-232). Since a standard PC can't support RS-485 port, a network adaptor (such as SNA10A, SNA10B) has to be used to convert RS-485 to RS-232 for a PC if RS-485 is required for the data communication. But there is no need to be sad. Many RS-485 units (up to 247 units) can be connected to one RS-232 port; therefore a PC with 4 comm ports can communicate with 988 units. It is quite economic.

RS-485 Benefits:

Long distance Multi-units

RS-232 Benefits:

Direct Connection to a PC

Order BTC-2500-XXXXX1 for RS-485

Order BTC-2500-XXXXX2 for RS-232

Setup

Enters the setup menu.

Select FULL (Full function) for FUNC.

Select 485 for COMM if RS-485 is required, or 232 if RS-232 is required. Select RTU (ie. Modbus protocol RTU mode) for PROT. Set individual address as for those units which are connected to the same port.

Set the Baud Rate (BAUD), Data Bit (DATA), Parity Bit (PARI) and Stop Bit (STOP) such that these values are accordant with PC setup conditions.

NOTE: If the BTC-2500 is configured for RS-232 communication, the EI (Event Input) and input 2 are disconnected internally. The unit can no longer perform event input function (EIFN) and other input 2 functions.

When you insert a RS-232 module (CM94-2) to the connectors on CPU board (C250), you also need to modify the jumper J51 and J52 according to **Section 2-16**.

If you use a conventional 9-pin RS-232 cable instead of CC94-1, the cable should be modified for proper operation of RS-232 communication according to **Section 2-16**.

RS-485 Setup

FUNC=FULL
COMM=485
PROT=RTU
ADDR=Address
BAUD=Baud Rate
DATA=Data Bit Count
PARI=Parity Bit
STOP=Stop Bit Count

RS-485 Terminals

(12) TX1

(13) TX2

RS-232 Setup

FUNC=FULL
COMM=232
PROT=RTU
ADDR=Address
BAUD=Baud Rate
DATA=Data Bit Count
PARI=Parity Bit
STOP=Stop Bit Count

RS-232 Terminals

(12) TX1

(13) TX2

(11) COM

4-9 Analog Retransmission

The Analog Retransmission is available for model number BTC-2500-XXXXXN Where N=3,4 or 5. See Ordering Code in section 1-2.

Setup

Select FULL for FUNC in the setup menu.

COMM selects a correct output signal which should be accordant with the retransmission option used. Five types of retransmission output are available. These are: 4-20 mA, 0-20mA, 0-5V, 1-5V and 0-10V. There are 8 types of parameters that can be retransmitted according to the Analog Function (AOFN) selected. These are: PV1, PV2, PV1-PV2, PV2-PV1, SV, MV1, MV2 and PV-SV. Refer to Table 1.4 for a complete description. AOLO selects a value corresponding to output zero and AOHI selects a value corresponding to output SPAN.

How to Determine Output Signal:

AOLO and AOHI are set to map to output signal LOW SL (e.g. 4mA) and output signal High SH (e.g. 20mA) respectively. The analog output signal AOS corresponding to an arbitrary value of parameter AOV is determined by the following curve.

Output Signal SH AOS SL Parameter Value AOLO AOV AOHI

Figure 4.6 Conversion Curve for Retransmission

Setup Menu

Funt FUNC

Rosen AOFN

Rolo AOLO

Ro.H. AOHI

Terminals

(12) AO+

(13) AO -

Formula: AOS=SL+(AOV-AOLO) SH-SL AOHI-AOLO

Notes:

The setup values used for AOHI and AOLO must not be equal, otherwise, incorrect value will happen. However, AOHI can be set either higher or lower than AOLO. If AOHI is set higher than AOLO it could result in a direct conversion. If AOHI is set lower than AOLO it could result in a reverse conversion.

Example

A control uses 4-20 mA analog output to retransmit difference value between input 1 and input 2 (PV1 – PV2). It is required that if the difference value is 100, 4mA will be exported, and if the difference value is 100, 20mA will be exported. Make the following Setup for BTC-2500: IN1U=PU, DP1=NODP, IN2U=PU, DP2=NODP, FUNC=FULL, COMM=4-20, AOFN=P1-2, AOLO=-100, AOHI=100

NOTES

AOHI≠AOLO AOHI>AOLO: Direct Conversion

AOHI<AOLO: Reverse Conversion

4-10 Digital Filter

In certain application the process value is too unstable to be read. To improve this a programmable low pass filter incorporated in the BTC-2500 can be used. This is a first order filter with time constant specified by FILT parameter which is contained in setup menu. The default value of FILT is 0.5 sec. before shipping. Adjust FILT to change the time constant from 0 to 60 seconds. 0 second represents no filter is applied to the input signal. The filter is characterized by the following diagram.

Menu

F. LE FILT

Filter is used to stabilize the process display.

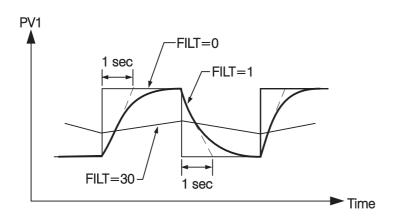


Figure 4.7
Filter Characteristics

Note

The Filter is available only for PV1, and is performed for the displayed value only. The controller is designed to use unfiltered signal for control even if Filter is applied. A lagged (filtered) signal, if used for control, may produce an unstable process.

4-11 Sleep Mode

To Enter Sleep Mode:

FUNC selects FULL to provide full function.

SLEP selects YES to enable the sleep mode.

Press ☐ ☑ for 3 seconds, the unit will enter its sleep mode.

During sleep mode:

- (1) Shut off all display except a decimal point which is lit periodically.
- (2) Shut off all outputs and alarms.

To Exit Sleep Mode:

- (2) Disconnect the power.

Sleep Function can be used to replace a power switch to reduce the system cost.

Default: SLEP=NONE, Sleep mode is disabled.

Note: If the Sleep mode is not required by your system, the SLEP should select NONE to disable sleep mode against undesirable occurrence.

Sleep Mode Features:

Shut off display Shut off outputs Green Power Replace Power Switch

Setup Menu FUNC=FULL SLEP=YES

4-12 Pump Control

Pump Control function is one of the unique features of BTC-2500. Using this function the pressure in a process can be controlled excellently. The pressure in a process is commonly generated by a pump driven by a variable speed motor. The complete system has the following **characteristics** which affects the control behavior: 1, The system is very noisy. 2, The pressure is changed very rapidly. 3, The pump characteristics is ultra nonlinear with respect to its speed. 4, The pump can't generate any more pressure as its speed is lower than half of its rating speed. 5, An ordinary pump may slowly lose the pressure even if the valves are completely closed.

PUMP: A Cost Effective yet Perfect Solution

Obviously a conventional controller can't fulfill the conditions mentioned above. Only the superior noise rejection capability in addition to the fast sampling rate owned by BTC-2500 can realize such application. To achieve this, set the following parameters in the setup menu:

FUNC=FULL EIFN=NONE PVMD=PV1 FILT=0.5 SELF=NONE SPMD=PUMP SP2F=DEVI Key menu SPMD SP2F REFC SP2

and program the following parameters in the user menu:

REFC= Reference constant SP2= A negative value is added to SP1 to obtain the set point for idle state

Since the pump can't produce any more pressure at lower speed, the pump may not stop running even if the pressure has reached the set point. If this happens, the pump will be over worn out and waste additional power. To avoid this, the BTC-2500 provides a **Reference Constant REFC** in the user menu. If PUMP is selected for SPMD, the controller will periodically test the process by using this reference constant after the pressure has reached its set point. If the test shows that the pressure is still consumed by the process, the controller will continue to supply appropriate power to the pump. If the test shows that the pressure is not consumed by the process, the controller will gradually decrease the power to the pump until the pump stops running. As this happens, the controller enters **idle state**. The idle state will use a lower set point which is obtained by adding SP2 to SP1 until the pressure falls below this set point. The idle state is provided for the purpose of preventing the pump from been restarted too frequently. The value of SP2 should be **negative** to ensure a correct function.

The pump functions are summarized as follows:

- If the process is demanding material (ie. lose pressure), the controller will precisely control the pressure at set point.
- 2. If the process no longer consumes material, the controller will shut off the pump as long as possible.
- 3. The controller will restart the pump to control the pressure at set point as soon as the material is demanded again while the pressure falls below a predetermined value (ie. SP1+SP2).

Pump Control Features:

- 1. Minimum oscillation of pressure
- 2. Rapidly stabilized
- 3. Guaranteed pump stop
- 4. Programmable pump stopping interval

Programming Guide:

- Perform auto-tuning to the system under such condition that the material (ie. pressure) is exhausted at typical rate. A typical value for PB1 is about 10 Kg/cm², TI1 is about 1 second, TD1 is about 0.2 second.
- 2. If the process oscillates around set point after auto-tuning, then increase PB1 until the process can be stabilized at set point. The typical value of PB1 is about half to two times of the range of pressure sensor.
- 3. Increase FILT (Filter) can further reduce oscillation amplitude. But a value of FILT higher than 5 (seconds) is not recommended. A typical value for FILT is 0.5 or 1.
- 4. Close the valves and examine that if the controller can shut off the pump each time. The value of REFC is adjusted as small as possible so that the controller can shut off the pump each time when all the valves are closed. A typical value for REFC is between 3 and 5.
- 5. An ordinary pump may slowly lose the pressure even if the valves are completely closed. Adjust SP2 according to the rule that a more negative value of SP2 will allow the pump to be shut off for a longer time as the valves are closed. A typical value for SP2 is about -0.50 Kg/cm².

An Example is given in section 5-1 for pump control.

4-13 Remote Lockout

The parameters can be locked to prevent from being changed by using either Hardware Lockout (see Section 1-3) or Remote Lockout or both. If you need the parameters to be locked by using an external switch (remote lockout function), then connect a switch to terminals 10 and 11 (see Section 2-10), and choose LOCK for EIFN (see Section 4-1).

If remote lockout is configured, all parameters will be locked as the external switch is closed. When the switch is left open, the lockout condition is determined by internal DIP switch (hardware lockout, see **Section 1-3**).

Hardware Lockout: Can be used only during initial setup.

Remote Lockout: Can be used any time.

Remote Lockout:


- 1.Connect external switch to terminal (10) and (11).
- 2. Set LOCK for EIFN
- 3. Lock all parameters

Chapter 5 Applications

5-1 Pump / Pressure Control

A regulated water supply system is widely used in residence, water plant, chemical plant, electrical plant, semiconductor plant ... etc. Taking the advantage of PUMP function, the BTC-2500 can be used for these applications to achieve an **economical** yet **versatile** solution. Here is an example:

PUMP: A Cost Effective vet Perfect Solution

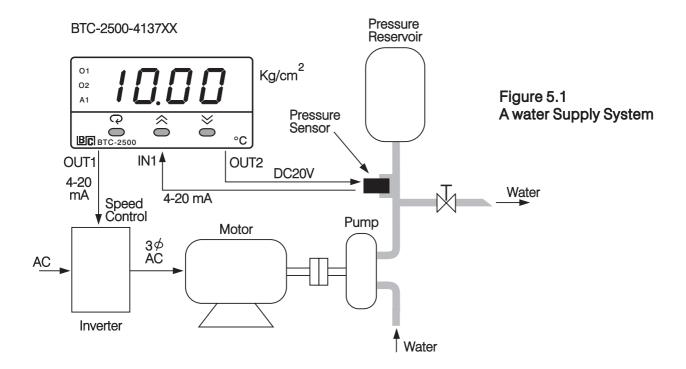

The water pressure is required to be controlled at 10 Kg/cm², to achieve this, the following devices are used for this example:

Inverter: To supply a variable frequency AC voltage to the motor.

Motor: A 3- ϕ induction motor. **Pump**: An economical type

Pressure Sensor: A three-wire or two-wire type pressure transducer with 0-20

Kg/cm² range.

Pressure Reservoir: Providing a smoother pressure for the system.

BTC-2500-4137XX: Order a BTC-2500 with standard input, 4-20 mA output 1, 20V DC output 2 for sensor power.

Set the following parameters in the setup menu:

FUNC=FULL COMM: optional

IN1 = 4-20

IN1U=PU

DP1=2-DP

IN1L=0

IN1H=20.00

IN2=NONE

OUT1=REVR

O1TY=4-20

O1FT=0

OUT2=DCPS

A1FN: optional

EIFN=NONE

PVMD=PV1

FILT=1

SELF=NONE

SLEP=NONE

SPMD=PUMP

SP1L=5.00

SP1H=15.00

SP2F=DEVI

Adjust the following parameters in the user menu:

A1SP: optional

REFC=3

PB1=10.00

TI1=1

TD1=0.2

SP2 = -0.50

PL1=100

Also refer to Section 4-12 for more details.

Key menu:

SPMD

SP2F

REFC

SP2

5-2 Variable Period Full Wave SSR (VPFW SSR)

VPFW SSR is a variable period full wave solid-state relay. It can provide a zero cross output with superior controllability compared to a conventional SSR with a fixed time base. The block diagram of VPFW SSR is shown as follows:

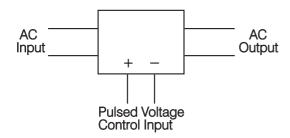


Figure 5.2 Block Diagram of VPFW SSR

Unlike a conventional SSR, the VPFW SSR always give the output an even number of half cycles (full wave) as shown in the following diagram.

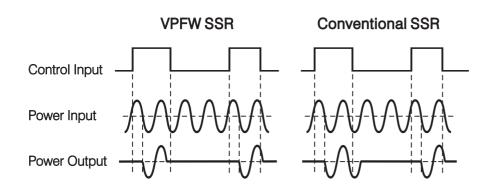


Figure 5.3 VPFW SSR vs. Conventional SSR

The VPFW switches the load without DC current, hence minimize the harmonic current and stress on the load. The load life is prolonged.

As the duty cycle (ie. output power level) of the control input is small, the off period will be extended to keep the output resolution so that the conversion error is minimized. As low as 0.1% of timing error can be achieved. Hence, VPFW SSR is particularly suitable for a smoother control.

NOTES:

- 1.The VPFW SSR can be used to drive resistant load and some types of inductance load such as relay, contactor, magnetic switch, solenoid valve etc. However, it can not drive Motor and Capacitance Load.
- Only AC power can supply VPFW SSR, otherwise, it will not operate properly.

The advantages of VPFW SSR over conventional SSR are summarized as following table:

Functions	VPFW SSR	Conventional SSR
Zero Cross Switching	Yes	Yes
Time Base	Variable	Fixed
Proportional Timing Error	±0.1%	±1% (for 1 sec. cycle time)
Control Achievement	Excellent	Good
Half on Cycles	Even	Even and Odd
DC Load Current	Zero	Nonzero
Harmonic Current	Low	Higher
Stress on the Load	Low	Higher
Load (Heater) Life	Longer	Shorter

Table 5.1 Function Comparison between Conventional SSR and VPFW SSR

The output 1 and output 2 of BTC-2500 can be connected to VPFW SSR directly provided that a pulsed voltage drive output (BTC-2500-XX2XXX or BTC-2500-XXX2XX) is ordered.

Here is an example:


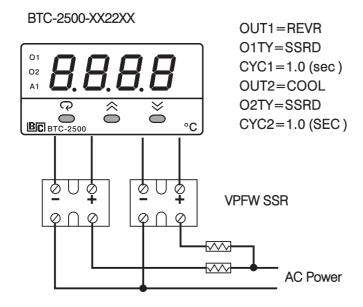


Figure 5.4 VPFW SSR Application Example

Three phase VPFW SSR's are also available upon request.

5-3 Heat Only Control

An oven is designed to dry the products at 150 °C for 30 minutes and then stay unpowered for another batch. A BTC-2500 equipped with **dwell timer** is used for this purpose. The system diagram is shown as follows:

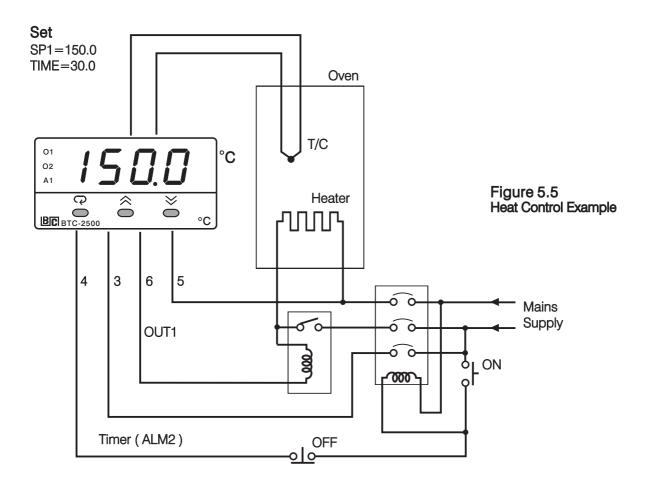

To achieve this function set the following parameters in the setup menu.

FUNC=BASC (Basic function)

 $IN1 = K_TC$

IN1U= °C

DP1=1 DP

OUT1=REVR

O1TY=RELY

CYC1=18.0

O1FT=BPLS

A2FN=TIMR

A2FT=ON

SELF=NONE

Auto-Tuning is performed at 150 °C for a new oven.

5-4 Cool Only Control

A BTC-2500 is used to control a refrigerator at temperature below 0 °C. To avoid the set point adjustment beyond the interesting range, SP1L is set at -10 °C and SP1H is set at 0 °C. The temperature is lower than the ambient, a cooling action is required. Hence select DIRT for OUT1. Since output 1 is used to drive a magnetic contactor, O1TY selects RELY. A small temperature oscillation is tolerable, hence use ON-OFF control to reduce the over-all cost. To achieve ON-OFF control, PB1 is set with zero and O1HY is set at 0.1 °C.


ON-OFF control Direct Control Action

Setup Summary:

FUNC=BASC IN1=PT.DN IN1U=°C DP1=1-DP OUT1=DIRT O1TY=RELY SP1L=-10°C SP1H=0°C

User Menu:

PB1=0 (°C) O1HY=0.1 (°C)

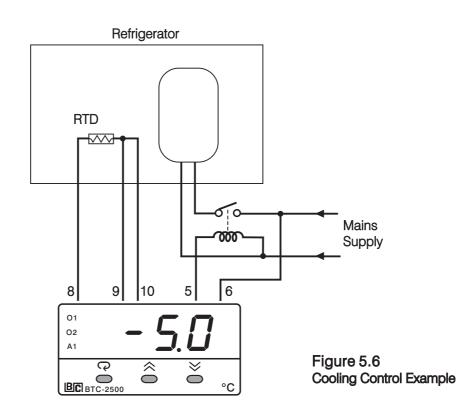

UM25001D 87

5-5 Heat-Cool Control

An injection mold required to be controlled at 120 $^{\circ}$ C to ensure a consistent quality for the parts. An oil pipe is buried in the mold. Since plastics is injected at higher temperature (e.g. 250 $^{\circ}$ C), the circulation oil needs to be cooled as its temperature rises. Here is an example:

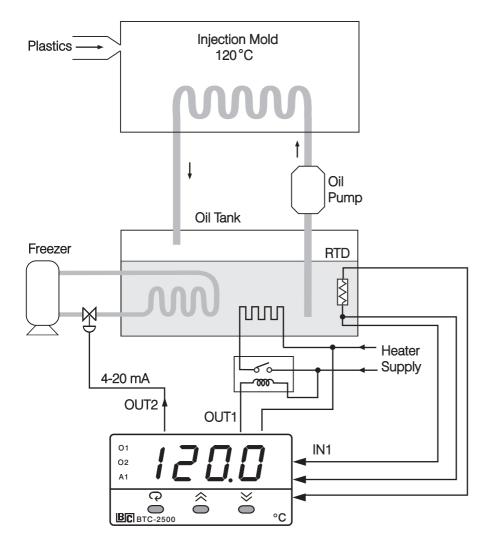


Figure 5.7 Heat-Cool Control Example

The PID Heat-Cool is used for the above example.

To achieve this set the following parameters in the Setup Menu:

FUNC FUNC=BASC IN1 IN1=PT.DN IN1U IN1U=°C DP1 DP1=1-DP OUT1 OUT1=REVR O1TY O1TY=RELY CYC1 CYC1=18.0 (sec) O1FT O1FT=BPLS OUT2 O2TY OUT2=COOL O2FT O2TY=4-20 **SELF** O2FT=BPLS SP1 SELF=STAR

Adjust SP1 at 120.0°C, CPB at 125 (%) and DB at -4.0 (%).

Apply **Auto-tuning** at 120 °C for a new system to get an optimal PID values. See **Section 3-20**.

Adjustment of CPB is related to the cooling media used. If water is used as cooling media instead of oil, the CPB is set at 250 (%). If air is used as cooling media instead of oil, the CPB is set at 100 (%).

Adjustment of DB is dependent on the system requirements. More positive value of DB will prevent unwanted cooling action, but will increase the temperature overshoot, while more negative value of DB will achieve less temperature overshoot, but will increase unwanted cooling action.

UM25001D 89

Key Menu

CPB

DB

5-6 Ramp & Dwell

Example 1: Temperature cycling Chamber

A chamber is used to test the temperature cycling effect on the personal computers. An external cycle timer is used to control the event input for switching the set point. The products under test are required to stay at 60 $^{\circ}$ C for 1 hour and -10 $^{\circ}$ C for 30 minutes. The transition interval between high-low temperature is required to be 5 minutes. Make the following setup:

EIFN=SP.P2
A1FN=TIMR
OUT1=REVR, Relay Output
OUT2=COOL, 4-20mA Output
SPMD=MINR
IN1U=°C
DP1=1-DP

The circuit diagram and its temperature profile are shown below:

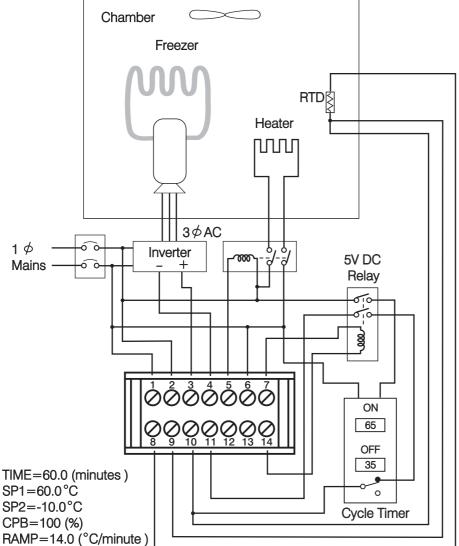


Figure 5.8 A Temperature Cycling Chamber


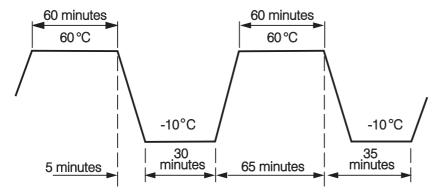


Figure 5.9
Temperature Profile of Chamber

BTC-2500 provides 4-20 mA signal to control the speed of the Inverter.SP.P2 being chosen for EIFN is for the purpose of accomplishing a dual PID control. You can perform auto-tuning twice at SP1 and SP2 for initial setup to the dual PID values. Refer **sections 3-20** and **4-3**.

Example 2: Programmable Bread Baking Oven

Bread is baked in batches. A ramp is incorporated to control the thermal gradient to suit for making the bread. A dwell timer is used to shut off the oven power and announce the baker. The system is configured as shown in the following diagram.

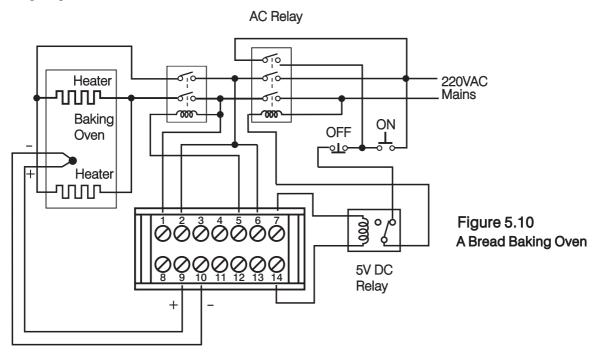

Push ON switch to start a batch. The temperature will rise with a ramp rate determined by RAMP value. Bread is baked with the set point temperature for a definite time which is programmed by TIME value, and then the power is shut off. The temperature profile is shown in the following Figure.


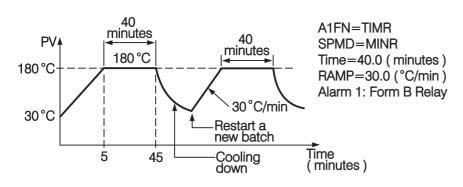


Figure 5.11 Temperature Profile of Baking Oven

5-7 Remote Set Point

An on-line multiple zone oven is used to dry paint. Since heat demand is various at different position in the production line, multiple zones with individual controls should be used to ensure a consistent temperature profile. If you order a BTC-2500 with a retransmission unit for the master controller, and retransmit its set point to the input 2 of the rest of slave controllers, each zone will be synchronized with the same temperature. Here is an example:

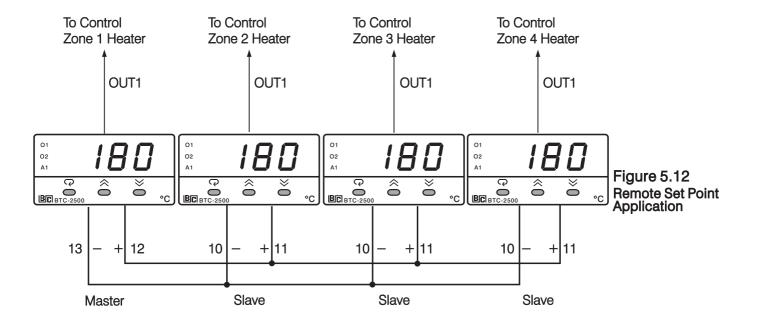

Set the following parameters in the setup menu:

For master unit	For slave units
FUNC= FULL	FUNC= FULL
COMM= 1-5 V	IN2 = 1 - 5 V
AOLO=0°C	IN2L= 0 °C
AOHI = 300 °C	IN2H= 300°C
PVMD= PV1	PVMD= PV1
SPMD= SP1.2	SPMD= PV2

Note: AOHI and IN2H should be set with values higher than the set point range used.

5-8 Differential Control

In certain applications it is desirable to control a second process such that its process value always deviates from the first process with a constant value. Water tank 1 is 5.12 meters height and water tank 2 level is desirable to be maintained at 1 meter lower than tank 1 level.

Set the following parameters in the setup menu:

FUNC= FULL

IN1, IN1L, IN1H: According to Sensor 1 signal

IN1U = PUDP1 = 2-DP

IN2, IN2L, IN2H: According to Sensor 2 signal (Current signal has to be converted to a voltage signal through a shunt resistor before sending to the controller input)

IN2U=PU

DP2= 2-DP

OUT1 = REVR

O1TY= 4 20

PVMD=P1-2

SPMD=SP1.2


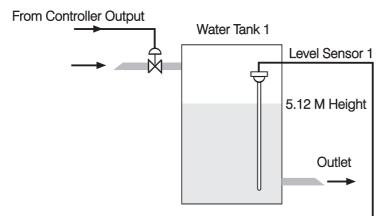


Figure 5.13 Differential Control Example

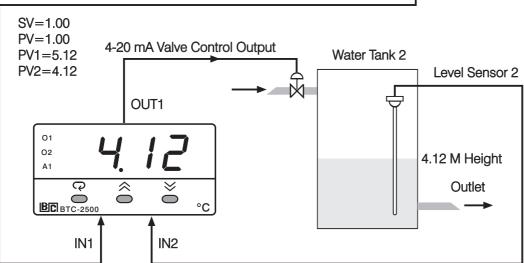

Adjust SP1(here is 1.00) to control the difference between PV1 and PV2. Choosing P1-2 for PVMD, the PV display will show the difference value (PV1-PV2) between PV1 and PV2, and this value will be stabilized to the set point (here is 1.00).

If you need PV1 or PV2 instead of PV, you can use the Display Mode to select PV1 or PV2 to be displayed. See **Section 3-24**. The above diagram indicates PV2 instead of PV.

5-9 Dual Set Point / PID

The BTC-2500 will switch between the two PID sets based on the process value, the set point or either of the event input. As the control ramps up to the higher process value, the process characteristics changes. As this happens, the original PID values are no longer valid. To achieve optimal control over the entire range, a second PID set is used.

Example 1: Single Set Point / Dual PID

A heat treating furnace is used over the range of 400 °C to 1200 °C.

(1) Set the following parameters in the Setup menu:

FUNC= FULL

A1FN= PV1H

A1MD= NORM

EIFN= PID2

PVMD= PV1

SPMD= MINR

(2) Adjust the following parameters in the User menu:

A1SP= 800°C

A1HY= 1.0°C


PL1= 100 (%)

RAMP: According to the process requirement

SP1: According to the process requirement

(3) Tune first PID set at SP1=500°C and tune second PID set at SP1=1100°C, or set the proper values for PB1, TI1, TD1, PB2, TI2 and TD2 directly according to the previous records to eliminate auto-tuning sequence.

The circuit diagram and its temperature profile are shown as follows:

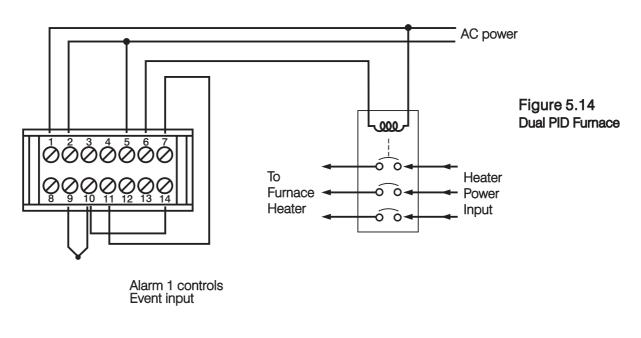

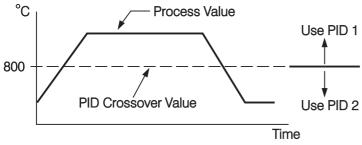


Figure 5.15
Dual PID Crossover

Example 2: Dual Set Point / PID

A heat treating furnace is required to harden the mold at a high temperature ($1000\,^\circ\text{C}$) for 30 minutes, then the mold is cooled down with a programmable ramp ($20\,^\circ\text{C}$ / minute) toward a lower set point ($200\,^\circ\text{C}$). Use the dual set point / PID and ramp / dwell functions for this application.

(1) Set the following parameters in the Setup menu:

FUNC= FULL A1FN= TIMR EIFN= SP.P2 PVMD= PV1 SPMD= MINR

(2) Adjust the following parameters in the User menu:

TIME= 30.0 (Minutes)
RAMP= 20.0 (°C/Minute)
SP1= 1000°C
SP2= 200°C
PL1= 100 (%)

(3) Set the proper values for PB1, TI1, TD1,PB2, TI2 and TD2 directly according to the previous records. For a new system tune first PID set at SP1=800 °C and tune second PID set at SP2=400 °C.

The circuit diagram is same as shown in Figure 5.14. The temperature profile is shown as below:


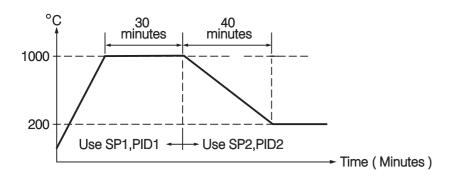


Figure 5.16
Dual Set Point /PID Profile

5-10 RS-485

A **tile** making plant has 5 production lines. Each production line is equipped with 16 units of BTC-2500 to control the temperature for the **kiln**. They are desirable to program the controllers and monitor the process in the control room for the purpose of improving the quality and productivity. A cost effective solution for the above application is to use 80 units of **BTC-2500-XXXXX1** plus a **SNA10B Smart Network Adaptor** and **BC-Net** PC based software for this purpose.

The system is installed as shown in the following diagram.

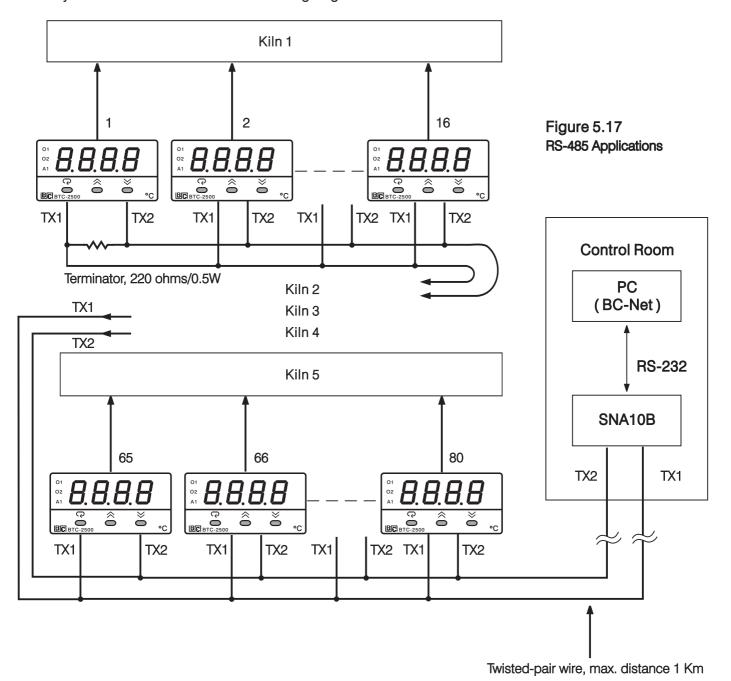

Setup Setup Menu Enters the setup mode to configure each BTC-2500. Choose FULL for FUNC, **FUNC** 485 for COMM, RTU for PROT and select an unequal address (ADDR) for each **COMM** unit. Use the same values of BAUD, DATA, PARI and STOP for BTC-2500's, **PROT** SNA10B and BC-Net. Also refer to Section 2-15 and Section 4-8. **ADDR** Taking the advantage of BC-Net software, the operator can monitor the **BAUD** process on the PC screen, program the set point as well as other control **DATA** parameters such as PID values, down load the ramp and soak profile to the **PARI** controllers, execute the manual control or trigger an auto-tuning.....etc., and **STOP** print out a report as required. The historical data can be saved in the floppy

disc, hard disc or a CD for permanent storage purpose.

5-11 RS-232

Suppose a chemical experiment is performed in a laboratory. And an engineer desires to find out the relation between the chemical reaction and temperature. He uses a BTC-2500 to control the temperature of the solution under test. A testing report containing the relation between the concentration and temperature is particularly interested.

For a single unit application it is adequate to order a BTC-2500-xxxx2 with RS-232 communication and a BC-Net software. By using the BC-Net software the temperature data can be viewed and stored in a file. The user can program the temperature as well as other control parameters such as PID values. He can setup the controller, down load a ramp and soak profile, also execute the manual control or auto-tuning procedure etc. The results can be printed out or stored in a file for the future reference.

Refer to Section 2-16 for installation and Section 4-8 for setup procedure.

Setup Menu


FUNC COMM PROT ADDR BAUD DATA PARI STOP

5-12 Retransmit

An air-conditioned room uses two units of BTC-2500 to control its temperature and humidity. The temperature and humidity are required to be recorded on a chart recorder. The interesting ranges for these two quantity are: $20\,^{\circ}$ C to $30\,^{\circ}$ C and 40% RH to 60% RH. The recorder inputs accept 0 - 5 V signal.

To achieve this, set the following parameters in the Setup menu.

UNIT 1:	UNIT 2:
FUNC= FULL	FUNC= FULL
COMM= 0 - 5V	COMM= 0 - 5V
AOFN=PV1	AOFN=PV1
AOLO=20.0 (°C)	AOLO=40.0 (%)
AOHI= 30.0 (°C)	AOHI= 60.0 (%)
IN1= PTDN	IN1 = 0 - 1 V (According to humidity sensor)
IN1U=°C	IN1U= PU
DP1= 1-DP	DP1= 1-DP

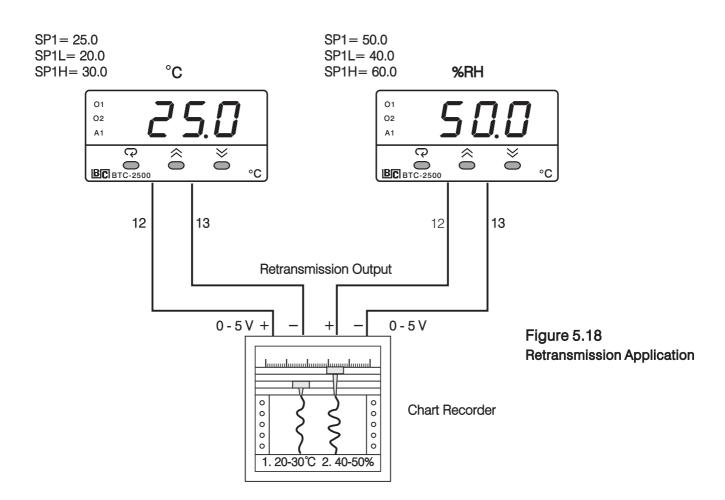

SP1L and SP1H are used to limit the adjustment range of set point.

Chapter 6 Calibration



/in Do not proceed through this section unless there is a definite need to re-calibrate the controller. Otherwise, all previous calibration data will be lost. Do not attempt recalibration unless you have appropriate calibration equipment. If calibration data is lost, you will need to return the controller to your supplier who may charge you a service fee to re-calibrate the controller.



Entering calibration mode will break the control loop. Make sure that if the system is allowable to apply calibration mode.

Equipments needed before calibration:

- (1) A high accuracy calibrator (Fluke 5520A Calibrator recommended) with following functions:
 - 0 100 mV millivolt source with ±0.005 % accuracy
 - 0 10 V voltage source with ±0.005 % accuracy
 - 0 20 mA current source with ±0.005 % accuracy
 - 0 300 ohm resistant source with ±0.005 % accuracy
- (2) A test chamber providing 25 °C 50 °C temperature range
- (3) A switching network (SW6400, optional for automatic calibration)
- (4) A calibration fixture equipped with programming units (optional for automatic calibration)
- (5) A PC installed with calibration software BC-Net and Smart Network Adaptor SNA10B (optional for automatic calibration)

The calibration procedures described in the following section are a step by step manual procedures.

Since it needs 30 minutes to warm up an unit before calibration, calibrating the unit one by one is quite inefficient. An automatic calibration system for small quantity as well as for unlimited quantity is available upon request.

Manual Calibration Procedures

- * Perform step 1 to enter calibration mode.
- Step 1. Set the lockout DIP switch to the unlocked condition (both switches 3 and 4 are off).

Press both scroll and down keys and release them quickly. The operation mode menu will appear on the display. Repeat the operation several times until [[R]], appear on the display.

Press scroll key for at least 3 seconds, the display will show $\fbox{830}$ and the unit enters calibration mode. The output 1 and output 2 use their failure transfer values to control.

- * Perform step 2 to calibrate **Zero** of A to D converter and step 3 to calibrate **gain** of A to D converter. The DIP switch is set for T/C input.
- Step 2. Short terminals 9 and 10, then press scroll key for at least 3 seconds. The display will blink a moment and a new value is obtained.


 Otherwise, if the display didn't blink or if the obtained value is equal to -360 or 360, then the calibration fails.



- Step 3. Press scroll key until the display shows Roll. Send a 60mV signal to terminals 9 and 10 in correct polarity. Press scroll key for at least 3 seconds. The display will blink a moment and a new value is obtained. Otherwise, if the display didn't blink or if the obtained value is equal to -199.9 or 199.9, then the calibration fails.
 - * Perform step 4 to calibrate voltage function (if required) for input 1.
- Step 4. Change the DIP switch for the Voltage input. Press scroll key until the display shows Send a 10 V signal to terminals 9 and 10 in correct polarity. Press scroll key for at least 3 seconds. The display will blink a moment and a new value is obtained. Otherwise, if the display didn't blink or if the obtained value is equal to -199.9 or 199.9, then the calibration fails.



- * Perform both steps 5 and 6 to calibrate RTD function (if required) for input 1.
- Step 5. Change the DIP switch for the RTD input. Press scroll key until the display shows <u>FFF. I</u>. Send a 100 ohms signal to terminals 8, 9 and 10 according to the connection shown below:



Press scroll key for at least 3 seconds. The display will blink a moment, otherwise the calibration fails.



Figure 6.1 RTD Calibration

UM25001E 101


- * Perform step 7 to calibrate mA function (if required) for input 1.

 Step 7. Change the DIP switch for mA input. Press scroll key until the display shows Send a 20 mA signal to terminals 9 and 10 in correct polarity. Press scroll key for at least 3 seconds. The display will blink a moment and a new value is obtained. Otherwise, if the display didn't blink or if the obtained value is equal to -199.9 or 199.9, then the calibration fails.

DIP Switch Position

mA input

- * Perform step 8 to calibrate **voltage** as well as CT function (if required) for input 2.
- Step 8. Press scroll key until the display shows Send a 10 V signal to terminals 10 and 11 in correct polarity. Press scroll key for at least 3 seconds. The display will blink a moment and a new value is obtained. Otherwise, if the display didn't blink or if the obtained value is equal to -199.9 or 199.9, then the calibration fails.
 - * Perform step 9 to calibrate **offset** of **cold junction** compensation, if required. The DIP switch is set for T/C input.
- Step 9. Setup the equipments according to the following diagram for calibrating the cold junction compensation. Note that a K type thermocouple must be used.

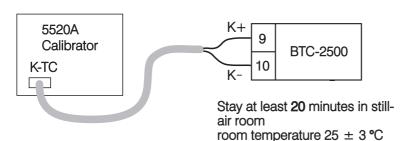

The 5520A calibrator is configured as K type thermocouple output with internal compensation. Send a 0.00 °C signal to the unit under calibration.

DIP Switch Position

TC input

Figure 6.2 Cold Junction Calibration Setup

The unit under calibration is powered in a still-air room with temperature 25 ± 3 °C. Stay at least 20 minutes for warming up. The DIP Switch is located at TC input .

Perform step 1 stated above, then press scroll key until the display shows [L.J.L.]. Apply up/down key until value 0.00 is obtained. Press scroll key at least 3 seconds. The display will blink a moment and a new value is obtained. Otherwise, if the display didn't blink or if the obtained value is equal to -5.00 or 40.00, then the calibration fails.

- * Perform step 10 to calibrate **gain** of **cold junction** compensation if required, otherwise, perform step 10N to use a nominal value for the cold junction gain if a **test chamber** for calibration is **not available**.
- Step 10. Setup the equipments same as step 9. The unit under calibration is powered in a still-air room with temperature 50 ± 3 °C. Stay at least 20 minutes for warming up . The calibrator source is set at 0.00 °C with internal compensation mode.

This setup is performed in a **high temperature chamber**, hence it is recommended to use a computer to perform the procedures.

Step 10N. Perform step 1 stated above, then press scroll key until the display shows (L.). Apply up/down key until value 0.1 is obtained. Press scroll key for at least 3 seconds. The display will blink a moment and the new value 0.0 is obtained. Otherwise, the calibration fails.

Caution: It is not recommended to use this step 10N, since the cold junction gain is not able to achieve rated accuracy by this step.

* Final step

Step 11. Set the DIP switch to your desired position (refer to section 1-3).

Automatic Calibration Procedures

The programming port (See Section 2-18) of BTC-2500 can be used for automatic calibration.

The equipments required for automatic calibration are available upon request.

Chapter 7 Error Codes & Troubleshooting



This procedure requires access to the circuitry of a live power unit. Dangerous accidental contact with line voltage is possible. Only qualified personnel are allowable to perform these procedures. Potentially lethal voltages are present.

Troubleshooting Procedures:

- (1) If an error message is displayed, refer to **Table 7.1** to see what cause it is and apply a corrective action to the failure unit.
- (2) Check each point listed below. Experience has proven that many control problems are caused by a defective instrument.
 - * Line wires are improperly connected
 - ⋆ No voltage between line terminals
 - * Incorrect voltage between line terminals
 - *Connections to terminals are open, missing or loose
 - *Thermocouple is open at tip
 - * Thermocouple lead is broken
 - * Shorted thermocouple leads
 - * Short across terminals
 - *Open or shorted heater circuit
 - ★ Open coil in external contactor
 - * Burned out line fuses
 - * Burned out relay inside control
 - ★ Defective solid-state relays
 - **★** Defective line switches
 - * Burned out contactor
 - * Defective circuit breakers
- (3) If the points listed on the above chart have been checked and the controller does not function properly, it is suggested that the instrument be returned to the factory for inspection. Do not attempt to make repairs without qualified engineer and proper technical information. It may create costly damage. Also, it is advisable to use adequate packing materials to prevent damage in transportation.
- (4) Dismantle the controller according to **Figure 7.1**. Refer to **Table 7.2** for some probable causes and actions.
 - 1 Press both sides of the latch located on rear terminal block. Hold tightly and remove the terminal block from the housing.
 - ② Expand the rear edge of the housing by using a tool. Pull out the PCB from the housing.

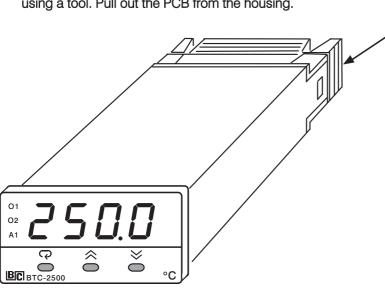


Figure 7.1

Dismantling the Controller

Table 7.1 Error Codes and Corrective Actions

Error Code	Display Symbol	Error Description	Corrective Action
1	E-01	Illegal setup values been used: PV1 is used for both PVMD and SPMD. It is meaningless for control.	Check and correct setup values of PVMD and SPMD. PV and SV can't use the same value for normal control
2	E-02	Illegal setup values been used: PV2 is used for both PVMD and SPMD. It is meaningless for control	Same as error code 1
3	Er03	Illegal setup values been used: P1-2 or P2-1 is used for PVMD while PV1 or PV2 is used for SPMD. Dependent values used for PV and SV will create incorrect result of control	Check and correct setup values of PVMD and SPMD. Difference of PV1 and PV2 can't be used for PV while PV1 or PV2 is used for SV
4	Er04	Illegal setup values been used: Before COOL is used for OUT2, DIRT (cooling action) has already been used for OUT1, or PID mode is not used for OUT1 (that is PB1 or PB2 = 0, and TI1 or TI2 = 0)	Check and correct setup values of OUT2, PB1, PB2, TI1, TI2 and OUT1. IF OUT2 is required for cooling control, the control should use PID mode (PB \neq 0, TI \neq 0) and OUT1 should use reverse mode (heating action), otherwise, don't use OUT2 for cooling control
5	Er05	Illegal setup values been used: unequal IN1U and IN2U or unequal DP1 and DP2 while P1-2 or P2-1 is used for PVMD or, PV1 or PV2 is used for SPMD or, P1.2.H, P1.2.L, D1.2.H or D1.2.L are used for A1FN or A2FN.	Check and correct setup values of IN1U, IN2U, DP1, DP2, PVMD, SPMD, A1FN or A2FN. Same unit and decimal point should be used if both PV1 and PV2 are used for PV, SV, alarm 1 or alarm 2.
6	E-08	Illegal setup values been used: OUT2 select =AL2 but A2FN select NONE	Check and correct setup values of OUT2 and A2FN. OUT2 will not perform alarm function if A2FN select NONE.
7	E-07	Illegal setup values been used: Dwell timer (TIMR) is selected for both A1FN and A2FN.	Check and correct setup values of A1FN and A2FN. Dwell timer can only be properly used for single alarm output.
10	Er 10	Communication error: bad function code	Correct the communication software to meet the protocol requirements.
11	Erii	Communication error: register address out of range	Don't issue an over-range register address to the slave.
12	Er 12	Communication error: access a non-existent parameter	Don't issue a non-existent parameter to the slave.
14	Er 14	Communication error: attempt to write a read-only data	Don't write a read-only data or a protected data to the slave.
15	Er 15	Communication error: write a value which is out of range to a register	Don't write an over-range data to the slave register.
26	At Er	Fail to perform auto-tuning function	1.The PID values obtained after auto-tuning procedure are out of range. Retry auto-tuning. 2.Don't change set point value during auto-tuning procedure.
20	,,,,,,,	Tanto portorni dato taning fanonon	Don't change Event input state during auto-tuning procedure.
			4.Use manual tuning instead of auto-tuning.
29	EEPE	EEPROM can't be written correctly	Return to factory for repair.
38	5 <i>62E</i>	Input 2 (IN2) sensor break, or input 2 current below 1 mA if 4-20 mA is selected, or input 2 voltage below 0.25V if 1 - 5V is selected	Replace input 2 sensor.
39	5 <i>6 1E</i>	Input 1 (IN1) sensor break, or input 1 current below 1 mA if 4-20 mA is selected, or input 1 voltage below 0.25V if 1 - 5V is selected	Replace input 1 sensor.
40	RdEr	A to D converter or related component(s) malfunction	Return to factory for repair.

Table 7.2 Common Failure Causes and Corrective Actions

Symptom	Probable Causes	Corrective Actions
1) Keypad no function	-Bad connection between PCB & keypads	- Clean contact area on PCB - Replace keypads
2) LED's will not light	- No power to instrument - Power supply defective	Check power line connections Replace power supply board
Some segments of the display or LED lamps not lit or lit erroneously.	- LED display or LED lamp defective - Related LED driver defective	- Replace LED display or LED lamp - Replace the related transistor or IC chip
4) Display Unstable	Analog portion or A-D converter defective Thermocouple, RTD or sensor defective Intermittent connection of sensor wiring	Replace related components or board Check thermocouple, RTD or sensor Check sensor wiring connections
5) Considerable error in temperature indication	Wrong sensor or thermocouple type, wrong input mode selected. Analog portion of A-D converter defective	Check sensor or thermocouple type and if proper input mode was selected Replace related components or board
Display goes in reverse direction (counts down scale as process warms)	- Reversed input wiring of sensor	- Check and correct
7) No heat or output	 No heater power (output), incorrect output device used Output device defective Open fuse outside of the instrument 	Check output wiring and output device Replace output device Replace output fuse
Heat or output stays on but indicator reads normal	- Output device shorted, or power service shorted	- Check and replace
9) Control abnormal or operation incorrect	- CPU or EEPROM (non-volatile memory) defective. Key switch defective - Incorrect setup values	- Check and replace - Read the setup procedure carefully
10) Display blinks; entered values change by themselves	- Electromagnetic interference (EMI), or Radio Frequency interference (RFI) - EEPROM defective	Suppress arcing contacts in system to eliminate high voltage spike sources. Separate sensor and controller wiring from " dirty " power lines, ground heaters Replace EEPROM

Chapter 8 Specifications

Power

90 – 264 VAC, 47 – 63 Hz, 15VA, 7W maximum 11 – 26 VAC / VDC, 15VA, 7W maximum

Input 1

Resolution: 18 bits

Sampling Rate: 5 times / second

Maximum Rating: -2 VDC minimum, 12 VDC maximum

(1 minute for mA input)

Temperature Effect : $\pm 1.5 \text{ uV/} ^{\circ}\text{C}$ for all inputs except

mA input

 \pm 3.0 uV/ °C for mA input

Sensor Lead Resistance Effect:

T/C: 0.2uV/ohm

3-wire RTD: 2.6 °C/ohm of resistance difference of two

leads

2-wire RTD: 2.6 °C/ohm of resistance sum of two leads

Burn-out Current: 200 nA

Common Mode Rejection Ratio (CMRR): 120dB Normal Mode Rejection Ratio (NMRR): 55dB

Sensor Break Detection:

Sensor open for TC, RTD and mV inputs, below 1 mA for 4-20 mA input, below 0.25V for 1 - 5 V input, unavailable for other inputs.

Sensor Break Responding Time:

Within 4 seconds for TC, RTD and mV inputs, 0.1 second for 4-20 mA and 1 - 5 V inputs.

Characteristics:

Туре	Range	Accuracy @ 25 °C	Input Impedance
J	-120°C-1000°C (-184°F-1832°F)	±2 ° C	2.2 ΜΩ
K	-200°C -1370°C (-328°F-2498°F)	±2 ° C	2.2 ΜΩ
Т	-250 °C -400 °C (-418 °F - 752 ° F)	±2 ° C	2.2 ΜΩ
Е	-100°C -900°C (-148°F -1652°F)	±2℃	2.2 ΜΩ
В	0°C-1820°C (-32°F-3308°F)	±2°C (200°C- 1820°C)	2.2 ΜΩ
R	0°C -1767.8°C (-32°F -3214°F)	±2℃	2.2 ΜΩ
S	0°C -1767.8°C (-32°F -3214°F)	±2 ° C	2.2 ΜΩ
N	-250°C -1300°C (-418°F -2372°F)	±2°C	2.2 ΜΩ
L	-200°C-900°C (-328°F-1652°F)	±2℃	2.2 ΜΩ
PT100 (DIN)	-210°C - 700°C (-346°F - 1292°F)	±0.4 °C	1.3 ΚΩ
PT100 (JIS)	-200°C-600°C (-328°F-1112°F)	±0.4 ℃	1.3 ΚΩ
mV	-8mV - 70mV	±0.05 %	2.2 ΜΩ
mA	-3mA-27mA	±0.05 %	70.5 Ω
V	-1.3V – 11.5V	±0.05 %	302 ΚΩ

Input 2

Resolution: 18 bits

Sampling Rate: 1.66 times / second

Maximum Rating: -2 VDC minimum, 12 VDC maximum

Temperature Effect: ±1.5 uV/°C

Common Mode Rejection Ratio (CMRR): 120dB Normal Mode Rejection Ratio (NMRR): 55dB

Sensor Break Detection:

below 0.25V for 1 - 5V input, unavailable for other inputs.

Sensor Break Responding Time: 0.5 second

Characteristics:

Type	Range	Accuracy @ 25 °C	Input Impedance
CT94-1	0-50.0 A	±2% of Reading ±0.2 A	265 ΚΩ
V	-1.3V-11.5V	±0.05 %	265 ΚΩ

Input 3 (Event Input)

Logic Low: -10V minimum, 0.28V maximum.

Logic High: Open or 0.32V minimum, 10V maximum External pull-down Resistance: 200 $K\Omega$ maximum External pull-up Resistance: not necessarv

Functions: Select second set point and/or PID, reset alarm 1 and/or alarm 2, disable output 1 and/or output 2.

remote lockout.

Output 1 / Output 2

Relay Rating: 2A/240 VAC, life cycles 200,000 for

resistive load

Pulsed Voltage: Source Voltage 5V,

current limiting resistance 66Ω .

Linear Output Characteristics

Туре	Zero Tolerance	Span Tolerance	Load Capacity
4-20 mA	3.8-4 mA	20-21 mA	500 Ω max.
0-20 mA	0 mA	20-21 mA	500 Ω max.
0-5 V	0 V	5 - 5.25 V	10 KΩ min.
1-5 V	0.95 –1 V	5 - 5.25 V	10 KΩ min.
0 –10 V	0 V	10 −10.5 V	10 KΩ min.

Linear Output

Resolution: 15 bits

Output Regulation: 0.01 % for full load change Output Settling Time: 0.1 sec. (stable to 99.9 %)

Isolation Breakdown Voltage : 1000 VAC Temperature Effect : ± 0.0025 % of SPAN / °C

Triac (SSR) Output

Rating: 1A/240 VAC

Inrush Current: 20A for 1 cycle Min. Load Current: 50 mA rms Max. Off-state Leakage: 3 mA rms Max. On-state Voltage: 1.5 V rms

Insulation Resistance: 1000 Mohms min. at 500 VDC

Dielectric Strength: 2500 VAC for 1 minute

DC Voltage Supply Characteristics (Installed at Output 2)

Туре	Tolerance	Max. Output Current	Ripple Voltage	Isolation Barrier
20 V	±0.5 V	25 mA	0.2 Vp-p	500 VAC
12 V	±0.3 V	40 mA	0.1 Vp-p	500 VAC
5 V	±0.15 V	80 mA	0.05 Vp-p	500 VAC

Alarm 1/ Alarm 2

Alarm 1:5V DC logic output, max. source current 100mA,

short circuit unprotected.

Alarm 2 Relay: Form A, Max. rating 2A/240VAC,

life cycles 200,000 for resistive load.

Alarm Functions: Dwell timer,

Deviation High / Low Alarm, Deviation Band High / Low Alarm,

PV1 High / Low Alarm, PV2 High / Low Alarm, PV1 or PV2 High / Low Alarm,

PV1-PV2 High / Low Alarm,

Loop Break Alarm, Sensor Break Alarm.

Alarm Mode: Normal, Latching, Hold, Latching / Hold.

Dwell Timer: 0 - 6553.5 minutes

Data Communication

Interface: RS-232 (1 unit), RS-485 (up to 247 units)

Protocol: Modbus Protocol RTU mode

Address: 1 - 247

Baud Rate : $0.3 \sim 38.4$ Kbits/sec

Data Bits: 7 or 8 bits

Parity Bit: None, Even or Odd

Stop Bit: 1 or 2 bits

Communication Buffer: 50 bytes

Analog Retransmission

Functions: PV1, PV2, PV1-PV2, PV2-PV1, Set Point,

MV1, MV2, PV-SV deviation value

Output Signal: 4-20 mA, 0-20 mA, 0 - 1V, 0 - 5V,

1 - 5V, 0 - 10V

Resolution: 15 bits

Accuracy: ± 0.05 % of span ± 0.0025 %/ °C

Load Resistance:

0 - 500 ohms (for current output)
10 K ohms minimum (for voltage output)

Output Regulation: 0.01 % for full load change Output Settling Time: 0.1 sec. (stable to 99.9 %) Isolation Breakdown Voltage: 1000 VAC min. Integral Linearity Error: ±0.005 % of span Temperature Effect: ±0.0025 % of span/°C

Saturation Low: 0 mA (or 0V)

Saturation High: 22.2 mA (or 5.55V, 11.1V min.) Linear Output Range: 0-22.2mA(0-20mA or 4-20mA)

> 0-5.55V (0 - 5V, 1 - 5V) 0 - 11.1 V (0 - 10V)

User Interface

Dual 4-digit LED Displays: Upper 0.4" (10 mm),

Lower 0.3 " (8 mm)

Keypad: 3 keys

Programming Port :For automatic setup, calibration

and testing

Communication Port : Connection to PC for

supervisory control

Control Mode

Output 1 : Reverse (heating) or direct (cooling)

action

Output 2: PID cooling control, cooling P band 1~

255% of PB

ON-OFF: 0.1 - 100.0 (°F) hysteresis control

(P band = 0)

P or PD: 0 - 100.0 % offset adjustment

PID: Fuzzy logic modified

Proportional band 0.1 ~ 900.0 °F. Integral time 0 - 1000 seconds

Derivative time 0 - 360.0 seconds

Cycle Time: 0.1 - 100.0 seconds

Manual Control: Heat (MV1) and Cool (MV2) Auto-tuning: Cold start and warm start

Self-tuning: Select None and YES

Failure Mode: Auto-transfer to manual mode while sensor break or A-D converter damage

Sleep Mode: Enable or Disable

Ramping Control: 0 - 900.0 °F/minute or

0 - 900.0 °F/hour ramp rate

Power Limit: 0 - 100 % output 1 and output 2 Pump / Pressure Control: Sophisticated functions

provided

Remote Set Point: Programmable range for voltage

or current input

Differential Control: Control PV1-PV2 at set point

Digital Filter

Function: First order

Time Constant: 0, 0.2, 0.5, 1, 2, 5, 10, 20, 30, 60

seconds programmable

108 UM25001D

Environmental & Physical

Operating Temperature : -10 $^{\circ}$ C to 50 $^{\circ}$ C Storage Temperature : -40 $^{\circ}$ C to 60 $^{\circ}$ C Humidity : 0 to 90 $^{\circ}$ RH (non-condensing)

Insulation Resistance : 20 Mohms min. (at 500 VDC) Dielectric Strength : 2000 VAC, 50/60 Hz for 1 minute Vibration Resistance : 10 - 55 Hz, 10 m/s² for 2 hours

Shock Resistance : 200 m/s² (20 g) Moldings : Flame retardant polycarbonate

Dimensions:50mm(W) X 26.5mm(H) X 110.5mm(D),

98.0 mm depth behind panel

Weight: 120 grams

Approval Standards

Safety: UL873 (11th edition, 1994) CSA C22.2 No. 24-93

EN61010-1 (IEC1010-1)

Protective Class:

NEMA 4X (IP65) front panel, indoor use,

IP 20 housing and terminals

EMC: EN61326

A-1 Menu Existence Coditions

Menu Existence Conditions Table

Menu	Parameter Notation	Existence Conditions		
	SP1	Exists unconditionally		
	TIME	Exists if A1FN selects TIMR or A2FN selects TIMR		
	A1SP	Exists if A1FN selects PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H or D12L		
	A1DV	Exists if A1FN selects DEHI, DELO, DBHI, or DBLO		
	A2SP	Exists if A2FN selects PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H or D12L		
	A2DV	Exists if A2FN selects DEHI, DELO, DBHI, or DBLO		
	RAMP	Exists if SPMD selects MINR or HRR		
	OFST	Exists if TI1 is used for control (depends on Event input and EIFN selection) but TI1= 0 and PB1 \neq 0 or if TI2 is used for control (depends on Event input and EIFN selection) but TI2= 0 and PB2 \neq 0		
	REFC	Exists if SPMD selects PUMP		
	SHIF	Exists unconditionally		
	PB1	Exists unconditionally		
User Menu	TI1	Exists if PB1≠ 0		
	TD1	Exists II 1 B17- 0		
	CPB, DB	Exists if OUT2 select COOL		
	SP2	Exists if EIFN selects SP2 or SPP2, or if SPMD selects PUMP		
	PB2	Exists if EIFN selects PID2 or SPP2		
	Tl2	Exists if EIFN selects PID2 or SPP2 provided that PB2≠ 0		
	TD2	Exists if Lift 4 selects 1 ib2 of of 12 provided that 1 b2 7 0		
	O1HY	If PID2 or SPP2 is selected for EIFN, then O1HY exists if PB1= 0 or PB2 = 0. If PID2 or SPP2 is not selected for EIFN, then O1HY exists if PB1= 0		
	A1HY	Exists if A1FN selects DEHI, DELO, PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H, or D12L		
	A2HY	Exists if A2FN selects DEHI, DELO, PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H, or D12L		
	PL1	If PID2 or SPP2 is selected for EIFN, then PL1 exists if PB1 \neq 0 or PB2 \neq 0. If PID2 or SPP2 is not selected for EIFN, then PL1 exists if PB1 \neq 0		
	PL2	Exists if OUT2 selects COOL		

Menu Existence Conditions Table (continued 2/3)

Menu	Parameter Notation	Existence Conditions		
	FUNC	Exists unconditionally		
	СОММ	Exists if FUNC selects FULL		
	PROT			
	ADDR			
	BAUD	Exists if COMM selects 485 or 232		
	DATA	EXISTS II COMMINI SCIECTS 400 OF 202		
	PARI			
	STOP			
	AOFN	Exists if COMM selects 4-20, 0-20, 0-1V, 0-5V, 1-5V, or 0-10		
	AOLO	Exists if COMM selects 4-20, 0-20, 0-1V, 0-5V, 1-5V, or 0-10 and AOFN is not MV1 and MV2		
	AOHI	Exists if Colvilvi selects 4-20, 0-20, 0-1v, 0-3v, 1-3v, of 0-10 and AOI iv is not liviv i and liviv2		
	IN1			
	IN1U	Exists unconditionally		
Setup	DP1			
Menu	IN1L	Exists if IN1selects 4-20, 0-20, 0-1V, 0-5V, 1-5V, or 0-10		
	IN1H	Exists if invisciosis 4 25, 5 25, 5 14, 5 54, 1 54, 51 5 15		
	IN2	Exists if FUNC selects FULL		
	IN2U			
	DP2	Exists if IN2 selects 4-20, 0-20, 0-1V, 0-5V, 1-5V, or 0-10		
	IN2L			
	IN2H			
	OUT1			
	O1TY			
	CYC1	Exists unconditionally		
	O1FT			
	OUT2			
	O2TY			
	CYC2	Exists if OUT2 selects COOL		
	O2FT			

Menu Existence Conditions Table (continued 3/3)

Menu	Parameter Notation	Existence Conditions		
	A1FN	Exists unconditionally		
	A1MD	Exists if A1FN selects DEHI, DELO, DBHI, DBLO, PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H, D12L, LB or SENB		
	A1FT	Exists if A1FN is not NONE		
	A2FN	Exists unconditionally		
	A2MD	Exists if A2FN selects DEHI, DELO, DBHI, DBLO, PV1H, PV1L, PV2H, PV2L, P12H, P12L, D12H, D12L, LB or SENB		
	A2FT	Exists if A2FN is not NONE		
	EIFN			
	PVMD	Exists if FUNC selects FULL		
Setup Menu	FILT			
	SELF	Exists unconditionally		
	SLEP	Exists if FUNC selects FULL		
	SPMD	Exists II 1 ONO scioots 1 OLE		
	SP1L	Exists unconditionally		
	SP1H	Exists unconditionally		
	SP2F	Exists if EIFN selects SP2 or SPP2, or if SPMD selects PUMP		
	SEL1			
	SEL2			
	SEL3	Exists unconditionally		
	SEL4			
	SEL5			

A-2 Factory Menu Description

Parameter Notation	Display Format	Parameter Description	Range				Default Value
EROR	Eror	Current Error Code	Low:	0	High:	40	_
PROG	ProG	Program Identification Code Contains Program Number and Version Number	Low:	0	High:	15.99	_
MODE	ñodE	Contains Lockout Status Code and Current System Mode	Low:	0	High:	3.5	_
CMND	[ñnd	Command Password	Low:	0	High:	65535	_
JOB	Job	Job Password	Low:	0	High:	65535	_
DRIF	d	Warm-up Drift Calibration Factor	Low:	-5.0°C	High:	5.0°C	_
AD0	A40	A to D Zero Calibration Coefficient	Low:	-360	High:	360	_
ADG	A90	A to D Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
V1G	7. Y.C	Voltage Input 1 Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
CJTL	C JE.L	Cold Junction Low Temperature Calibration Coefficient	Low:	-5.00 °C	High:	40.00 °C	_
CJG	C J.G	Cold Junction Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
REF1	rEF. I	Reference Voltage 1 Calibration Coefficient for RTD 1	Low:	-199.9	High:	199.9	_
SR1	5r. 1	Serial Resistance 1 Calibration Coefficient for RTD 1	Low:	-199.9	High:	199.9	_
MA1G	58 LG	mA Input 1 Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
V2G	2.5	Voltage Input 2 Gain Calibration Coefficient	Low:	-199.9	High:	199.9	_
SIG1 *	5, 6 1	Point 1 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND1 *	ınd l	Point 1 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG2 *	5, 62	Point 2 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND2 *	ınd2	Point 2 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG3 *	5, 63	Point 3 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND3 *	ınd3	Point 3 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG4 *	5, 64	Point 4 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND4 *	, nd4	Point 4 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG5 *	5, 65	Point 5 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND5 *	ınd5	Point 5 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG6 *	5, 66	Point 6 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND6 *	ınd6	Point 6 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG7 *	5, 67	Point 7 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND7 *	ınd7	Point 7 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG8 *	5, 68	Point 8 Signal Value of Special Sensor	Low:	-19999	High:	45536	_
IND8 *	ınd8	Point 8 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
SIG9 *	5, 69	Point 9 Signal Value of Special Sensor	Low:	-19999	High:	45536	-
IND9 *	ınd9	Point 9 Indication Value of Special Sensor	Low:	-19999	High:	45536	_
TYPE*	E YPE	Signal Type of Special Sensor	Low:	0	High:	3	_
DATE	dREE	Manufacturing Date of Product	Low:	0	High:	3719	_
NO	no	Serial Number of Product	Low:	1	High:		_

 $[\]ensuremath{^{\bigstar}}$ These parameters are available only if IN1 selects SPEC.

Parameter Notation	Display Format	Parameter Description	Range		Default Value		
HOUR	Hour	Working Hour Value		0	High:	65535 Hours	_
HRLO	Hr.L o	Fractional Hour Value	Low:	0	High:	0.9 Hour	_
ERR1	Errl	Historical Error Record 1	Low:	0	High:	FFFF	0
ERR2	Err2	Historical Error Record 2	Low:	0	High:	FFFF	0
DELI	dELi	ASCII Input Delimiter	Low:	0000	High:	007F	000A
BPL1	ЬPL. I	OUT1 Bumpless Transfer Value	Low:	0	High:	100.00 %	_
BPL2	6PL.2	OUT2 Bumpless Transfer Value	Low:	0	High:	100.00 %	_
CJCL	E JE.L	Sense Voltage of Cold Junction Calibration Low	Low:	31.680	High:	40.320 mV	_

A-3 Glossary

Abosolute zero: The lowest theoretical temperature. At absolute zero, a body would have no molecular motion of heat energy. Absolute zero is the zero point on the Rankine and Kelvin scale. (-273.15 °C or -459.67 °F)

AC: Alternating Current; an electric current that reverses direction at regularly occurring intervals.

Accuracy

Calibration accuracy: The potential error of a device compared to a physical constant or agency standard.

Control accuracy: Maintaining a process at the desired setting. The errors or combination of errors in the entire system including the sensor, control, power, load and design inefficiencies affect control accuracy.

Display accuracy: The amount of potential error between a measured value and the control's displayed value.

Set point accuracy: The potential error between a measured value and the control setting.

Alarm: A control condition or function, indicating that the process is a predetermined amount above or below the set point.

Alpha (α): The average percent change in resistance per degree of a pure metal resistance device between 0° and 100°C. Usually designated by the Greek letter alpha, α with units of ohm/ohm/°C. The common alpha for a platinum RTD is 0.00385 ohm/ohm/°C.

Ambient compensation: The design of an instrument such that changes in ambient temperature do not affect the readings of the instrument.

Ambient temperature: The average or mean temperature of the surrounding air which comes in contact with the equipment and instruments under test.

Ampere (amp): A unit used to define the rate of flow of electricity (current) in a circuit; units are one coulomb (6.25 x 10¹⁸ electrons) per second.

Analog indication: A meter with graduated scale and a pointer that moves to indicate process condition.

Analog output: A voltage or current signal that is a continuous function of the measure parameter.

Analog set point: Potentiometer adjustment of the control setting.

ANSI: American National Standards Institute

Anti-reset windup: This is a feature in a three-mode PID controller which prevents the integral (auto reset) circuit from functioning when the temperature is outside the proportional band.

ASME: American Society of Mechanical Engineers.

ASTM: American Society for Testing and Materials.

Automatic reset (Integral): The integral function of a control that automatically compensates for the difference between the set point and the actual process temperature. A signal moves the proportional band up or down to correct for the droop or offset error.

Automatic tuning (of control parameters): A control that calculates the optimum PID parameters with a built-in software algorithm to eliminate manual tuning efforts.

AWG: American Wire Gauge.

Bandwidth: A symmetrical region around the set point in which proportional control occurs.

Baud rate: In serial communications, the rate of information transfer in bits per second.

Blackbody: A theoretical object that radiates the maximum amount of energy at a given temperature, and absorbs all the energy incident upon it. A blackbody is not necessarily black. (The name blackbody was chosen because the color black is defined as the total absorption of light [energy].)

Boiling point: The temperature at which a substance in the liquid phase transforms to the gaseous phase; commonly refers to the boiling point of water which is 100 °C (212 °F) at sea level.

Btu: British Thermal Unit. The quantity of thermal energy required to raise one pound of water 1°F at or near its maximum density (39.1°F).

Bumpless transfer: The smooth, automatic transition from automatic control (closed loop) to manual control (open loop). The control output is maintained during the transfer.

Burst proportioning: A fast-cycling output form on a time proportioning controller (typically adjustable from .2 to 4 seconds) used in conjunction with a solid state relay to prolong the life of heaters by minimizing thermal stress.

Calender-van Dusen equation: An equation that defines the resistance-temperature value of any pure metal that takes the form of $R_T = R_O (1 + AT + BT^2)$ for values between the ice point (0°C) and the freezing point of antimony (630.7°C) and the form $R_T = R_O [1 + AT + BT^2 + C(T-100)T^2]$ between the oxygen point (-183.0°C) and the ice point (0°C).

Calibration: The process of adjusting an instrument so that the indication is accurate compared to the actual value.

Calorie: The quantity of thermal energy required to raise one gram of water 1°C at 15°C.

Cascade: Control in which the output of a secondary or inner control loop is the set point for a primary or outer loop. The primary loop, in turn, determines the control action.

- **CE:** A mark that designates compliance with European Union (EU) requirements for products sold in Europe.
- Celsius: (Centigrade) A temperature scale with 0 °C defined as the ice point and 100°C as the boiling point of water at sea level.
- **cfm:** The volumetric flow rate of a liquid or gas in cubic feet per minute.
- **Chatter:** The rapid cycling on and off of a relay in a control process due to insufficient bandwidth in the controller.
- Closed loop control: A control system in which process temperature changes are detected by a sensor. The feedback from the sensor allows the control make adjustments for accurate system regulation.
- Cold junction compensation: A temperature sensitive device that prevents changes in the ambient temperature from affecting the cold junction of a thermocouple.
- Common mode rejection ratio: The ability of an instrument to reject interference from a common voltage at the input terminals with relation to ground. Expressed in dB (decibels).
- **Control loop:** The basic control loop of any automatic control system consists of:
 - 1) variable (process)
 - 2) sensor
 - 3) error detector (of control)
 - 4) control
 - 5) final control element (relay, SSR, SCR)
 - 6) temperature indication
- Control mode: The method in which the control restores the system temperature to set point. On/Off, proportional, and PID are the most common control modes.
- CT: Current Transformer
- Current proportioning: A 4-20 milliamp (typical) current output which provides a current proportional to the amount of control required.
- Current transformer: A transformer, intended for measuring purposes, designed to generate a current at its secondary winding which is proportional to the current at the primary winding.
- **Cycle time:** The time usually expressed in seconds for a controller to complete one on/off cycle.
- **Data logging:** Recording a process variable over an extended period of time.
- **DC:** Direct Current; An electric current flowing in one direction and constant in value.

- Dead band: 1. For chart recorders: the minimum change of input signal required to cause a deflection in the pen position. 2. For temperature controllers: the temperature band where heat is turned off upon rising temperature and turned on upon falling temperature expressed in degrees. The area where no heating (or cooling) takes place.
- **Default parameters:** The parameters, or programmed instructions, permanently stored in microprocessor software to provide a data base.
- Derivative: (See Rate)
- **Deviation:** The difference between the value of the controlled variable and the value at which it is being controlled.
- Deviation alarm: An offset value that follows the set point. If the set point is 350°F and the Deviation alarm value is +20°F, the alarm value would be 350°F plus 20°F (or 370°F), See Process alarm.
- **Dielectric strength:** An amount of voltage that an insulating material can withstand before an electrical breakdown occurs.
- **Differential:** In an on/off control, the temperature difference expressed in degrees between where the control switches off and the control switches on.
- **Differential control:** A controller can control one process in relation to the difference of a second process.
- **DIN:** Deutsche Industrial Norms. A German agency that sets engineering and dimensional standards that now has worldwide recognition.
- **Drift:** A change in a value over a long period due to changes in factors such as ambient temperature, time or line voltage.
- **Droop:** In time proportioning controls, the difference in temperature between the set point and where the system temperature stabilizes. Corrected by automatic or manual reset.
- **Dual output:** The primary output will regulate the process temperature. A secondary output will be utilized for process cooling or as an alarm.
- **Duty cycle:** Percentage of "load ON time" relative to total cycle time.
- Efficiency: The amount of useful output versus energy input.
- **Electrical interference:** Electrical noise induced upon the signal wires that obscures the wanted information signal.

- Electromagnetic Compatibility (EMC): A system meets three requirements: 1. It does not cause interference with other systems, 2. It is not susceptible to emissions from other systems and 3. It does not cause interference with itself.
- Electromagnetic interference (EMI): An electrical and magnetic noise which can be generated when switching inductive devices, lightning, radio wave radiation, electrostatic discharge etc.
- **emf:** Electromotive force. A rise in (electrical) potential energy. The principal unit is the volt.
- Emissivity: The ratio of energy emitted by an object to the energy emitted by a blackbody at the same temperature. The emissivity of an object depends upon its material and surface texture; a polished metal surface can have an emissivity around 0.2, and a piece of wood can have an emissivity around 0.95.
- **Endothermic:** Absorbs heat. A process is said to be endothermic when it absorbs heat.
- **Error:** The difference between the correct or desired value and the actual reading or value taken.
- **Event input:** A programmable On/Off input used to signal peripheral equipment or a process.
- **Event output:** A programmable On/Off output used to signal peripheral equipment or a process.
- **Exothermic:** Gives off heat. A process is said to be exothermic when it releases heat.
- **Fahrenheit:** A temperature scale with 32°F defined as the ice point and 212°F as the boiling point of water at sea level.
- **Filter:** A low pass filter designed to minimize display fluctuations.
- Flow rate: speed or velocity of fluid movement.
- **FM:** Factory Mutual Research Corp. An organization which sets industrial safety standards.
- **FM-approved:** An instrument that meets a specific set of specifications established by Factory Mutual Research Corp.
- Form A: Single Pole Single Throw relay that only utilizes the N.O. and common contacts. These contacts close when the relay coil is energized. The contacts open when power is removed from the control.
- Form B: Single Pole Single Throw relay that only utilizes the N.C. and common contacts. These contacts will open when the relay coil is energized. The contacts will close when power is removed from the control.
- Form C: Single Pole Double Throw. Utilizes the N.O., N.C. and common contacts. The user has the option of wiring for a Form A or Form B contact. Refer to the Form A and Form B above for more information.

fpm: Flow velocity in feet per minute.

fps: Flow velocity in feet per second.

- **Freezing point:** The temperature at which the substance goes from the liquid phase to the solid phase.
- **Frequency:** The number or event occurrences or cycles over a specified period of time.
- Fuse: A device that interrupts power in a circuit when an overload occurs.
- Fuzzy logic: An artificial intelligence technique that allows control decisions to be made upon approximate or incomplete information. Fuzzy logic is a continuous decision making function that can prevent initial overshoot and set point differentials.
- **Gain:** The amount of amplification used in an electrical circuit.
- **GIGA:** The prefix for one billion (G).
- gph: The volumetric flow rate in gallons per hour.
- gpm: The volumetric flow rate in gallons per minute.
- **Ground:** 1. The electrical neutral line having the same potential as the surrounding earth. 2. The negative side of dc power supply. 3. Reference point for an electrical system.
- **Grounded junction:** A thermocouple junction in which the sheath and conductors are welded together forming a completely sealed integrated junction.
- **Heat:** Thermal energy expressed in Calories, Btu's or Joules.
- Heat of fusion: The amount of energy required to change one pound of a material from a solid to a liquid without an increase in temperature. Expressed in Btu/lb.
- Heat of vaporization: The amount of energy required to change one pound of a material from a liquid to a vapor without an increase in temperature. Expressed in Btu/lb.
- Heat sink: 1. Thermodynamic. A body which can absorb thermal energy. 2 Practical. A finned piece of metal used to dissipate the heat of solid state components mounted on it.
- Heat transfer: The process of thermal energy flowing from a body of high energy to a body of low energy. Means of transfer are: Conduction, the two bodies in contact; Convection, a form of conduction where the two bodies in contact are of different phases, i.e; solid and gas; Radiation, all bodies emit infrared radiation
- **Heat treating:** A process for treating metals where heating to a specific temperature and cooling at a specific rate changes the properties of the metal.
- **Hertz (Hz):** Unit in which frequency is expressed. Synonymous with cycles per second.

Hi-Pot test: To apply a high voltage to an electrical conductor to test the surrounding insulation.

Hysteresis: In ON/OFF control, the temperature change necessary to change the output from full ON to full OFF.

Hunting: Oscillation or fluctuation of process temperature between set point and process variable.

IAE: Integrated absolute error

Ice point: The temperature at which pure water freezes. 0°C, 32°F, 273.16K.

IE: Integrated error

Impedance: The total opposition in a circuit to the flow of electrical current. Measured in ohms and represented by "Z".

Infrared: Or radiation is the exchange of energy by electromagnetic waves. The infrared spectrum extends from the deep red end of the visible spectrum to the microwave region of the radio spectrum, the portion adjacent to the visible spectrum is of importance to heating. Radiant heat transfer can be very efficient in directing energy from the heat source to an object.

Integral: (See Automatic Reset).

Interchangeability error: A measurement error that can occur if two or more probes are used to make the same measurement. It is caused by a slight variation in characteristics of different probes.

Intrinsically safe: An instrument which will not produce any spark or thermal effects under normal or abnormal conditions that will ignite a specified gas mixture.

IPTS-68: International Practical Temperature Scale of 1968. Fixed points in thermometry set by the 1968 General Conference of Weights and Measures.

ISA: Instrument Society of America.

ISE: Integrated squared error Isolation: Electrical Separation

Isothermal: A process or area that maintains a constant temperature.

ITS-90: International Temperature Scale of 1990

Joule: The basic unit of thermal energy. 1 Joule equals 1 ampere passed through a resistance of 1 ohm for 1 second.

Junction: A thermocouple junction is the point at which two alloys are joined. A typical thermocouple circuit would have a measuring and a reference junction.

Kelvin: The unit of absolute or thermodynamic temperature scale. Zero Kelvin is absolute zero, where all molecular activity stops. No "∘" symbol is used. 0 °C= 273.15K; 100 °C =373.15K.

Kilo: The prefix for one thousand (K).

Kilowatt (kw): 1000 watts or 3412Btu per hour.

Lag: 1. A time delay between the output of a signal and the response of the instrument to which the signal is sent. 2. A time relationship between two waveforms where a fixed reference point on one wave occurs after the same point of the reference wave.

Least Significant Digit (LSD): The digit farthest to the right in a display.

Linearity: The deviation of an instrument's response from a straight line.

Load: The electrical demand of a process expressed as power (watts), current (amps) or resistance (ohms).

Manual reset: The adjustment on a proportional control which shifts the proportional band in relation to the set point to eliminate droop of offset errors.

Maximum operating temperature: The maximum temperature at which an instrument or sensor can be safely operated.

Maximum power rating: The maximum power in watts that a device can safely handle.

Measuring junction: The thermocouple junction referred to as the hot junction that is used to measure an unknown temperature.

Mechanical relay: An electromechanical device that completes or breaks a circuit by opening or closing electrical contacts.

Mega: The prefix for one million (M) (10⁶).

Melting point: The temperature at which a substance transforms from a solid phase to a liquid phase.

Mico: The prefix for one millionth (10⁻⁶).

Microamp: 10⁻⁶ amps (one millionth of an amp).

Micron: 10⁻⁶ meters (one millionth of a meter).

Microprocessor: The central processing unit (CPU) that performs the logic operations in a micro-computer system. The microprocessor in a process or instrument control decodes instructions from the stored program, performs algorithmic and logic functions, and produces signals and commands.

Milli: The prefix for one thousandth (10⁻³)

Milliamp: 10⁻³ amps (one thousandth of an amp).

Millivolt: 10⁻³ volts (one thousandth of a volt).

NEC: National Electrical Code

NEMA: National Electrical Manufacturer's Association

- **NEMA 4X:** A front panel rating designating the control as washdown capable and corrosion resistance.
- **NIST:** National Institute of Standards and Technology, United states Department of Commerce.
- Noise: Undesirable electrical interference on the signal wires
- Noise suppression: A device used to reduce electrical interference.
- Normal-mode rejection ratio: The ability of an instrument to reject interference usually of line frequency (50-60 Hz) across its input terminals.
- NPT: National Pipe Thread.
- **Offset:** The difference in temperature between the set point and the actual process temperature. Also, referred to as droop.
- ohm: The unit of electric resistance.
- **On/off controller:** A controller whose action is fully on or fully off.
- Open Loop Control: A control system with no sensing feedback.
- Overshoot: Excursion of temperature above the set point.
- Phase: A time-based relationship between a periodic function and a reference. In electricity, it is expressed in angular degrees to describe the voltage or current relationship of two alternating waveforms.
- Phase proportioning: A form of temperature control where the power supplied to the process is controlled by limiting the phase angle of the line voltage.
- PID: Three mode temperature control proportional, integral, (automatic reset), derivative(rate).
- **Polarity:** In electricity, the quality of having two oppositely charged poles, one positive and one negative.
- **Potentiometer:** 1. A variable resistor often used to control a circuit. 2. A balancing bridge used to measure voltage.
- Primary standard (NBS): The standard reference units and physical constants maintained by the National Bureau of Standards upon which all measurement units in the United States are based.
- Process alarm: A fixed alarm or secondary set point value independent of the primary set point. Should a process value exceed this value, an alarm condition would register.
- **Process variable:** The parameter being controlled or measured such as temperature, relative humidity, flow, level, pressure, etc.
- **Proportional band:** A temperature band in degrees within which a control's proportioning function is active.

- Proportional control mode: When process temperature approaches set point and enters the proportional band, the output is switched on and off at the established cycle time. The change in power to the load provides a throttling action which results in less temperature overshoot.
- Ramp: A programmed rise or fail in temperature at a constant rate.
- Range: An area between two limits in which a measurement or control action takes place. Typically expressed in upper and lower limits.
- Rankine (°R): An absolute temperature scale based upon the Fahrenheit scale with 180° between the ice point and boiling point of water. 459.69°R=0°F.
- Rate (derivative): A control function that measures the rate of increase or decrease of the system temperature and brings the control into an accelerated proportioning action. This mode prevents an overshoot condition at initial heat-up and with system disturbances.
- Rate time: The interval over which the system temperature is sampled for the derivative function.
- Reference junction: The cold junction in a thermocouple circuit which is held at a stable known temperature. The standard reference temperature is 0°C (32°F); however, other temperatures can be used.
- Relay (mechanical): An electromechanical device that completes or interrupts a circuit by physically moving electrical contacts into contact with each other.
- Relay (solid state): A solid state switching device which completes or interrupts a circuit electrically with no moving parts.
- **Repeatability:** The ability of a probe or instrument to give the same output or reading under repeated identical conditions.
- **Resistance:** The resistance to the flow of electric current measured in ohms (Ω) . For a conductor resistance is a function of diameter, resistivity (an intrinsic property of the material) and length.
- Resolution sensitivity: The amount of temperature change that must occur before the control actuates. It may be expressed in temperature or as a percentage of the control's scale.
- Response time (Time constant): The time required by a sensor to reach 63.2% of a step change in temperature under a specified set of conditions. Five time constants are required for the sensor to stabilize at 99.3 % of the step change value.
- **Retransmit output:** Analog output scaled to the process or the set point value.

- RFI: Radio frequency interference.
- RS232 or RS485 output signal: A serial interface suitable for connection between a digital control and a personal computer, a host computer or printer.
- RTD: A temperature sensing probe of finely wound platinum wire that displays a linear resistance change for a corresponding temperature change. The resistance increases as the temperature rises. A base resistance of 100 ohms at 32°F is the industry (DIN) standard.
- **Saturation temperature:** The boiling temperature of a liquid at the existing pressure.
- **SCFM:** Volumetric flow rate in cubic feet per minute at 60 °F (15°C) and standard atmospheric pressure.
- **SCR:** Silicone Controlled Rectifier
- **Secondary standard:** A standard of unit measurement derived from a primary standard.
- **Sensitivity:** The minimum change in input signal to which an instrument can respond.
- **Set point:** Control setting to achieve or maintain temperature.
- **Sheath thermocouple:** A thermocouple made out of mineral-insulated thermocouple cable which has an other metal sheath.
- **Shield:** Material surrounding a conductor(s) to prevent electrostatic or EMI from external sources.
- **Slide wire feedback:** A potentiometer that varies the resistance to control a valve position.
- **Soak:** To raise the temperature of a metal object in a heated environment to produce a metallurgical change.
- Soft start: Reduces voltage on initial start-up which reduces power to the heaters. If heater has accumulated moisture internally during a shut down, soft start will allow heater to dry before full voltage is applied so as to extend heater life.
- Solid State Relay (SSR): A solid state switching device which completes or breaks a circuit electrically with no moving parts.
- **Span:** The difference between the upper and lower limits of a range expressed in the same units as the range.
- **Specific gravity:** The ratio of mass of any material to the mass of the same volume of pure water at 4°C.
- Specific Heat: The ratio of thermal energy required to raise the temperature of a particle 1 degree to the thermal energy required to raise an equal mass of water 1 degree.
- **SSR:** Solid state relay (see relay, solid state).
- **Stability:** The ability of an instrument or sensor to maintain a constant output when a constant input is applied.

- Surge current: A current of short duration occurring when power is initially applied to capacitive or resistive loads, usually lasting no more than several cycles.
- **Temperature gradient:** The range of temperature variations at various physical locations throughout a thermal system.
- **Tera:** The prefix for one trillion (T).
- Thermal expansion: An increase in size due to an increase in temperature expressed in units of an increase in length or increase in size per degree, i.e., inches/inch/degree C.
- **Thermal lag:** The time delay in the distribution of heat throughout a thermal system.
- Thermal system: A regulated environment consisting of a heat source, heat transfer medium, sensing device and a process variable control instrument.
- Thermistor: A temperature sensing probe made of a mixture of metal oxides and encapsulated in epoxy or glass. A large change in resistance is exhibited proportional to a change in temperature. The resistance usually decreases as temperature rises.
- Thermocouple: A temperature sensing probe consisting of the junction of two dissimilar metals which has a millivolt output proportional to the difference in temperature between the "hot" junction and the lead wires (cold junction).
- Thermocouple break protection: Fail-safe operation that assures output shutdown upon an open thermocouple condition.
- Thermowell: A closed-end tube designed to protect temperature sensors from harsh environments, high pressure, and flows. They can be installed into a system by pipe thread or welded flange and are usually made of corrosion-resistant metal or ceramic material depending upon the application.
- **Transducer:** A device which converts the parameter being measured into another form which is its output. For example, a thermocouple transforms heat into a millivolt output.
- **Transmitter (two-wire):** A device which is used to transmit temperature data from either a thermocouple or RTD via a two-wire current loop. The loop has an external power supply and the transmitter acts as a variable resistor with respect to its input signal.
- **Triac:** A solid state switching device used to switch alternating current wave forms.
- **Triple point (water):** The thermodynamic state where all three phases, solid, liquid, and gas may all be present in equilibrium. The triple point of water is at .01°C.

- TTL: Transistor-to-transistor logic. A form of solid state logic which uses only transistors to form the logic gates.
- **UL:** Underwriters Laboratories, Inc. An independent laboratory that establishes standards for commercial and industrial products.
- **Ultraviolet:** That portion of the electromagnetic spectrum below blue light (380 nanometers).
- **Undershoot:** Excursion of temperature below set point.
- **Ungrounded junction:** A thermocouple junction fully insulated from the sheath.
- Viscosity: The inherent resistance of a substance to flow
- Volt: The (electrical) potential difference between two points in a circuit. The fundamental unit is derived as work per unit charge (V=W/Q). One volt is the potential difference required to move one coulomb of charge between two points in a circuit while using one joule of energy.
- **Voltage**: An electrical potential which is measured in volts.
- **VPFW SSR:** A type of Solid State Relay with Variable Period and Full Wave switching characteristics.
- **Wattage:** A measurement of electrical power. In a resistive circuit, VI=W (See Ohms Law formulas).
- Working standard: A standard of unit measurement calibrated from either a primary or secondary standard which is used to calibrate other devices or make comparison measurements.
- Zero voltage switching: The making or breaking of circuit timed such that the transition occurs when the voltage waveform crosses zero voltage; typically it is only found in solid state switching devices.

A-4 Index

A1DV: 11, 13, 18, 47, 48, 50, 51, 53 54, 110

A1FN: 11, 16, 17, 20, 42, 43, 47, 48, 49, 50, 51, 52, 53, 54, 56, 70, 71, 72, 83, 86, 90, 91, 94, 95, 105

A1FT: 11, 17, 56, 86

A1HY: 11, 13, 47, 48, 49, 50, 51, 52, 53, 54, 94

A1MD: 11, 16, 17, 47, 48, 49, 50, 51, 52, 53, 54, 70, 94

A1SP: 11, 13, 18, 20, 47, 48, 49, 50, 51, 52, 53, 54, 70, 83, 94

A2DV: 11, 13, 18, 45, 48, 50, 51, 53 54

A2FN: 11, 17, 20, 42, 43, 45, 47, 48, 50, 51, 52, 53, 54, 56, 71, 72, 105

A2FT: 11, 17, 56

A2MD: 11, 17, 45, 47, 48, 50, 51, 52, 53, 54

A2SP: 11, 13, 18, 20, 45, 48, 50, 51, 52, 53, 54

AD0: 11, 18

Adaptive: 5

ADDR: 11,14, 40, 76, 97, 98, 105

ADG: 11,18

Alarm 1: 7, 9, 13, 16, 17, 34, 40, 47 48, 49, 50, 51, 52, 53, 56, 68, 70, 71, 91, 94, 105, 107

Alarm 2: 7, 9, 13, 16, 17, 35, 40, 47, 48, 49, 50, 51, 52, 53, 54, 56, 68, 71, 72, 105, 107, 108

AOFN: 11, 14, 40, 77, 99

AOHI: 11, 14, 40, 77, 92, 99

AOLO: 11, 14, 40, 77, 92, 99

Auto-tune: 4, 9, 40

Auto-tuning: 11, 12, 43, 45, 46, 58 59, 60, 61, 68, 70, 81, 86, 89, 91, 94, 97, 98, 105, 108

Automatic calibration: 100, 103

Automatic programming: 4, 8

Baud: 14, 76, 108

BAUD: 11, 14, 40, 76, 97, 98

BC-Net: 7, 96, 97, 98, 100

Bumpless transfer: 4, 40, 43, 56, 57, 65

Calibration mode: 8, 12, 56, 57, 100, 101

Chamber: 90, 91, 100, 103

CJCT: 11, 19, 66

CJG: 11,19

CJTL: 11, 18

Colour codes: 25

COMM: 5, 11, 13, 14, 40, 76, 77, 83 92, 97, 98, 99

Communication: 4, 5, 7, 13, 37, 40, 76, 98, 105, 108

Contactor: 28, 30, 32, 34, 35, 84, 87 104

Control: 4, 5, 6, 7, 8, 9, 11, 12, 13, 15, 16, 18, 21, 22, 23, 24, 25, 39, 40, 41, 42, 43, 44, 45, 53, 55, 56, 57, 58, 59, 60, 61, 62, 65, 66, 67, 68, 69, 70, 72, 73, 74, 75, 77, 78, 80, 81, 82, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 96, 97, 98, 99, 100, 101, 102, 104, 105, 106, 108

Cooling control: 16, 105, 108

CPB: 11, 13, 18, 37, 42, 45, 46, 75, 89, 90

DB: 11, 13, 42, 45, 46, 51, 76, 89, 107, 108, 110

Critical steady state: 62

CT: 4, 20, 22, 28, 40, 52, 67, 102

Current transformer: 7, 15, 28, 52, 67

CYC1: 11, 16, 43, 45, 52, 67, 85, 86, 89

CYC2: 11, 16, 45, 67, 85

DATA:11, 14, 40, 76, 97, 98

DC power supply: 4, 16, 40, 64

Dead band: 13, 43, 44, 46

Default: 8, 9, 11, 12, 13, 14, 15, 16, 17, 18, 19, 40, 58, 59, 67, 78, 79

Deviation alarm: 45, 50

Deviation band alarm: 51

Differential control: 4, 74, 93, 108

Digital filter: 4, 40, 78, 108

Display mode: 9, 11, 12, 40, 66, 74

93

DP1: 11, 15, 40, 41, 71, 72, 73, 74, 77 83, 86, 87, 89, 90, 93, 99, 105

DV: 11, 13, 18, 19, 42, 45, 47, 48, 50, 51, 53, 54, 66

Dwell timer: 4, 16, 40, 43, 47, 56, 71, 72, 86, 91, 105, 108

EIFN: 11, 17, 18, 29, 37, 40, 48, 68, 69, 70, 76, 80, 81, 83, 90, 91, 94, 95

Error code: 47, 48, 50, 51, 72, 73, 74 104, 105

Event input: 4, 7, 12, 17, 29, 37, 40, 48, 58, 60, 65, 68, 69, 70, 72, 76, 90, 94, 105, 107

Exception mode: 12

Failure mode: 12, 54, 56, 57, 58, 65, 108

Failure transfer: 16, 17, 40, 56, 75, 101

FILT: 11, 17, 40, 78, 80, 81, 83, 108 Linear current: 15, 26, 27, 31, 33, 41 OUT2: 11, 16, 22, 41, 45, 48, 50, 51, 53, 54, 56, 57, 64, 65, 75, Flow: 4, 11, 61, 62 Linear DC input wiring: 26 82, 83, 85, 88, 89, 90, 105 Freezer: 54, 88, 90 Linear output: 43, 45, 52, 67, 107, 108 Output 1: 7, 9, 13, 14, 15, 16, 17, 19, 30, 40, 41, 43, 45, 56, 57, 65, 66, 67, 68, 75, 82, 85, 87, 101, FUNC: 9, 11, 13, 40, 73, 74, 76, 77, Linear voltage: 15, 26, 27, 31, 33, 41 79, 80, 83, 86, 87, 89, 92, 93, 94, 107, 108 95, 97, 98, 99 Lockout: 4, 8, 40, 81, 101, 107 Output 2: 7, 9, 13, 14, 16, 17, 19, 32, Loop break: 4, 16, 40, 53, 56, 58, 108 Furnace: 52, 94, 95 40, 41, 45, 50, 56, 57, 64, 65, 66, 67, 68, 75, 82, 85, 101, 107, 108 Fuzzy logic: 4, 5, 108 Loop break alarm: 4, 16, 40, 53, 108 Oven: 5, 69, 86, 91, 92, 104 Fuzzy + PID: 4 MA1G: 11, 19 Parameter description: 3, 13, 14, 15, Heat-cool control: 40, 45, 88 MA2G: 11, 19 16, 17, 18, 19 Heater break: 4, 7, 40, 52 Manual control (hand control mode): PARI: 5, 11, 14, 40, 76, 85, 97, 98, 9, 40, 57, 58, 65, 75, 97, 98, 108 Heater current: 28, 52, 67 Manual tuning: 43, 45, 60, 61, 105 PB: 11, 19, 46, 58, 60, 62, 66, 105, Humidity: 99, 109 Menu overview: 11 Idle state: 80 PB1: 11, 13, 17, 18, 42, 43, 45, 46, 56, Mini jumper and DIP switch: 8 58, 59, 61, 62, 65, 68, 70, 75, 81, IN1: 11, 14, 15, 16, 18, 19, 20, 40, 83, 87, 94, 95, 105 41, 54, 71, 72, 73, 74, 77, 82, Mold: 88, 95 83, 86, 87, 88, 89, 93, 99, 105 PB2: 11, 13, 17, 18, 40, 42, 46, 58, Mounting: 21 59, 62, 65, 68, 70, 94, 95, 105 IN1H: 11, 15, 41, 54, 73, 74, 83, 93 MV1: 19, 53, 56, 57, 65, 66, 68, 75, P(or PD) control: 4, 12, 13, 18, 40, IN1L: 11, 15, 41, 54, 73, 74, 83, 93 77, 108 43, 57, 65, 80, 81 IN1U: 11, 15, 40, 41, 71, 72, 73, 74, MV2: 19, 56, 57, 65, 66, 68, 75, 77, PID adjustment: 62, 63 77, 83, 86, 87, 89, 90, 93, 99, 105 108 PID control: 5, 6, 40, 43, 44, 45, 58, IN2: 11, 14, 15, 16, 18, 19, 20, 40, O1FT: 11, 16, 56, 57, 83, 86, 89 59, 60, 68, 91 52, 67, 73, 74, 77, 83, 92, 93, 105 O1HY: 11, 13, 43, 44, 45, 87 PL1: 11, 13, 40, 43, 75, 83, 94, 95 IN2H: 11, 15, 40, 73, 74, 92, 93 PL2: 11, 13, 40, 75 O1TY: 11, 15, 16, 41, 43, 45, 67, 83, IN2L: 11, 15, 40, 73, 74, 92, 93 85, 86, 87, 89, 93 Power wiring: 23 IN2U: 11, 15, 40, 73, 74, 77, 93, 105 O2FT: 11, 16, 56, 57, 89 Pressure: 4, 41, 69, 80, 81, 82, 108 Input 1: 3, 7, 8, 18, 19, 26, 27, 40, 41 O2TY: 11, 16, 41, 45, 67, 85, 89 56, 66, 73, 74, 77, 101, 102, 105, Process alarm: 45, 48, 49 107 OFST: 11, 13, 18, 42, 43, 45 Programming port: 5, 8, 39, 103, On-off control: 13, 43, 44, 45, 56, 108 Input 2: 7, 19, 26, 27, 40, 52, 56, 66, 67, 73, 74, 77, 92, 102, 105, 107 58, 59, 60, 65, 75, 87 PROT: 4, 11, 13, 40, 76, 97, 98 Installation: 21, 23, 24, 98 Ordering code: 7, 64, 77 Pulsed voltage: 7, 30, 32, 41, 84, 85 Inverter: 38, 82, 90, 91 OUT1: 11, 15, 22, 41, 43, 44, 45, 107 65, 75, 82, 83, 85, 86, 87, 88, Keys and displays: 9 89, 90, 92, 93, 105 Pump/pressure control: 4, 18, 40, 80, 81, 82, 108 Level: 4, 12, 13, 40, 48, 50, 51, 52,

68, 84, 93

PVHI: 9, 11, 19, 66	Second PID: 40, 68, 69, 70, 94, 95	SP2: 11, 13, 17, 18, 20, 40, 42, 48, 68, 69, 72, 74, 80, 81, 83, 90, 91,	
PV1: 11, 13, 17, 19, 20, 40, 41, 45, 48, 49, 55, 56, 66, 70, 73, 74, 77,	Second set point: 69, 107	95	
78, 80, 83, 92, 93, 94, 95, 99, 105,	SEL1: 4, 8, 11, 18, 42	SP2F: 11,18, 40, 69, 80, 83	
108	SEL2: 8, 11, 18, 42	SPMD: 11, 18, 40, 56, 68, 69, 71, 72,	
PV1 shift: 13, 40, 55	SEL3: 11, 18, 42	73, 74, 80, 83, 90, 91, 92, 93, 94, 95, 105	
PV2: 11, 17, 19, 20, 48, 52, 56, 66, 67, 73, 74, 77, 92, 93, 105, 108	SEL4: 11, 18, 42	SR1: 11, 19, 102	
PVLO: 9, 11, 19, 66	SEL5: 4, 8, 11, 18, 42	SSR: 4, 7, 30, 31, 32, 33, 40, 41	
PVMD: 11, 17, 20, 40, 56, 73, 74, 80 83, 92, 93, 94, 95, 105	SELF: 11, 17, 43, 45, 58, 80, 83, 86, 89	43, 45, 67, 84, 85, 108 SSRD: 40, 41, 43, 45, 67, 85	
PVR: 11, 19, 66	Self-tune: 4, 40, 58	STOP: 11, 14, 40, 76, 97, 98	
PVRH: 11, 19, 66	Self-tuning: 43, 45, 46, 58, 61, 68	System modes: 12	
PVRL: 11, 19, 66	108	TD: 11, 19, 37, 63, 66	
RAMP: 11, 13, 18, 40, 42, 71, 72, 90, 91, 94, 95	Sensor installation guidelines: 24 Sensor break: 4, 16, 40, 54, 56, 57,	TD1: 11, 13, 17, 18, 42, 43, 45, 58, 59, 61, 62, 68, 70, 81, 83, 94, 95	
Ramp: 4, 13, 18, 40, 42, 58, 59, 69, 71, 72, 90, 91, 94, 95, 97, 98, 108	58, 105, 107, 108 Sensor break alarm: 4, 40, 54, 57,	TD2: 11, 13, 17, 18, 40, 42, 58, 59, 62, 68, 70, 94, 95	
Ramp & Dwell: 71, 72, 90	108	Thermocouple input wiring: 25	
Rearrange user menu: 42	Setup menu: 4, 8, 11, 12, 48, 54, 58, 68, 69, 73, 74, 76, 77, 78, 79, 80, 83, 86, 89, 92, 93, 94, 95, 97, 98, 99	TI: 11, 19, 58, 60, 63, 66, 105	
Recorder: 5, 38, 99	SHIF: 11, 13, 18, 42, 55	TI1: 11, 13, 17, 18, 42, 43, 45, 53, 59, 61, 62, 68, 70, 81, 83, 94, 95, 105	
REF1: 11, 19, 102	Sleep mode: 4, 9, 12, 17, 40, 58,	TI2: 11, 13, 17, 18, 40, 42, 58, 59, 62,	
REFC: 11, 13, 18, 42, 80, 81, 83	79, 108	68, 70, 94, 95, 105	
Refrigerator: 87	SLEP: 9, 11, 17, 40, 79, 83	TIME: 11, 13, 18, 42, 43, 47, 53, 54, 71 72, 86, 90, 91, 95	
Relay: 4, 7, 15, 30, 32, 34, 35, 40, 41 43, 45, 47, 68, 69, 70, 84, 90, 91	Smart network adaptor: 7, 96	Triac: 4, 7, 30, 31, 32, 33, 108	
104, 107, 108	SNA10A: 7, 36, 76	User menu: 4, 8, 9, 11, 12, 42, 48,	
Reload default value: 40, 67	SNA10B: 7, 36, 76, 96, 97, 100	71, 75, 80, 83, 87, 94, 95	
Remote lockout: 4, 40, 81,107	Soft-start: 4	Ultimate p band: 62	
Remote set point: 4, 40, 58, 59, 73, 92, 108	SP1: 8, 13, 17, 18, 40, 43, 44, 45, 47 48, 49, 50, 51, 54, 68, 69, 71, 72,	Ultimate period: 62	
Retransmission: 4, 5, 7, 13, 38, 40, 77	74, 75, 80, 86, 89, 90, 91, 92, 93, 94, 95, 99	Unpacking: 21	
92, 99, 108	SP1H: 11, 13, 18, 54, 83, 87, 99	V1G: 11, 18	
RS-232: 4, 5, 7, 13, 36, 37, 69, 76, 96, 98, 108	SP1L: 11, 13, 18, 54, 83, 87, 99	V2G: 11, 19	
RS-485: 4, 5, 7, 13, 36, 76, 77, 96,	SP1 range: 40, 54	Valve control: 93	
108		VPFW SSR: 84, 85	
RTD input wiring: 26		Water tank: 93	

UM25001D

124

A-5 Memo

Use the following Table as a master copy for your settings.

Contained in	Parameter Notation	Display Format	Your setting
	SP1		
	TIME	E, āE	
	A1SP	A !SP	
	A1DV	8 197	
	A2SP	R2.5P	
	A2DV	A2.44	
	RAMP	rAiP	
	OFST	oF5L	
	REFC	r EF [
	SHIF	5H, F	
	PB1	Pb I	
User	TI1	E, 1	
Menu	TD1	<i>Ed 1</i>	
	СРВ	С.РЬ	
	DB	dЬ	
	SP2	52	
	PB2	P62	
	TI2	E, 2	
	TD2	F d 2	
	O1HY	o !XY	
	A1HY	A IHY	
	A2HY	ASHY	
	PL1	PL I	
	PL2	PL2	
Setup Menu	FUNC	FunE	

Contained in	Parameter Notation	Display Format	Your setting
111	COMM		
	PROT	ProE	
	ADDR	Addr	
	BAUD	68ud	
	DATA	dALA	
	PARI	PAr,	
	STOP	StoP	
	AOFN	RoFn	
	AOLO	RoLo	
	AOHI	A o. H i	
	IN1	, n 1	
Setup Menu	IN1U	י ה וָט	
mona	DP1	dP I	
	IN1L	, n 1 <u>!</u> L	
	IN1H	ın IH	
	IN2	י טק	
	IN2U	. cg.n	
	DP2	dP2	
	IN2L	, n2.L	
	IN2H	, n2.H	
	OUT1	out 1	
	O1TY	o 1.E.Y	
	CYC1	[7]	
	O1FT	o IFE	

Contained in	Parameter Notation	Display Format	Your setting
	OUT2	onF2	
	O2TY	o 2.E Y	
	CYC2	[7[2	
	O2FT	o 2.F Ł	
	A1FN	A LFn	
	A1MD	A Lind	
	A1FT	A IFE	
	A2FN	A2.Fn	
	A2MD	A2.5d	
	A2FT	A2.FE	
	EIFN	Er.Fn	
Setup Menu	PVMD	Pund	
IVICITU	FILT	F, LE	
	SELF	SELF	
	SLEP	SLEP	
	SPMD	5P.nd	
	SP1L	5P !L	
	SP1H	SP I.H	
	SP2F	SP2F	
	DISF	di SF	
	SEL1	SEL I	
	SEL2	SEL2	
	SEL3	SEL 3	
	SEL4	SELY	
	SEL5	SEL S	

Contained in	Parameter Notation	Display Format	Your setting
	AD0	Ad0	
	ADG	AGE	
	V1G	7 1.C	
Calibra-	CJTL	[JE.L	
tion Mode	CJG	[].[
Menu	REF1	rEF. 1	
	SR1	5r. 1	
	MA1G	ā8 !5	
	V2G	550	
	MA2G	ā82.5	
	PVHI	P Ľ.H.	
	PVLO	PLLo	
	MV1	H	
	MV2	[
	DV	97	
Display	PV1	P . !	
Mode	PV2	<i>₽₽₽</i>	
Menu	PB	РЬ	
	TI	Ŀ،	
	TD	Ed	
	CJCT		
	PVR	₽ <u>-</u> r-	
	PVRH	PYr.H	
	PVRL	Purl	

A-6 Warranty

WARRANTY

Brainchild Electronic Co. is pleased to offer suggestions on the use of its various products. However, Brainchild makes no warranties or representations of any sort regarding the fitness for use, or the application of its products by the Purchaser. The selection, application or use of Brainchild products is the Purchaser's responsibility. No claims will be allowed for any damages or losses, whether direct, indirect, incidental, special or consequential. Specifications are subject to change without notice. In addition, Brainchild reserves the right to make changes—without notification to Purchaser—to materials or processing that do not affect compliance with any applicable specification. Brainchild products are warranted to be free from defects in material and workmanship for two years after delivery to the first purchaser for use. An extended period is available with extra cost upon request. Brainchild's sole responsibility under this warranty, at Brainchild's option, is limited to replacement or repair, free of charge, or refund of purchase price within the warranty period specified. This warranty does not apply to damage resulting from transportation, alteration, misuse or abuse.

RETURNS

No products return can be accepted without a completed Return Material Authorization (RMA) form.

